




INSTALLATION INSTRUCTION FOR PART
#68572, 68574


1. Remove valve cover.
2. Install dzus springs with pop rivets into mounting brackets as shown in figure 1.

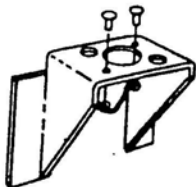

3. Install heat shield onto mounting brackets.
4. Line up heat shield with top outside edge of valve cover and mark mounting tabs position.
5. Mounting tabs can be either welded or attached with screws, rivets, etc. If holes are drilled, be sure to apply silicone so as to prevent leaks.
6. Clean and install valve covers.
7. Clearances have been made in the heat shield for plug wires to fit through wing nut holes. Some modifications may be necessary to the outer edges of the shield to fit your application.

PARTS LIST

16 each	1/8" x 1/8" Steel Pop Rivet BH
2 each	Heat Shield Clear Anodized
4 each	Mount, Valve Cover
4 each	Ejecting Fastener .500
4 each	Springs (Z & Y)

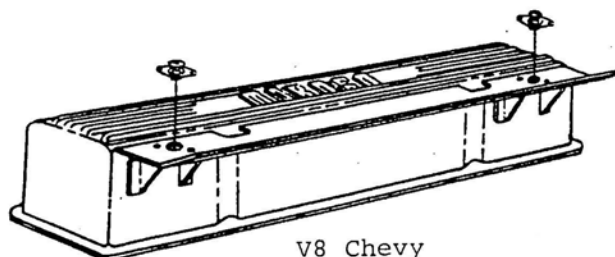

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am – 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437-2116
Phone: (203) 453-6571 • Fax: (203) 453-6906