





INSTALLATION INSTRUCTIONS P/N 72190 SUPER MAX WIRE LOOM KIT

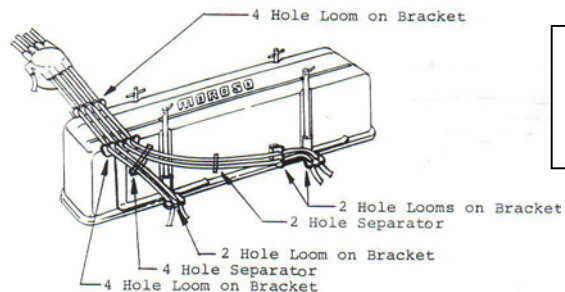

1. Install brackets as shown.
2. Use valve cover wing nuts and the included bolts to hold brackets in place.

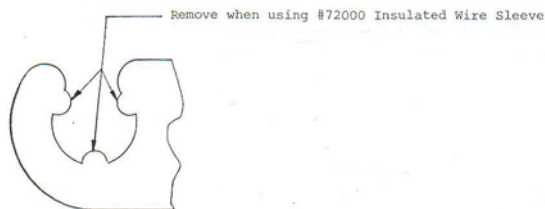

Use Silicone Spray Lube on plug wires to prevent cutting wires when installing into loom.

REMOVAL OF THE INTERNAL NUBS OR BUMPS WILL ALLOW USE OF MOROSO P/N 72000 INSULATED SPARK PLUG WIRE SLEEVE. SEE DIAGRAM ABOVE.

NOTE: ROUTE WIRES IN SUCH A WAY AS TO ELIMINATE CONTACT WITH HEADER TUBES WHICH COULD RESULT IN MELTED WIRE INSULATION AND GROUNDED WIRES.

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am - 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906


Rev.B
032311

Visit Us At www.moroso.com


72190INST



INSTALLATION INSTRUCTIONS P/N 72190 SUPER MAX WIRE LOOM KIT

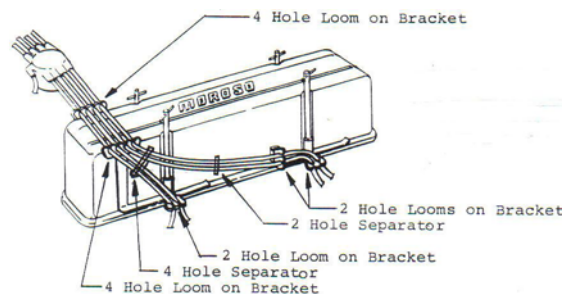

1. Install brackets as shown.
2. Use valve cover wing nuts and the included bolts to hold brackets in place.

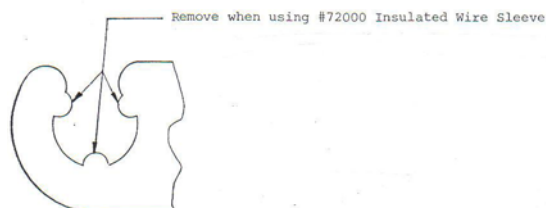

Use Silicone Spray Lube on plug wires to prevent cutting wires when installing into loom.

REMOVAL OF THE INTERNAL NUBS OR BUMPS WILL ALLOW USE OF MOROSO P/N 72000 INSULATED SPARK PLUG WIRE SLEEVE. SEE DIAGRAM ABOVE.

NOTE: ROUTE WIRES IN SUCH A WAY AS TO ELIMINATE CONTACT WITH HEADER TUBES WHICH COULD RESULT IN MELTED WIRE INSULATION AND GROUNDED WIRES.

**For Technical Assistance, Call Moroso's Tech Line at
(203) 458-0542, 458-0546 8:30am - 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC
80 CARTER DR • GUILFORD, CT 06437
Phone: (203) 453-6571 • Fax: (203) 453-6906

Rev. B
032311

Visit Us At www.moroso.com

72190INST