


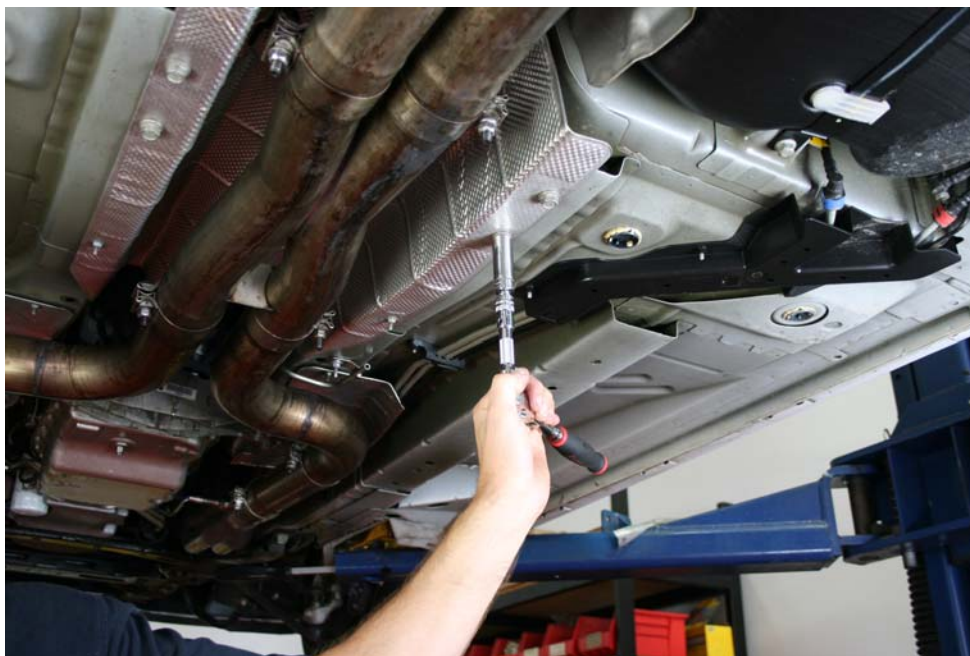

Step 1: Remove tunnel mount bolts and stock brace if equipped.



Step 2; Install floor pan brace using stock hardware.
Installation complete

**For Technical Assistance, call Moroso's Tech Line
(203)-458-0542, 8:30am-5:00pm Eastern Time
MOROSO PERFORMANCE PRODUCTS, INC.**

**80 CARTER DRIVE
GUILFORD, CT 06437
www.moroso.com**

Rev A
91511

78000_INST
C3065_INST