



**MOROSO P/N 85450 REAR END REMOTE FILLER/BREATHER**  
**MOROSO P/N 85460 REAR FILLER BREATHER/CAGE MOUNT**

The Moroso Rear End Remote Filler/Breather provides remote filling capabilities and breathing capacity non-existent in most rear end housings today.


It can be mounted either to existing sheet metal or to the roll cage using the two 5/16" holes provided in the hold down bracket on #85450, or with two appropriately size hose clamps for the #85460.

The filler should be mounted vertically in the car with its outlet located higher than the inlet of the rear housing.

Be sure that no portion of the connecting hose is below the inlet of the rear as this would trap a pool of oil in the hose and not allow the rear to breath properly. The hose should run downhill toward the rear all the way.

A second hose is required to vent the rear end allowing quicker filling with fluid. This hose should run from the 3/8" NPT fitting at the top of the canister to a point higher than the filled level of the fluid.

Also, be sure to use enough hose to allow complete up and down and sideways movement of the rear end.

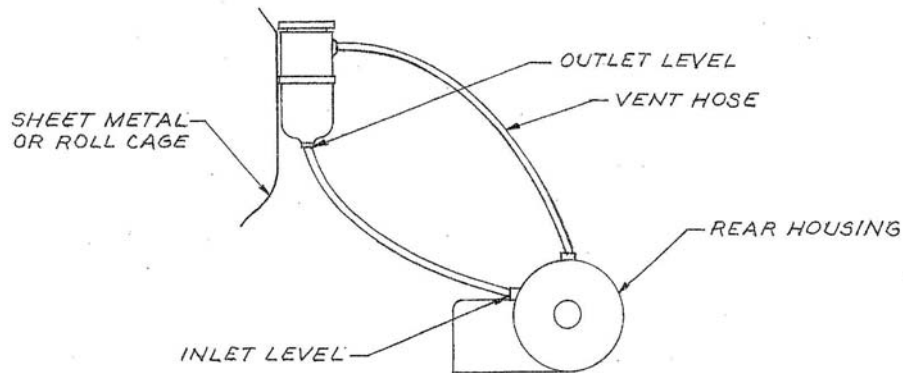

**For Technical Assistance, Call Moroso's Tech Line at  
(203) 458-0542, 458-0546 8:30am - 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC  
80 CARTER DR • GUILFORD, CT 06437  
Phone: (203) 453-6571 • Fax: (203) 453-6906

Rev.B  
092011

**Visit Us At [www.moroso.com](http://www.moroso.com)**

85450INST



**MOROSO P/N 85450 REAR END REMOTE FILLER/BREATHER**  
**MOROSO P/N 85460 REAR FILLER BREATHER/CAGE MOUNT**

The Moroso Rear End Remote Filler/Breather provides remote filling capabilities and breathing capacity non-existent in most rear end housings today.


It can be mounted either to existing sheet metal or to the roll cage using the two 5/16" holes provided in the hold down bracket on #85450, or with two appropriately size hose clamps for the #85460.

The filler should be mounted vertically in the car with its outlet located higher than the inlet of the rear housing.

Be sure that no portion of the connecting hose is below the inlet of the rear as this would trap a pool of oil in the hose and not allow the rear to breath properly. The hose should run downhill toward the rear all the way.

A second hose is required to vent the rear end allowing quicker filling with fluid. This hose should run from the 3/8" NPT fitting at the top of the canister to a point higher than the filled level of the fluid.

Also, be sure to use enough hose to allow complete up and down and sideways movement of the rear end.

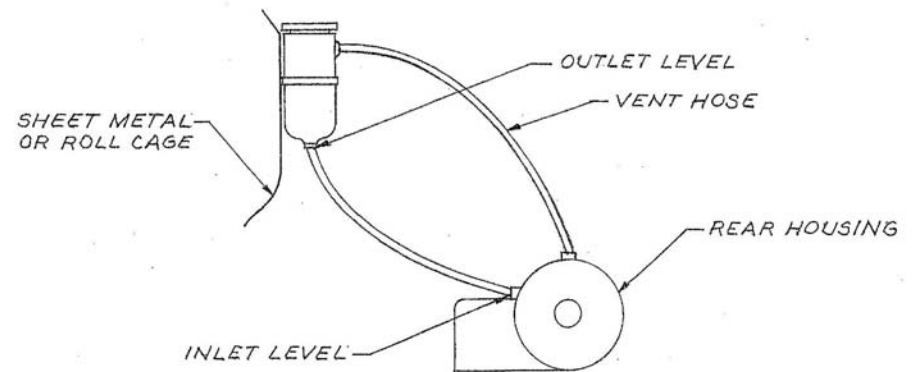

**For Technical Assistance, Call Moroso's Tech Line at  
(203) 458-0542, 458-0546 8:30am - 5:00pm Eastern Time**

MOROSO PERFORMANCE PRODUCTS, INC  
80 CARTER DR • GUILFORD, CT 06437  
Phone: (203) 453-6571 • Fax: (203) 453-6906

Rev. B  
092011

**Visit Us At [www.moroso.com](http://www.moroso.com)**

85450INST