

2014+ Chevy Silverado LD Boss Grille Installation Instructions

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance, feel free to call us at: 1-800-357-9261

Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

Please read all instructions before installation and to check to see that all parts are included.

KIT CONTENTS:	
Description	Qty.
Boss Grille	1
Upper Brackets	2
Lower Bracket	1
1/4" - 20 x 3/4" SS bolt	10
1/4" - 20 SS Lock Nut	10
1/4" SS Washer	10
Only for Lighted Grille (below)	
10" Luminix Light	2
Wiring Harness	1
Switch	1
Light Bar Instructions	1


Tools Needed:

- 7mm Wrench
- 10mm Wrench
- Flat Head Screw Driver
- Needle Nose Pliers
- Pliers


For Lighted grilles, refer to Wiring Installation on Light Bar Installation Instructions for wiring instruction.

Insert Grille Installation

1. Remove Grille from packaging. Check to see if all parts from above table of kit contents are included.

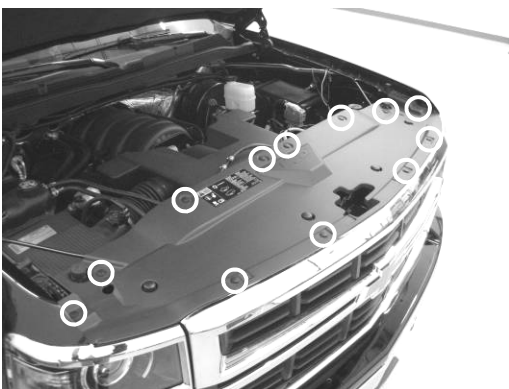


2. Remove plastic cover by removing 12 retaining clips with flat head screw driver (locations shown above).

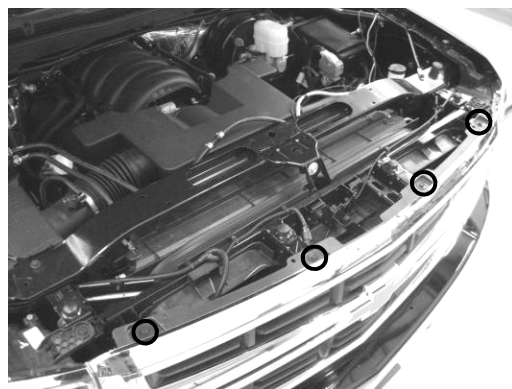


3. Once cover is removed, remove the top 4 grille screws with 10mm wrench (location shown above).

LIMITED 90 DAY WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.

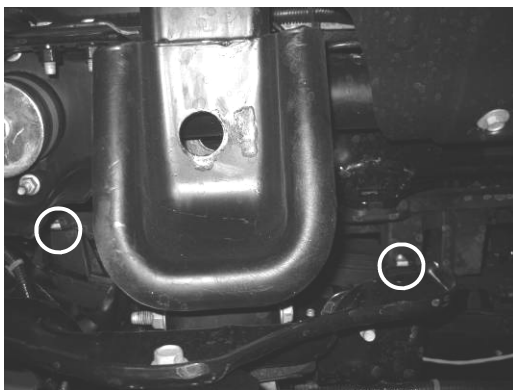

4. Remove bottom 4 grille screw from underneath truck with 10mm wrench. The 2 driver side locations are shown above. Repeat on passenger side.

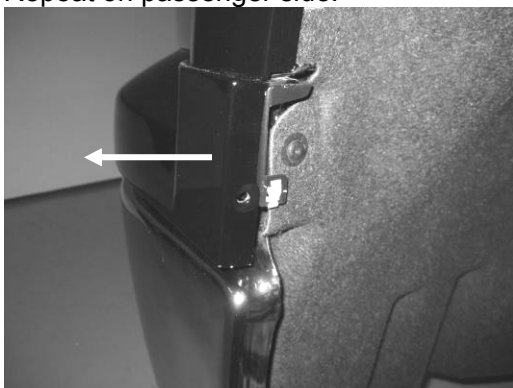


6. Pull out upper bumper end. Driver side is shown. Repeat on passenger side.



5. Remove 2 bolts in front wheel well on the upper bumper. The driver side locations are shown above. Repeat on passenger side.



7. Pull grille and upper bumper pieces out away from truck and place face down on scratch free surface. These two pieces will be attached together.

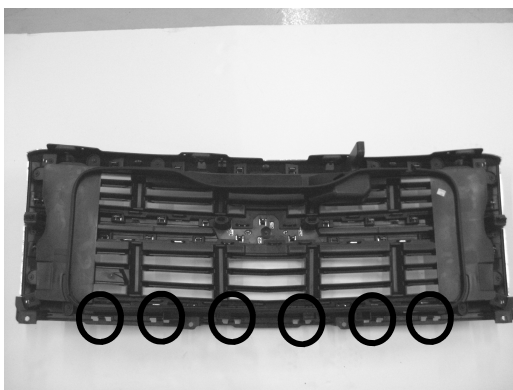

8. Once grille and upper bumper are off the truck. Remove the upper bumper piece from grille. Use a flat head screw driver to unclip the 6 tabs on bottom backside of the grille.



9. Place assembled grille into truck. Bolt Boss grille in with factory hardware in the factory grille mounting locations. Tighten all bolts when grille is in positions desired. Reassemble truck.

LIMITED 90 DAY WARRANTY

Putco guarantees it's Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.