



INSTALLATION INSTRUCTIONS FOR FRONT BED PROTECTORS

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance feel free to call us at: **800-247-3974**

Monday - Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories

Putco Automotive Accessories - 216 West First - Story City, Iowa 50248

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

- NOTE:** **IMPORTANT!!!** Temperate must be above 60 degrees F for tape adhesive, at time of installation.
- STEP 1:** Before removing backing from the tape, place item on vehicle and check for fit. **SEE FIGURE 1.**
- STEP 2:** Area to be covered must be thoroughly cleaned and free of all waxes and/or special coatings. Entire surface must be wiped down with rubbing alcohol. (Do Not substitute alcohol with any other cleaner).
- STEP 3:** Remove backing from tape, being careful not to touch item to vehicle until properly placed. Once attached, press firmly with the palm of your hand, working form center out to insure good adhesion. Once item is in place, it cannot be removed without damage to item. **SEE FIGURE 2.**

FIGURE 1
FIGURA 1

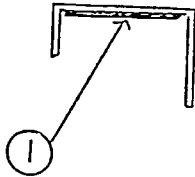


FIGURE 2
FIGURA 2

