

INSTALLATION INSTRUCTIONS FOR PART #79451 UNIVERSAL REAR FLAP

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance feel free to call us at:

(515) 733-5252

Monday - Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

Putco Automotive Accessories - 216 West First - Story City, Iowa 50248

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

STEP 1: Remove protective plastic coating from flaps.

STEP 2: Using C-clamps or Vise Grips, clamp the flap extension to flap. Install trusshead bolts and acorn nuts. SEE FIGURE 1.

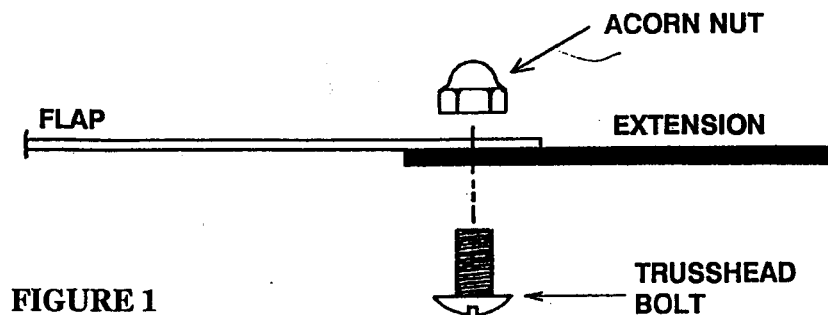


FIGURE 1

STEP 3: Apply the protective black edge trim to ONLY the outer exposed edge. SEE FIGURE 2.

**BLACK
EDGE
TRIM**



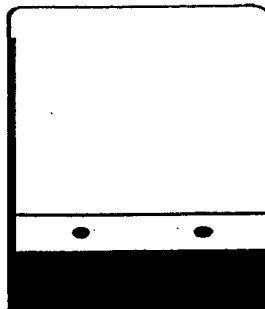


FIGURE 2

STEP 4: Using C-clamps or Vise Grips, clamp flap to the fenderwell flange. Make sure the flap is level and drill two 7/32" holes through flap and fenderwell flange. Then drill two 7/32" holes through flap **ONLY** and install #14 metal screws. SEE FIGURE 3.

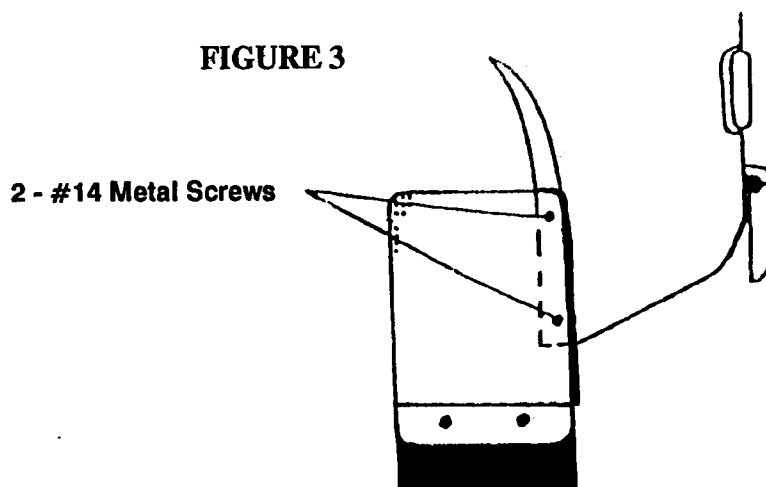

**Items shown below are used in the assembly and
installation of the Mudflaps**

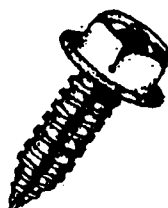

#14 Metal Screw

TOOLS NEEDED

Electric Drill
Vise Grips
Level
7/32" Drill Bit

11/64" Drill Bit
3/8" Wrench
or Socket

LIMITED WARRANTY

Putco guarantees its products against defects in workmanship or material for the time period stated. Any defects resulting from faulty material or workmanship will be warranted by Putco with the replacement of defective part.

Damages caused by improper installation, misuse, collision, or neglect will not be warranted by Putco. Putco will be sole judge of all warranties! Proof of purchase necessary for all warranty claims.

Aluminum Products
Stainless Steel Products
Painted Surfaces

One Year
One Year
90 Days