



INSTALLATION SHEET FOR STAINLESS STEEL MUD FLAP #79491 DUALY BOX

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance feel free to call us at:

1-800-247-3974

Monday-Friday 8:00 a.m.- 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

PUTCO Inc. - 216 West First Street - Story City, Iowa 50248

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION AND BE SURE TO CHECK TO SEE THAT ALL PARTS AND HARDWARE ARE INCLUDED.

STEP 1: Remove the protective plastic coating from the mud flap and SS trim.

STEP 2: Apply the protective black edge trim to **ONLY** the outer exposed edge. **SEE FIGURE 1**

**BLACK
EDGE
TRIM**


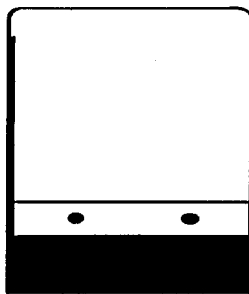


FIGURE 1

STEP 3: Attach the mud flap to the mud flap extension using 1/4" x 3/4" SS slot head bolts and nylon insert lock nuts. **SEE FIGURE 2**

FIGURE 2



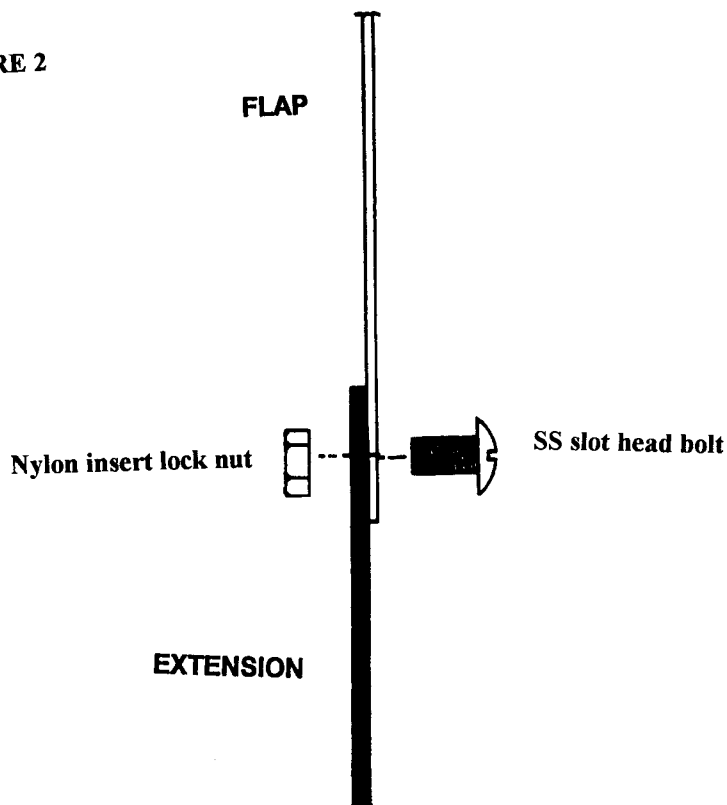

INSTALLATION SHEET FOR STAINLESS STEEL MUD FLAP #79491 DUALY BOX

NOTE: The following steps are for 92-98 Chevy/GMC, 87-97 Ford, and 81-93 Dodge. For 94-98 Dodge and 1999 Fords skip to STEP: 8.

STEP 4: Using hex head bolts, lock washers, and nuts, bolt the mounting plate to the long angle to the mud flap.
SEE FIGURE 3

STEP 5: Position mud flap assembly into the fender well and drill two 1/4" holes through the inner fender well lip. Install hex head bolts, lock washers, and nuts. **SEE FIGURE 3**

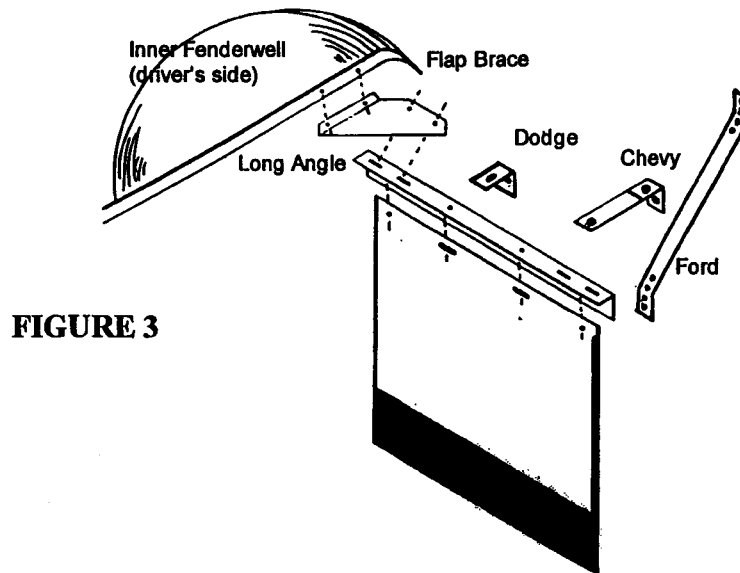


FIGURE 3

STEP 6: Bolt on the correct brackets to make the outer brace for your mud flap assembly. **SEE FIGURE 3**

STEP 7: Bolt one end of the brace to an existing bolt in the fender well. the other end bolts to the long angle bracket.

STEP 8: (94-98 Dodge and 1999 Ford ONLY). Drill three 1/4" holes through the inner wheel well flange (this is the metal flange that is part of the truck bed) and the mud flap, attach the flap to the wheel well flange using 1/4" x 1-1/4" SS slot head bolts, lock washers, and hex nuts. In order to see the flange you will have to look from the bumper to the back side of the fender well at ground level.

Tools Needed

7/16" wrench and socket
Flat head screwdriver
1/4" Drill bit
Power drill
Level

INSTRUCTION #IN79491-AUGUST 1998

LIMITED WARRANTY

PUTCO guarantees **ALL** its products against defects in workmanship or material for the time period of **ONE YEAR (90 DAYS on black products)**. Any defects resulting from faulty material or workmanship will be warranted by PUTCO with the replacement of defective part.

Damages caused by improper installation, misuse, collision, or neglect will not be warranted by PUTCO. PUTCO will be sole judge of all warranties! Proof of purchase necessary for all warranty claims.