



2010-2011 CHEVY CAMARO Liquid Grille Insert 91160

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance feel free to call us at: 1-800-247-3974 Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time) Contact your PUTCO dealer for other quality accessories. PUTCO Inc. - 216 West First Street - Story City, Iowa 50248

PLEASE READ ALL INSTRUCTIONS BEFORE INSTALLATION AND CHECK TO SEE THAT ALL PARTS ARE INCLUDED.

Please consult your Vehicles owners manual for vehicle air flow restrictions
Putco is not liable for any vehicle damage resulting from the installation of our Grille inserts



Step 1: Verify kit contents. (One upper and one lower grille insert with hardware kit)

Step 2: Hold your grilles up to your factory grille to check for proper fit.

Step 3: Clean the surface of the top factory grille with rubbing alcohol and make sure the surface is clean and dry.

NOTE: The outside temperature and the temperature of your vehicle's surface must be at least 60 degrees Fahrenheit for proper adhesion of the tape.

Step 4: Remove the red backing from the 3M tape.

NOTE: This will be a two person installation, once the tape adheres to the body of the vehicle it is near impossible to remove it for adjustment.

Step 5: Align the upper grille insert with the openings of the factory grille, and push the insert up against the factory grille.

Step 6: Apply even pressure to all areas where tape is present for a minimum of 60 seconds to ensure proper adhesion.

Step 7: Align the lower grille insert with the lower factory opening.

Step 8: Attach the grille to the lower opening using the supplied hardware kit and secure it to the lower factory grille. (See Figure 1)

Step 9: Verify that the upper and lower grille are secured before driving.

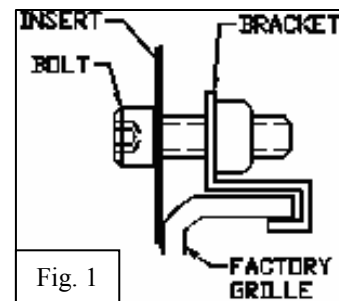


Fig. 1

Note: PUTCO recommends applying a high quality automotive wax to maintain the original appearance.

LIMITED WARRANTY

Putco guarantees it's Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. Black products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco.