

PUTCO 2007 CHEVY AVALANCHE 900218, 920218 & 930218 REPLACEMENT THIRD BRAKE LIGHT INSTALLATION SHEET

Congratulations on your purchase of a high quality PUTCO product. Should you need any application or technical assistance feel free to call us at:
1-800-247-3974

Monday-Friday 8:00 a.m. - 5:00 p.m. (Central Standard Time)

Contact your PUTCO dealer for other quality accessories.

PUTCO Inc. - 216 West First Street - Story City, Iowa 50248

Please read all instructions before installation and to check to see that all parts are included.

Section I – Installation Preparation

Kit Contents

Item #	Quantity Req'd.	Description
1	1	3 rd Brake Light

Bolt Kit Contents

Item #	Quantity Req'd.	Description
N/A	N/A	N/A

Recommended Tools

Safety Tools	
Eye Protection	
Special Tools	
Installation Tools	
Flat Head Screw Driver	
Phillips Screw Driver	
T30 Torx Screw Driver	
Wiping Cloth (non-scratch)	
Special Chemicals	



Legend

	STOP: Damage to the vehicle may occur. Do not proceed until process has been complied with.
	OPERATOR SAFETY: Use caution to avoid risk of injury.
	CRITICAL PROCESS: Proceed with caution to ensure a quality installation. These points will be audited on a completed vehicle installation.
	GENERAL PROCESS: This highlights specific processes to ensure a quality installation. These points will be audited during the accessory installation.
	TOOLS & EQUIPMENT: Calls out the specific tools and equipment recommended for this process.
	REVISION MARK: This mark highlights a change in installation with respect to previous issue.

LIMITED WARRANTY

Putco guarantees it's Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco. Please consult your Vehicles owners manual for vehicle air flow restrictions. **Putco is not liable for any vehicle damage resulting from the installation of our Grille inserts.**

PUTCO 2007 CHEVY AVALANCHE 900218, 920218 & 930218 REPLACEMENT THIRD BRAKE LIGHT INSTALLATION SHEET

A. Pre-installation Preparation

-  1. Verify kit contents.
-  2. Remove protective wrapping from inserts and place on a non-abrasive surface.
-  3. Remove all items from the box.

B. Remove Screws from Plastic Cover

-  1. Use a T30 Torx screw driver to remove the eight screws that secure the black plastic cover to the vehicle. (Fig. B1)
-  2. Remove six screws from the top and two from the bottom. (Fig. B2 & B3)

C. Remove Plastic Cover

-  1. Lift up on the corners of the plastic cover and work towards the middle on the top and bottom to release the 3M tape. (Fig. C1 & C2)
-  2. Set plastic cover aside and remove third brake light.

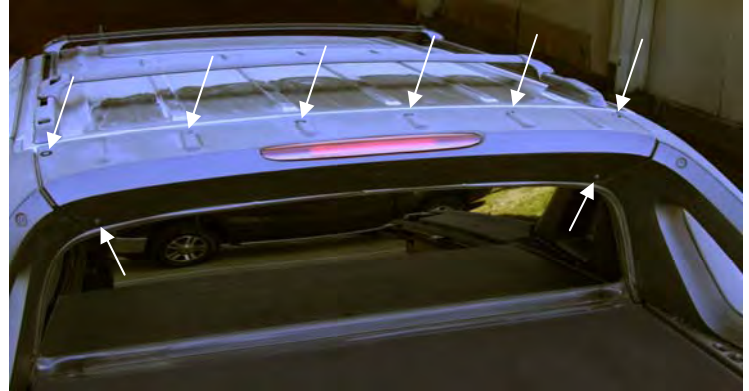


Figure B1



Figure B2



Figure B3

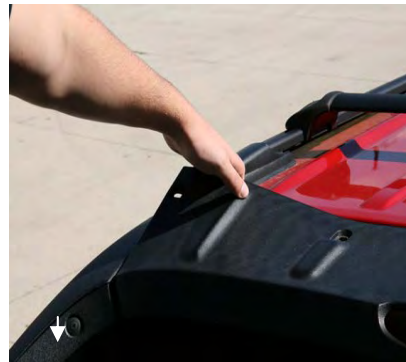


Figure C1



Figure C2

LIMITED WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco. Please consult your Vehicles owners manual for vehicle air flow restrictions. **Putco is not liable for any vehicle damage resulting from the installation of our Grille inserts.**

PUTCO 2007 CHEVY AVALANCHE 900218, 920218 & 930218 REPLACEMENT THIRD BRAKE LIGHT INSTALLATION SHEET

D. Remove 3rd Brake Light

-  1. Remove two Philips screws. (Fig. D1)
-  2. Remove metal clips from 3rd brake light housing. (Fig. D2)
-  3. Unplug the Factory 3rd brake light. (Fig. D3)
-  4. Remove Factory 3rd brake light from vehicle.



Figure D1



Figure D2



Figure D3

E. Install Replacement 3rd Brake Light

-  1. Plug replacement third brake light into the wiring harness that you removed in step D-3.
-  2. Test replacement third brake light by pressing the brakes. (Fig. E1)
-  3. Reinstall the third brake light and plastic cover by using steps D, C and B.
-  4. Verify that all screws and parts are secured properly.

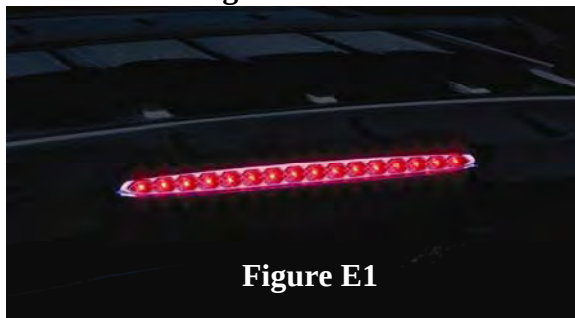


Figure E1

LIMITED WARRANTY

Putco guarantees its Stainless Steel and Aluminum products against defects in workmanship and material for as long as you own your vehicle. All painted products have a 90 day warranty on the painted surface. Any defects resulting from faulty material or workmanship will be warranted by Putco and repaired or replaced at our discretion. Putco assumes no extra labor costs. Damages caused by freight carriers, improper installation, misuse, collision, or neglect will not be warranted by Putco. Please consult your Vehicles owners manual for vehicle air flow restrictions. **Putco is not liable for any vehicle damage resulting from the installation of our Grille inserts.**