

INSTALLATION INSTRUCTIONS

Form No.
8750

PLEASE READ ALL INSTRUCTIONS FROM START TO FINISH BEFORE YOU BEGIN THE INSTALLATION.

LANDROVER INSTALLATION INSTRUCTIONS

1. Raise the vehicle and support the frame with jackstands.
2. Remove the factory stabilizer.
3. Install Part No. 1733 bracket on steering linkage using the U-bolt kit supplied. Locate Bracket as shown in Illustration 1 and 2.
4. Install the cylinder using the supplied sleeve into bracket Part No. 1733.
5. Cycle steering from lock-to-lock and check for any interference or binding.
6. Periodically inspect the assembly for tightness.

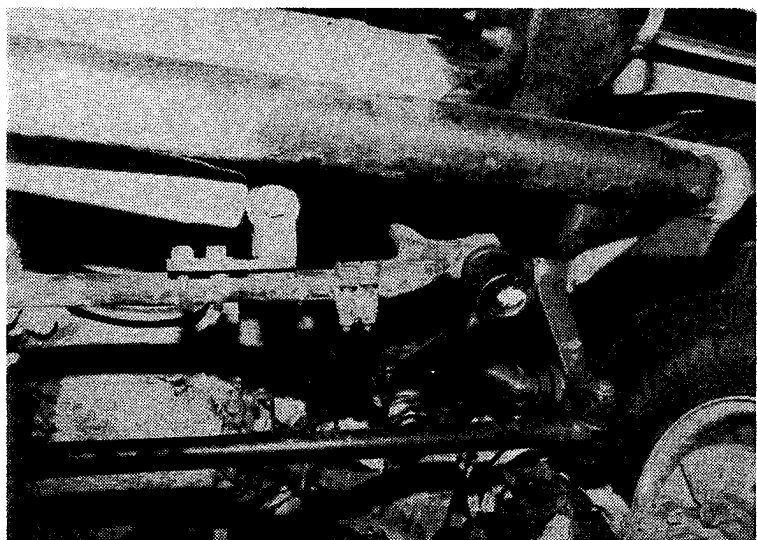


ILLUSTRATION 1

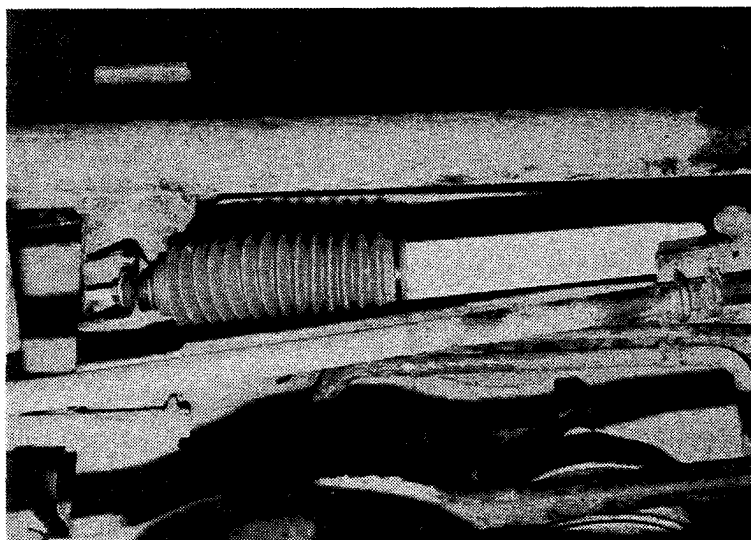


ILLUSTRATION 2

TOYOTA LANDCRUISER INSTALLATION INSTRUCTIONS

1. Raise the vehicle and support the frame with jackstands.
2. Remove the factory stabilizer.
3. Install Part No. 1733 bracket on steering linkage using U-bolts Kit. Locate bracket as shown in Illustration 3. Install Stud Part No. 141397 in the frame mounting.
4. Install cylinder using the supplied sleeve.
5. Cycle steering from lock-to-lock and check for any interference or binding.
6. Periodically inspect the assembly for tightness.

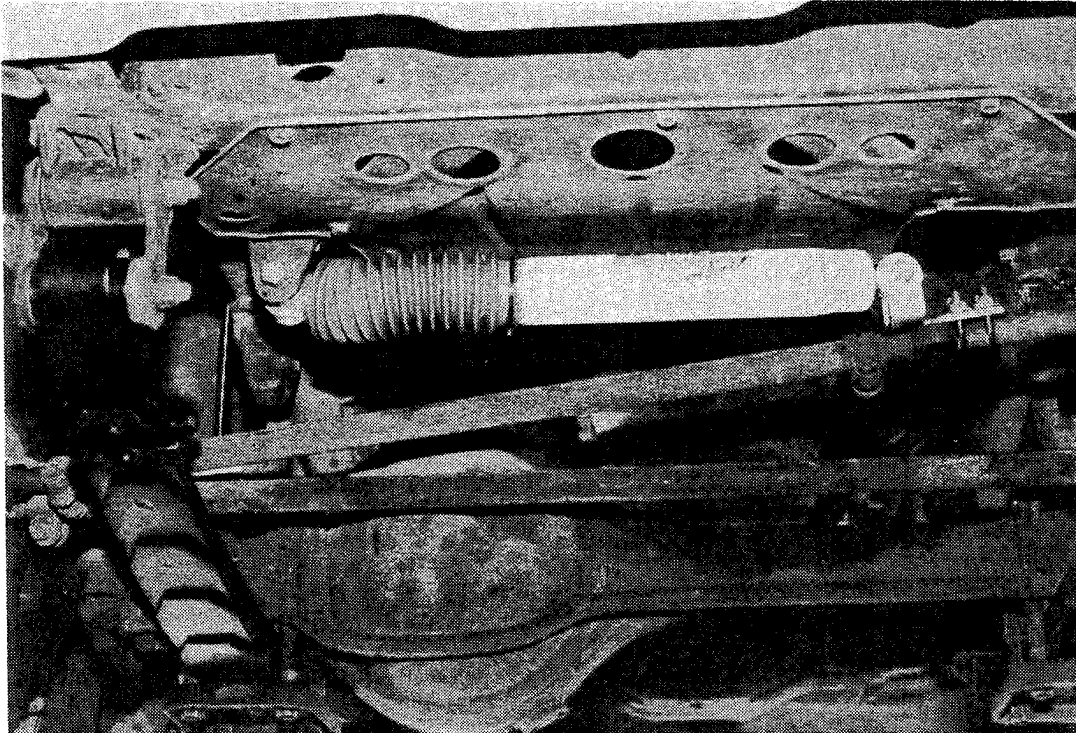


ILLUSTRATION 3