

INSTALLATION INSTRUCTION

88620

Rev A

RANCHO FRONT BUMPER KIT RS6220B


READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION

Parts List

<u>Part No.</u>	<u>Description</u>	<u>Qty.</u>
176565B	Front Bumper	1
860624	Hardware Kit	1
	7/16-14 x 1.5 HHCS	8
	7/16-14 Stover Nut	8
	7/16 SAE Washer	16
88620	Installation Instruction	1

Note: Some states require a front license plate for highway use. Drill holes and mount license plate if required.

- 1) Remove push pin fasteners from front splash shield.
- 2) Disconnect electrical connectors at fog lights.
- 3) Remove bumper to frame bolts. Remove front bumper, fog lights, and splash shield as an assembly.
- 4) Attach new bumper to frame with the supplied hardware. Tighten nuts and bolts to 60 ft. lbs.

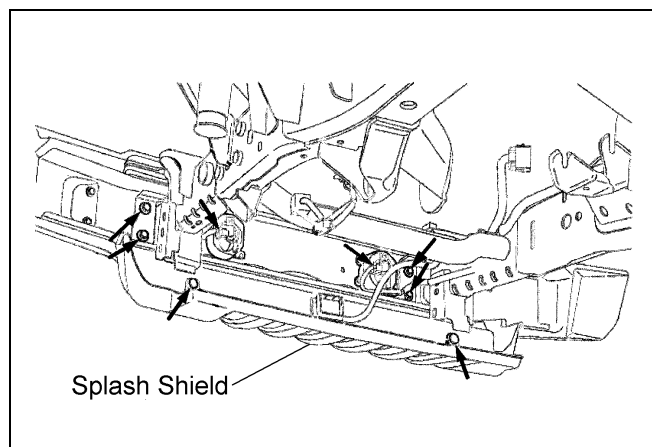

Illus. 1



Illus. 2