


DANA 30 FRONT GLIDE PLATE KIT RS6227

Parts List


<u>PART NO.</u>	<u>DESCRIPTION</u>	<u>QTY.</u>
176564	Glide Plate	1
860643	U-bolt Hardware Kit	1
740028	5/16-18 x 3.56 x 5.63 U-bolt	1
7671	5/16-18 Hex Nut	2
7733	5/16 Washers	4
7768	5/16-18 Nylock	2
860640	Hardware Kit	1
7670	HHCS 5/16-18 x 1.0	5
7642	5/16 Washer	5
42702	Thread Lock	1
88627	Instructions	1

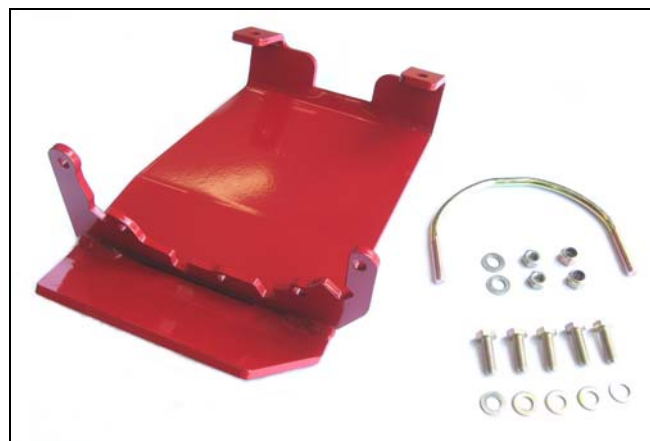


Illus. 1

NOTE: This glide plate will only fit Jeep equipped with the low pinion Dana 30 front differential.

- 1) Remove four bolts from the bottom of the front differential as shown in illustration 2. Do not remove cover.
- 2) Attach glide plate RS176564 to the differential cover with the supplied hardware and thread lock.
- 3) Thread 5/16 hex nut to end of threads and place u-bolt RS740028 over the back of the differential.
- 4) Attach u-bolt to glide plate with the supplied hardware from kit RS860643.
- 5) Tighten all nylock nuts to 30 ft. lbs and secure hex nut to glide plate. Inspect cover for fluid leaks periodically.
- 6) If a leak is detected, remove and reseal cover per manufacturer's recommendations.

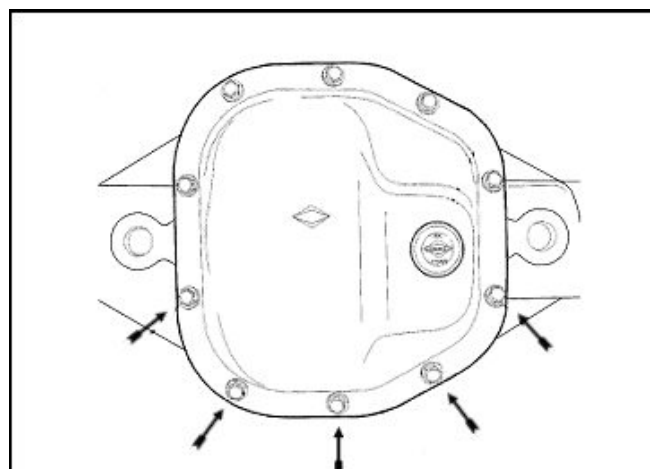

Illus. 2

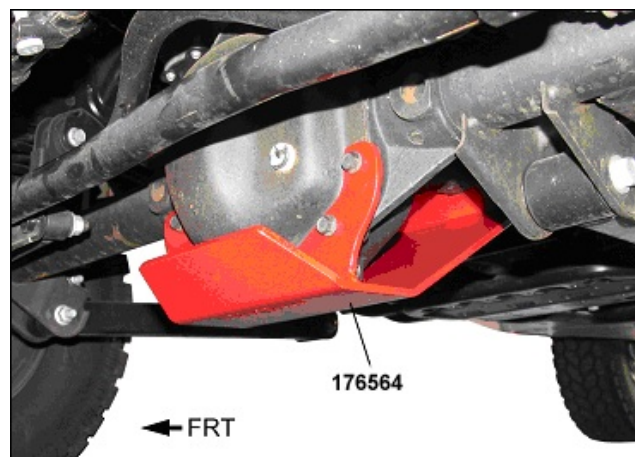

Illus. 3