

INSTALLATION INSTRUCTIONS

8950

Rev. A

FULL SIZE CHEVY STEERING STABILIZER

READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH **BEFORE** BEGINNING INSTALLATION

1. Raise vehicle and support frame with safety stands.
2. Remove skidpan.
3. Position the #1771 bracket on the cross member as shown in **figure #1** approximately 1/2" from the opening.
4. Drill (2) 21/64" holes using bracket as a guide, assemble using hardware supplied. Torque to 20ft./lbs.
5. Install the rod end of shock into the existing hole in the tie rod assembly using the supplied hardware part# P-933 **figure #2**. Be sure to match the taper of the new mounting pin to the taper in the tie rod assembly. Torque to 40ft./lbs.
6. Install shock body end into the 1771 bracket and assemble using the hardware supplied.
7. Reinstall skidpan.
8. Periodically inspect the assembly for tightness.

NOTE: Figure is shown with the differential removed.

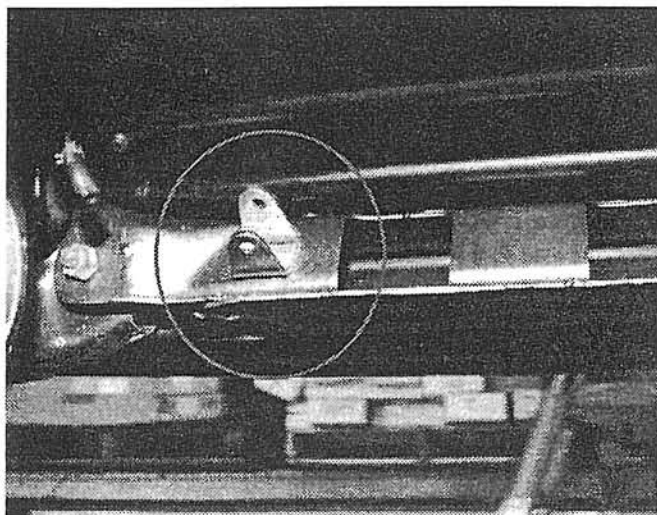


FIGURE #1

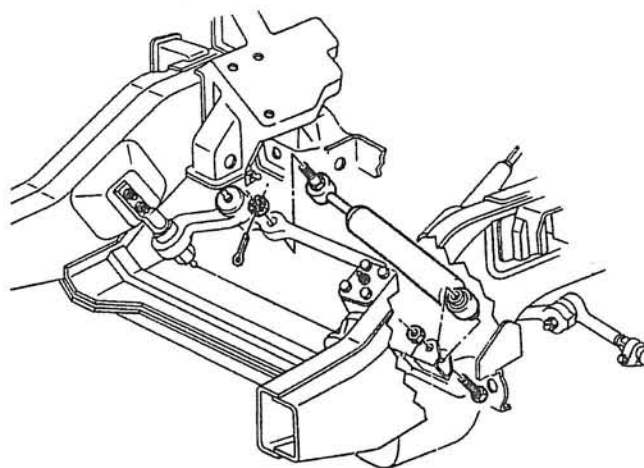


FIGURE #2