

INSTALLATION INSTRUCTIONS

8765

Rev A

FOR TOYOTA STEERING STABILIZER KIT

READ ALL INSTRUCTIONS THOROUGHLY FROM START TO FINISH BEFORE BEGINNING INSTALLATION

1. Park the vehicle on a level surface and set the parking brake. If necessary, raise the front of the vehicle and support the frame with safety stands. Chock rear wheels.
2. Remove the two rear bolts that hold the idler arm bracket to the passenger-side frame rail. Replace them with the new 12mm bolts and washers from kit 8570.
3. Install the sleeve from kit 8570 on the upper bolt and place one of the thick OEM washers on the lower bolt. See illustration 1. Attach bracket 130021 to the frame rail with the remaining hardware. Tighten the 12mm nuts to 70 FT-LBS.
4. Attach the L-shaped bracket to the cylinder end of the shock with the supplied bushings and hardware. See illustration 2.
5. Attach the rod end of the shock to frame bracket 130021 with the supplied bushings and hardware. Extend the shock completely.
6. Turn the front wheels all the way to the left. Push the extended shock in 1/4" and attach the L-shaped bracket to the front of the relay rod with the supplied U-bolts. Tighten the U-bolt nuts.
7. Turn the steering completely to the left and to the right. Verify that there is no binding or interference.
8. Periodically inspect assembly for tightness.

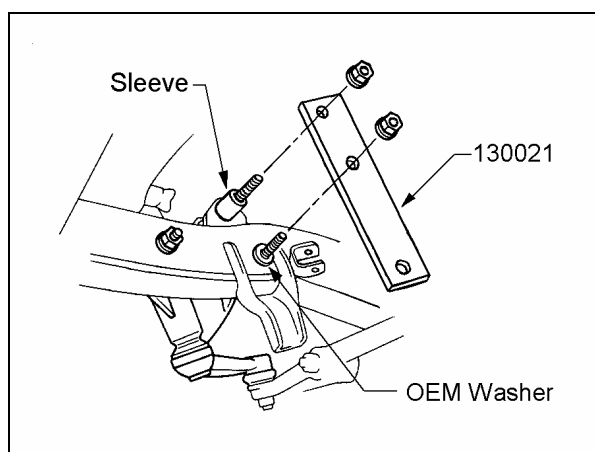


Illustration 1

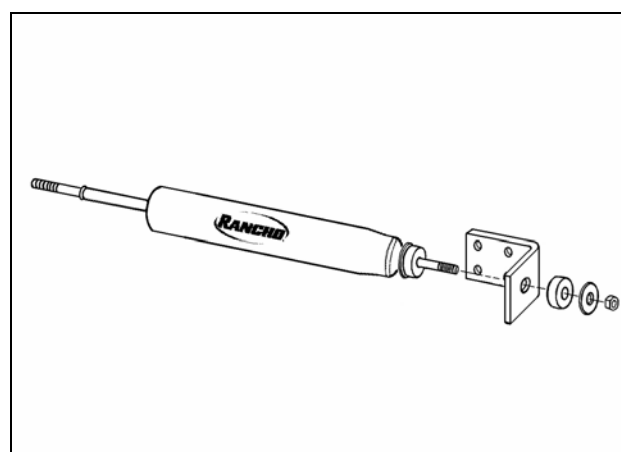


Illustration 2