

IMPORTANT

Thank you for purchasing Rigid Industries' products for your vehicle. Installation is fairly simple with the right tools and good mechanical abilities. If you are not confident in your mechanical skills, please seek the help of a professional to perform the installation. Please read through all of these instructions and tips before proceeding with installation.

Always disconnect battery before servicing any fuses or electrical system.

Your installation is now complete.
Welcome to the Rigid Nation!

FOLLOW US ON FACEBOOK AT
[facebook.com/RigidIndustries](https://www.facebook.com/RigidIndustries)

779 N Colorado St, Gilbert, AZ 85233 • (855) 760 5337 • www.RigidIndustries.com

PKG-IS-055 Rev1



54" ADS-SERIES™ ROOF MOUNT INSTALLATION INSTRUCTIONS



2014 Chevy®/GMC®
Part # 40166

WHAT YOU WILL NEED

- a. Drill
- b. 1/4" Drill Bit
- c. 1/4" Rivets (6)
- d. Tape Measure

WHAT'S INCLUDED

- a. Right Mount(1)
- b. Left Mount(1)

Note: This installation requires
2 people for best results

IMPORTANT

Thank you for purchasing Rigid Industries' products for your vehicle. Installation is fairly simple with the right tools and good mechanical abilities. If you are not confident in your mechanical skills, please seek the help of a professional to perform the installation. Please read through all of these instructions and tips before proceeding with installation.

Always disconnect battery before servicing any fuses or electrical system.

Your installation is now complete.
Welcome to the Rigid Nation!

FOLLOW US ON FACEBOOK AT
[facebook.com/RigidIndustries](https://www.facebook.com/RigidIndustries)

779 N Colorado St, Gilbert, AZ 85233 • (855) 760 5337 • www.RigidIndustries.com

PKG-IS-055 Rev1



54" ADS-SERIES™ ROOF MOUNT INSTALLATION INSTRUCTIONS



2014 Chevy®/GMC®
Part # 40166

WHAT YOU WILL NEED

- a. Drill
- b. 1/4" Drill Bit
- c. 1/4" Rivets (6)
- d. Tape Measure

WHAT'S INCLUDED


- a. Right Mount(1)
- b. Left Mount(1)

Note: This installation requires
2 people for best results

Figure 1



Figure 1

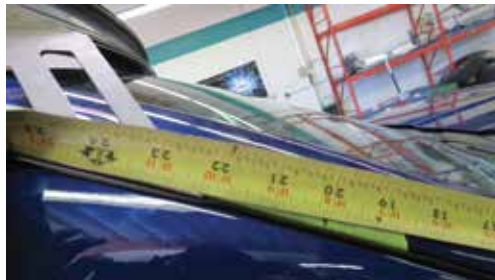

INSTRUCTIONS

1. Mount light bar into both Roof Mounts to create an assembly.

Figure 1

2. Carefully measure mount locations by measuring 22 3/16" from lower pillar at fender to bottom of mount at the location shown below. Do this for both sides of the truck.

Figure 2

3. With the bracket in position, mark and drill the three holes with the 1/4" drill bit and install the rivets and bracket according to the rivet tool manufacturer's instructions. Repeat for the other side.

Not Pictured

4. Wire the light according to instructions included with the light.

Figure 3

5. Stand back and enjoy your RDS Light Mount.



Figure 2



Figure 3



INSTRUCTIONS

1. Mount light bar into both Roof Mounts to create an assembly.

Figure 1

2. Carefully measure mount locations by measuring 22 3/16" from lower pillar at fender to bottom of mount at the location shown below. Do this for both sides of the truck.

Figure 2

3. With the bracket in position, mark and drill the three holes with the 1/4" drill bit and install the rivets and bracket according to the rivet tool manufacturer's instructions. Repeat for the other side.

Not Pictured

4. Wire the light according to instructions included with the light.

Figure 3

5. Stand back and enjoy your RDS Light Mount.



Figure 2



Figure 3

