

Figure 1

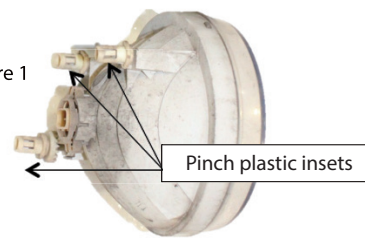


Figure 2



Figure 3

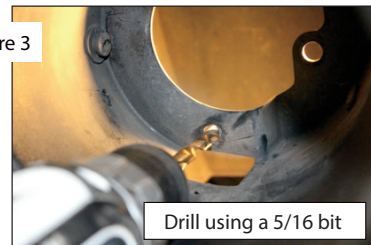


Figure 1


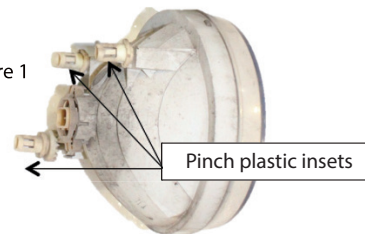


Figure 2



Figure 3

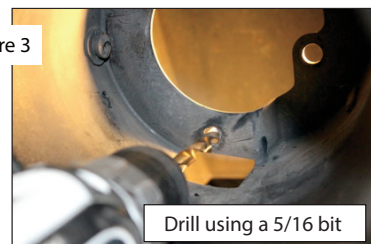

INSTRUCTIONS

1. Remove the factory fog light, unplug factory connector and pinch 3 retaining clips to press out. As shown in Figure #1.
2. Using the new back plate as a template hold in place and mark the lower hole as shown in Figure #2.
3. Drill out the marked lower hole with a 5/16 drill bit as shown in Figure #3.
4. Bolt the back bracket in place with the supplied 5/16 bolts, washers, locknuts and nuts. As shown in Figure #4.
5. Remove two middle screws on the front face of the D-Series light using a 7/16 hex wrench.
6. Place the M6 washers on top of each open screw hole on the front face as shown in Figure #5.
7. Position the trim plate on top of the washers, the "Rigid Industries" will line up with the cut-out in the trim plate.
8. Bolt the trim to the D-series light with the supplied #6 button head screws DO NOT TIGHTEN OVER 10.1 in-lbs. As shown in Figure #6.



Figure 4



Figure 5



Figure 6

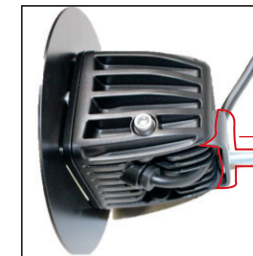


Figure 7

9. Attach the supplied brackets to the D-Series facing backward as shown in Figure #7.
10. Loosely bolt the D-Series light assembly to the back bracket with the 5/16 washer, lock washer, and nut.
11. Adjust the placement in the factory bucket, aim both lights and tighten the 5/16 nut.



Your installation is now complete.

Welcome to the Rigid Nation!

FOLLOW US ON FACEBOOK AT
[facebook.com/RigidIndustries](https://www.facebook.com/RigidIndustries)

779 N Colorado St, Gilbert, AZ 85233 • 855-760-5337 ext 1008 • www.rigidindustries.com

INSTRUCTIONS

1. Remove the factory fog light, unplug factory connector and pinch 3 retaining clips to press out. As shown in Figure #1.
2. Using the new back plate as a template hold in place and mark the lower hole as shown in Figure #2.
3. Drill out the marked lower hole with a 5/16 drill bit as shown in Figure #3.
4. Bolt the back bracket in place with the supplied 5/16 bolts, washers, locknuts and nuts. As shown in Figure #4.
5. Remove two middle screws on the front face of the D-Series light using a 7/16 hex wrench.
6. Place the M6 washers on top of each open screw hole on the front face as shown in Figure #5.
7. Position the trim plate on top of the washers, the "Rigid Industries" will line up with the cut-out in the trim plate.
8. Bolt the trim to the D-series light with the supplied #6 button head screws DO NOT TIGHTEN OVER 10.1 in-lbs. As shown in Figure #6.



Figure 4



Figure 5



Figure 6

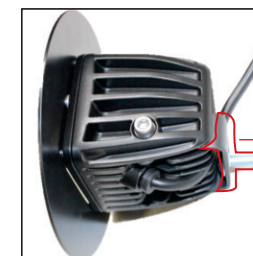


Figure 7

9. Attach the supplied brackets to the D-Series facing backward as shown in Figure #7.
10. Loosely bolt the D-Series light assembly to the back bracket with the 5/16 washer, lock washer, and nut.
11. Adjust the placement in the factory bucket, aim both lights and tighten the 5/16 nut.



Your installation is now complete.

Welcome to the Rigid Nation!

FOLLOW US ON FACEBOOK AT
[facebook.com/RigidIndustries](https://www.facebook.com/RigidIndustries)

779 N Colorado St, Gilbert, AZ 85233 • 855-760-5337 ext 1008 • www.rigidindustries.com

IMPORTANT

Thank you for purchasing Rigid Industries' products for your vehicle. Installation is fairly simple with the right tools and good mechanical abilities. If you are not confident in your mechanical skills, please seek the help of a professional to perform the installation. Please read through all of these instructions and tips before proceeding with installation.

Always disconnect any power sources connected to your vehicle before servicing fuses or electrical systems.

WARRANTY INFORMATION

Rigid Industries warrants that this product will be free from defects in material and workmanship. If you believe your Rigid Industries product is defective, it must be returned to Rigid Industries for inspection by our warranty claims department. If, after inspection, Rigid Industries verifies that the defect was not caused by negligence, abuse, unauthorized repair or disassembly, Rigid Industries will determine whether the product will be repaired or replaced in accordance with Rigid Industries Limited Lifetime Warranty*.

Warranty Periods:

- All LED Lights – Limited Lifetime
- Accessories and Mounts – 2 years
- Flashlights – 1 year
- Batteries – 90 days

Warranty Coverage:

To begin your warranty claim, you must have a Return Merchandise Authorization (RMA) number. To get your RMA number, please contact our warranty department by phone at 480-655-0100 ext. 1008, or by filling out the Return Merchandise Authorization Form on our website.

All of the following will immediately void all warranties:

- Customer negligence – The customer has modified the light and/or is not using it for the recommend application.
- Customer abuse – Damage to the light beyond normal wear and tear.
- Repair work done by unauthorized personnel without Rigid Industries' approval.
- If the light has been opened or any screws have been removed.

All warranties are non-transferable. Warranty terms and policies are subject to change without notice.

*For all information regarding the Rigid Industries' Limited Lifetime Warranty please call 855-760-5337 ext. 1008, email warranty@RigidIndustries.com, or visit our warranty page online at RigidIndustries.com/about/warranty.

Rigid Industries, Rigid, and D-Series are registered and/or unregistered trademarks of JST Performance, Inc. d/b/a Rigid Industries. IS-46508 REV2



FOG LIGHT KIT

*Lights Sold Separately

- 2011-2013 GMC® 2500/3500



PARTS INCLUDED

- Driver and Passenger Side Back Mounting Brackets (2)
- Driver and Passenger Side Front Trim Brackets (2)
- 5/16" Carriage Bolts (6)
- 5/16" Flat Washers (6)
- 5/16" Lock Washers (6)
- 5/16" Nuts
- M6 Flanged Locknuts (4)
- M6 Bolts (4)
- M6 Plastic Spacers (4)

IMPORTANT

Thank you for purchasing Rigid Industries' products for your vehicle. Installation is fairly simple with the right tools and good mechanical abilities. If you are not confident in your mechanical skills, please seek the help of a professional to perform the installation. Please read through all of these instructions and tips before proceeding with installation.

Always disconnect any power sources connected to your vehicle before servicing fuses or electrical systems.

WARRANTY INFORMATION

Rigid Industries warrants that this product will be free from defects in material and workmanship. If you believe your Rigid Industries product is defective, it must be returned to Rigid Industries for inspection by our warranty claims department. If, after inspection, Rigid Industries verifies that the defect was not caused by negligence, abuse, unauthorized repair or disassembly, Rigid Industries will determine whether the product will be repaired or replaced in accordance with Rigid Industries Limited Lifetime Warranty*.

Warranty Periods:

- All LED Lights – Limited Lifetime
- Accessories and Mounts – 2 years
- Flashlights – 1 year
- Batteries – 90 days

Warranty Coverage:

To begin your warranty claim, you must have a Return Merchandise Authorization (RMA) number. To get your RMA number, please contact our warranty department by phone at 480-655-0100 ext. 1008, or by filling out the Return Merchandise Authorization Form on our website.

All of the following will immediately void all warranties:

- Customer negligence – The customer has modified the light and/or is not using it for the recommend application.
- Customer abuse – Damage to the light beyond normal wear and tear.
- Repair work done by unauthorized personnel without Rigid Industries' approval.
- If the light has been opened or any screws have been removed.

All warranties are non-transferable. Warranty terms and policies are subject to change without notice.

*For all information regarding the Rigid Industries' Limited Lifetime Warranty please call 855-760-5337 ext. 1008, email warranty@RigidIndustries.com, or visit our warranty page online at RigidIndustries.com/about/warranty.

Rigid Industries, Rigid, and D-Series are registered and/or unregistered trademarks of JST Performance, Inc. d/b/a Rigid Industries. IS-46508 REV2



FOG LIGHT KIT

*Lights Sold Separately

- 2011-2013 GMC® 2500/3500



PARTS INCLUDED

- Driver and Passenger Side Back Mounting Brackets (2)
- Driver and Passenger Side Front Trim Brackets (2)
- 5/16" Carriage Bolts (6)
- 5/16" Flat Washers (6)
- 5/16" Lock Washers (6)
- 5/16" Nuts
- M6 Flanged Locknuts (4)
- M6 Bolts (4)
- M6 Plastic Spacers (4)