200 Universal Dr. • Owosso, MI 48867
989-725-8354 • Fax 989-725-8409
1-800-433-3604

8 49030 00497 4

Installation Kit No. LIK-12 (103)

Contents:
4 Over Rail Fastener Clips

INSTALLATION INSTRUCTIONS

Preparations:
Clean and dry the cargo box of your truck.

Place Bedliner in the Truck box

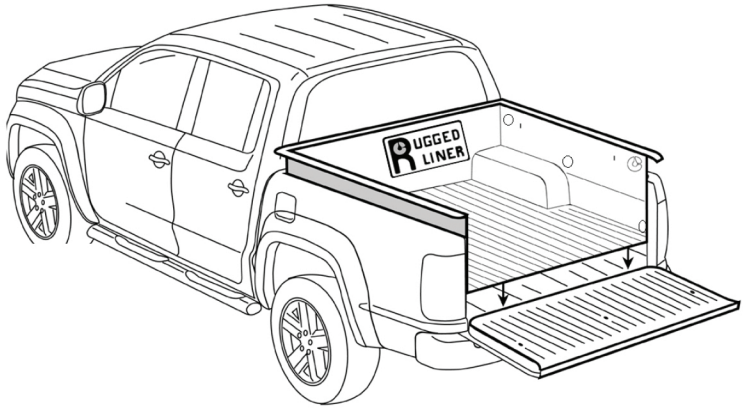

Step 1

Attach the bedliner to the truck cargo box by inserting one plastic clip through each one of the slots in the bedliner

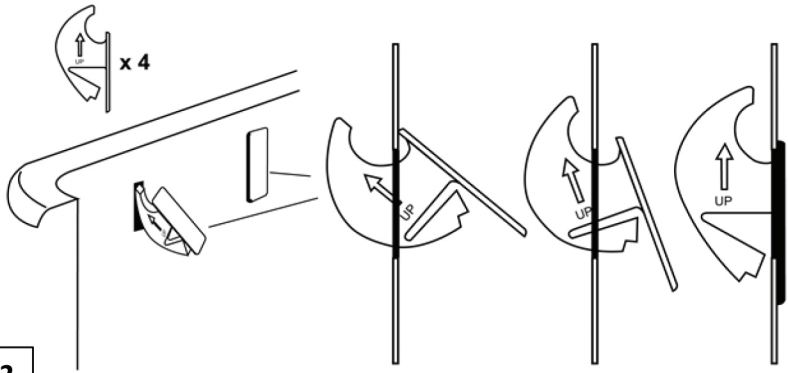

Step 2