


INSTALLATION SHEET

RUGGED LINER


22+ FORD MAVERICK UNDER RAIL BEDLINER & TAILGATE COVER

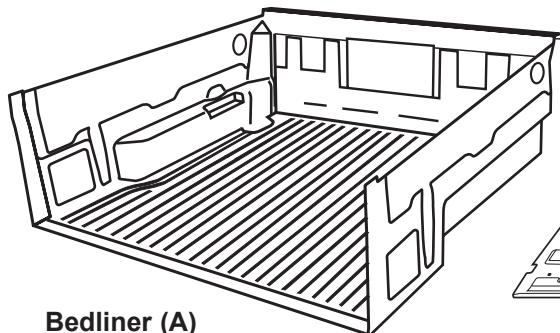

Bedliner (A)

LIST OF CONTENTS:

- (A) 1 - Bedliner
- (B) 1 - Tailgate Cover

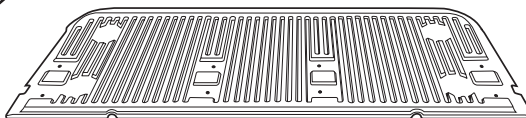

Tailgate Cover (B)

LIK82 KIT:

- (C) 8 - Spacers



MISSING PARTS???

Call Rugged Liner at

800-433-3604

Any required parts will be shipped to you directly.
(DO NOT return whole kit to store)

TOOLS REQUIRED:

- Screwdriver with T25 Torx bit in steps 3 & 4.
- Screwdriver with T30 Torx bit in steps 5 & 9.

CARE and MAINTENANCE RECOMMENDATIONS:

To protect the finish of this product, clean with soap and water, do not use abrasive substances.

1

PLEASE READ INSTRUCTIONS CAREFULLY BEFORE STARTING THE INSTALLATION.
One person can perform the installation but we recommend a two-person installation.



2


VEHICLE PREPARATION:

It is important that all areas of the cargo box of your truck are clean and free of debris prior to installing.




3

Remove the (8) factory screws from the metal access plate attached to the tailgate using the screwdriver with Torx (T25) bit. **(Save the screws).**

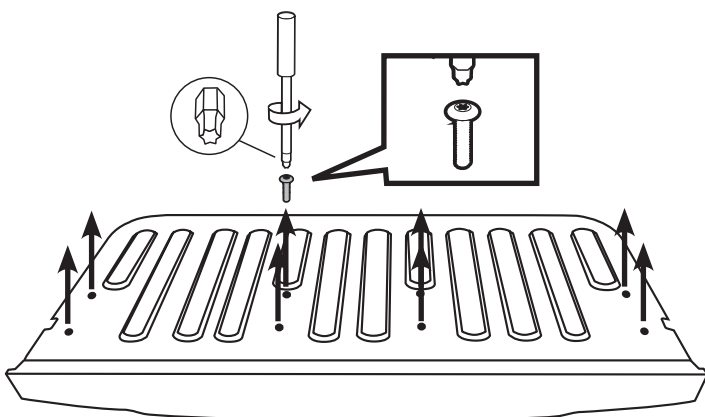

4

Place one of the spacers (C) provided on top of the (8) holes in the metal tailgate. Install the tailgate cover (B) over the spacers through the pre-drilled holes in the tailgate cover and metal tailgate. Then replace the screws that you saved in step 3.

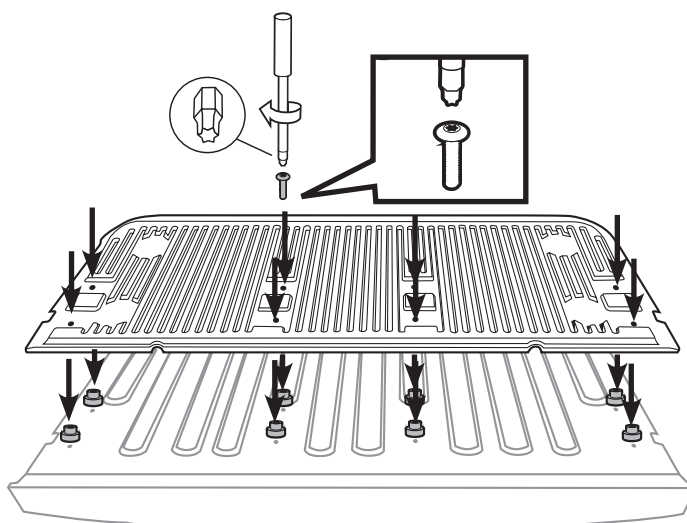


INSTALLATION SHEET


RUGGED LINER

22+ FORD MAVERICK


- 5** Remove front floor tie-downs (1 & 2) and rear top and bottom tie-downs (3,4,5,6) using the screwdriver with Torx (T30) bit.

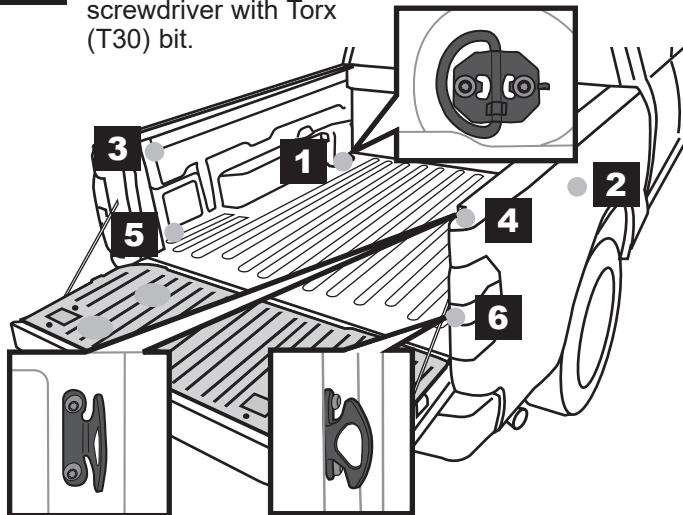


- 6** (1) Bend the front corners of the bulkhead downward to bend back into shape on driver and passenger side. (2) Then bend the edge of the D-pillar back in shape by pressing outward on driver and passenger side.

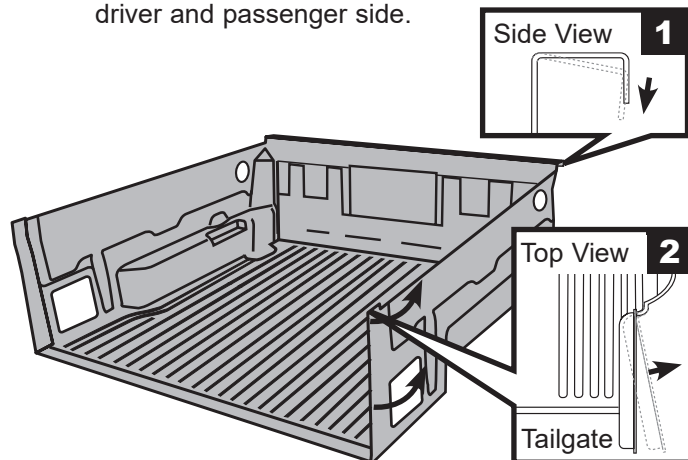

- 7** (1) Drop the bedliner (A) straight down into bed of truck. (2) Push the rear edges towards the center of the bedliner to facilitate the insertion.

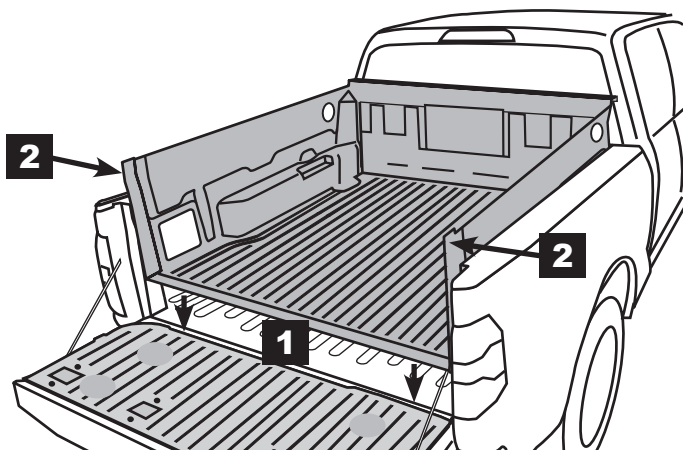

- 8** (1) Push the side walls under the side rail and insert the rear (2) D-pillar tab under the rail cap.

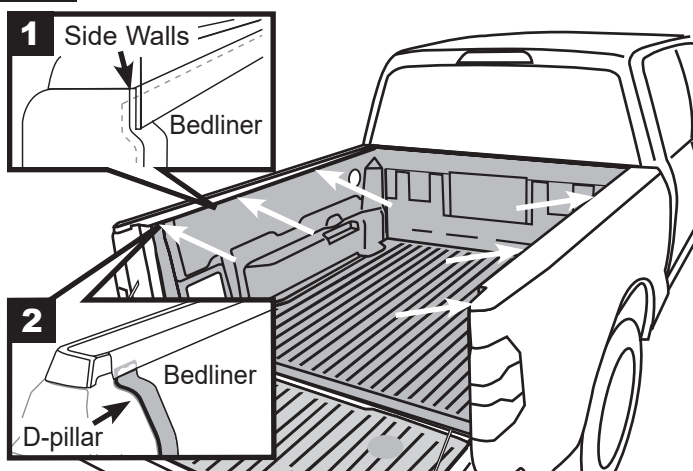

- 9** Replace front floor tie-downs (1 & 2) and rear top and bottom tie-downs (3,4,5,6) over the bedliner using the screwdriver with Torx (T30) bit.

