

A. CPE 6-02-0801, 0802, 0803
PTFE 6-02-0850, 0851, 0852
(6AN Hose Straight, 45*, or 90*)

B. 6-02-0407
-10 ORB to -6AN

C. 6-02-0404
-6 ORB to -6AN

D. 5/16 or 3/8 EFI Quick Connect
6-02-0103 or 6-02-0121


E. DWFF70 Fuel Filter
8-03-070-010K

F. DWR1000
6-1000-FRB

G. 01-15 Civic SI DW400 Module

H. 1/4" EFI Quick Connect
6-02-0120

I. 6-02-0401
-8 ORB to -6AN

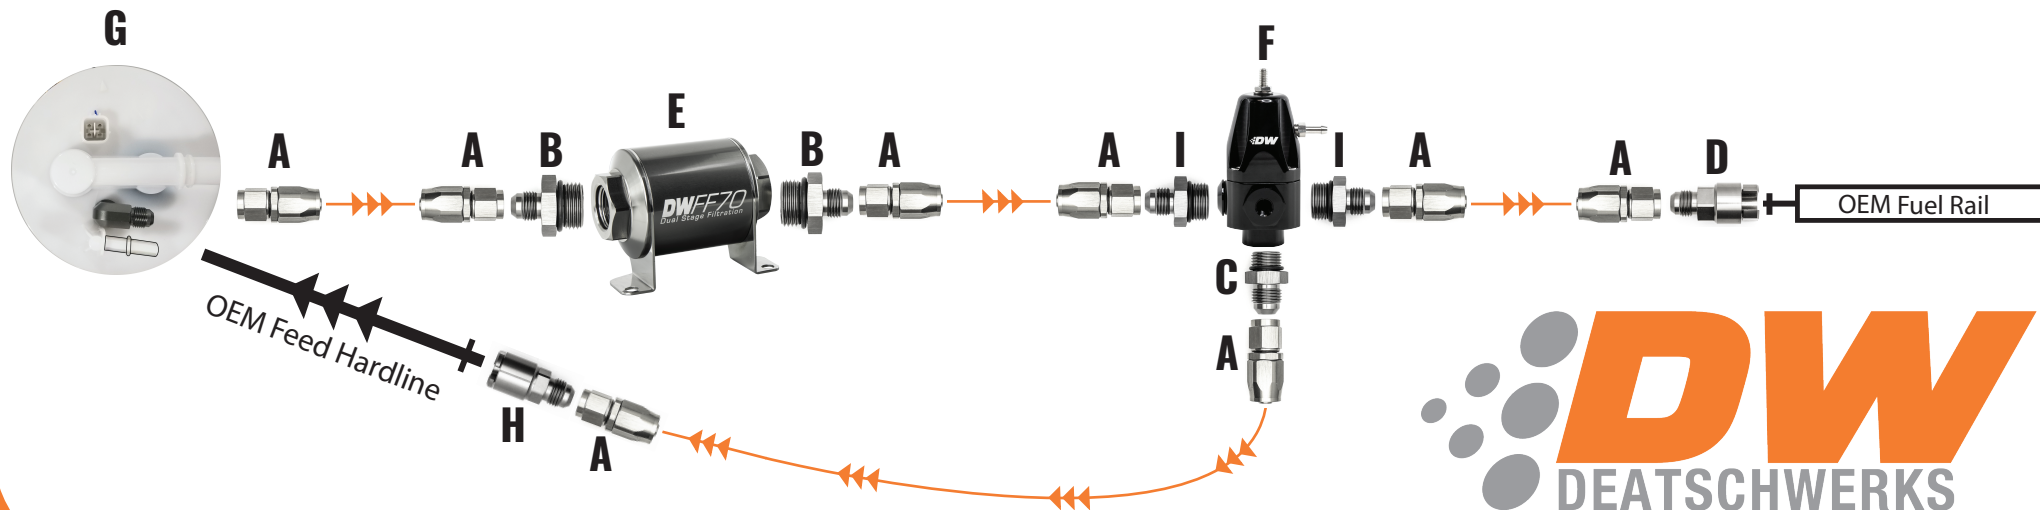

DW
DEATSCHWERKS