

PART NO. 50388

1998-2002 CAMARO
REPLACEMENT BOW-TIE GRILLE


PACKING LIST

<u>Item #</u>	<u>Check</u>	<u>Quantity</u>	<u>Part Number</u>	<u>Description</u>
1	☐	1	50244	Bow-Tie Grille
2	☐	1	50247	Emblem, Bow-Tie
3	☐	8	50249	Plastic Fastener
4	☐	1	*****	Installation Instructions


INSTALLATION INSTRUCTIONS

NOTE: SLP Performance parts recommends removal of the vehicle's front fascia assembly for proper removal of the OEM grille. Following 1-1 to 1-4. The OEM grille can, however, be removed by firmly pulling outward along its top edge until the three nuts on its plastic anchor studs disengage. Using the latter method may lead to the inability to re-use the OEM grille. If your state requires the use of a front license plate, refer to the installation instructions for SLP part number 59388, license plate mounting bracket kit.


1. Remove the vehicle's front fascia assembly by first removing the five (5) upper fascia retainers along the radiator support (see illustration 1-1). Remove the fascia's outer deflectors (see illustration 1-2). Remove the fascia outer support nuts and bolts (see illustration 1-3). Disconnect all electrical connectors to front lamps. Remove the three (3) lower fascia retainers along the impact bar (see illustration 1-4), and remove the front fascia assembly.

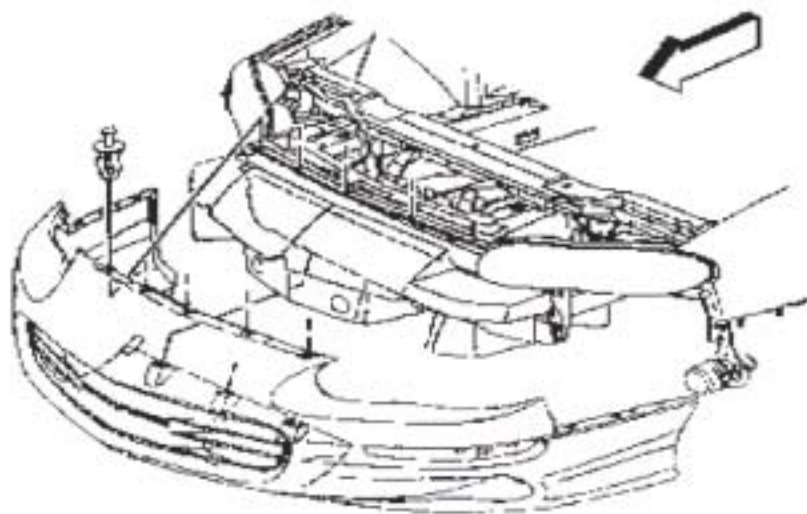


(Illustration 1-1)

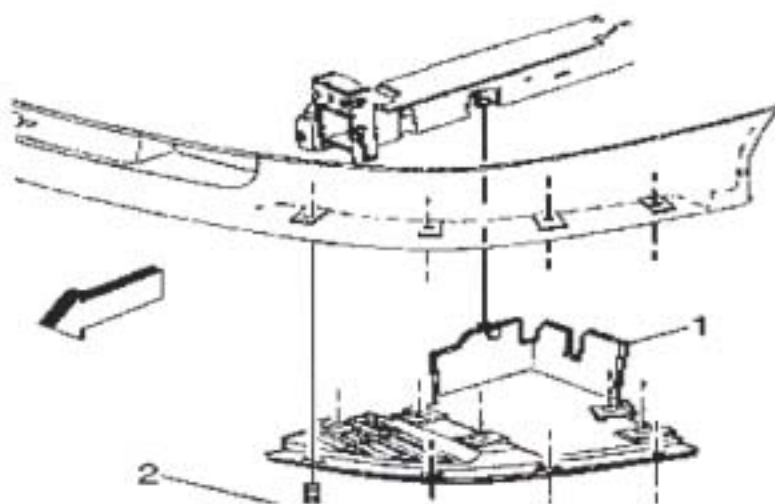

(Illustration 1-2)

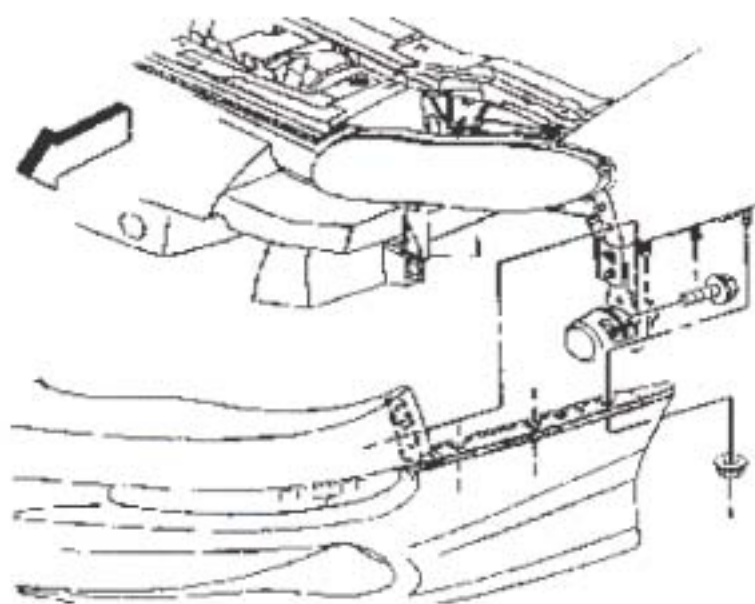


(Illustration 1-3)

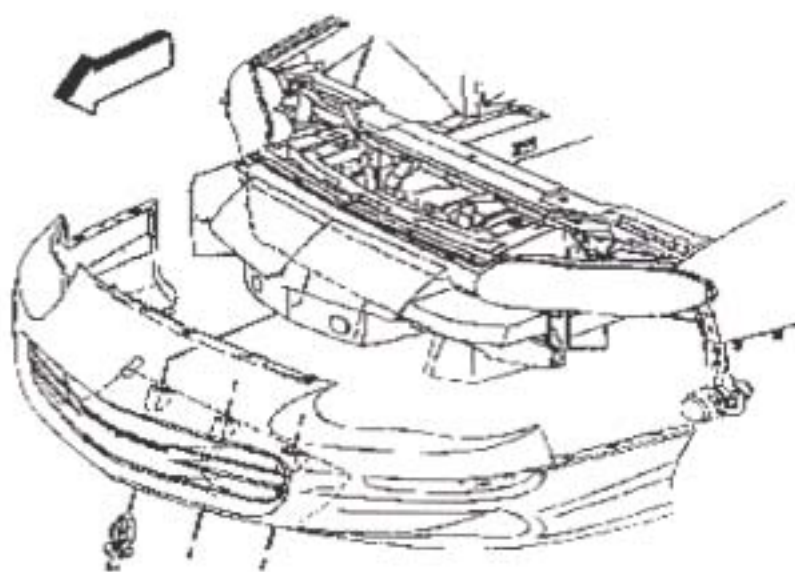

(Illustration 1-4)

2. With the fascia assembly on a clean work surface, remove the OEM grille nuts and grille retaining clips (see illustration 1-5).

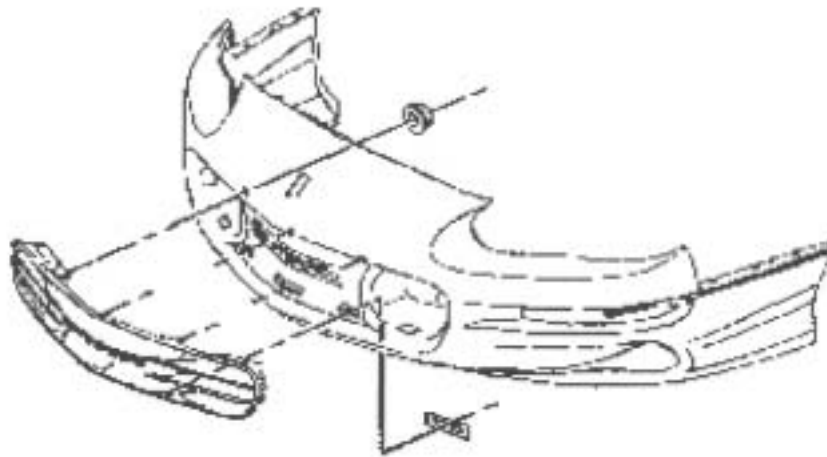

(Illustration 1-5)

3. Re-install the front fascia back onto the vehicle by following step #1 in reverse order.
4. Install the new Bow-Tie grille using the 8 plastic retaining fasteners provided.
5. The fascia will need to be drilled for the fasteners.
6. First, hold the grille in the fascia and mark through the 8 holes on the grill, where the fascia needs to be drilled.
7. Drill the fascia where marked with a .25" drill bit.
8. Put the grill back into the fascia and push the plastic fasteners through both the grille and the fascia with your thumb until the head is flush with the grill.
9. The installation is now complete.