

2011-12 Mustang GT, Long Tube Headers

PACKING LIST

Before installation, use this check list to make sure all necessary parts have been included.

ITEM	QTY	CHECK	PART NUMBER	DESCRIPTION
1.	1	☐	300416786C	Driver Side Header, coated, 2011 Mustang
2.	1	☐	300416787C	Pass Side Header, coated, 2011 Mustang
3.	11	☐	940080011	Bolt,M10-1.50X30mm Flange Head
4.	11	☐	940080012	Bolt,M10-1.25X30mm Flange Head
5.	1	☐	*****	Instructions

WARNING: SLP Recommends wearing safety glasses for the complete installation.

WARNING: SLP Recommends allowing the vehicle to cool (not running) for five hours before beginning installation.

WARNING: Too avoid the chance of electrical shock or damage to your vehicle's electrical system, disconnect both the negative and positive batter leads (in that order) at the battery.

INSTALLATION INSTRUCTIONS – #M30008

1. Remove the factory airbox.
2. Raise the vehicle to allow for a sufficient work area underneath the vehicle. A vehicle lift will make this installation much easier; however, raising the vehicle can be accomplished using ramps or a jack with jack stands.
3. Disconnect the wires from all the oxygen sensors and remove them from the pipes. Set aside for use later. Be sure to note which ones were in the rear and which ones were in the front.
4. Un-bolt the stock X-Pipe from the stock manifolds and remove it along with the exhaust system.
5. Remove the protective shielding under the vehicle along with the cross brace under the bell housing.

6. Completely remove the steering column intermediate shaft pinch bolt from the coupler on the steering rack and pull off the steering shaft. See Figure 1 below for bolt location. **DO NOT TURN THE STEERING WHEEL OR WHEELS ONCE THIS SHAFT IS TAKEN OFF!!!**



Figure 1: Remove this bolt from steering shaft

7. Remove the starter (3 bolts).
8. Place a dead-man or jack stand under the harmonic balancer. This will be used to hold up the front of the engine when removing the motor mounts in the next step.
9. Remove both the passenger and driver side motor mounts.
10. Remove the 8 nuts on the driver side exhaust manifold and remove the manifold. Do not be concerned if some of the studs come out with the nuts as you will need to remove 6 of the 8 manifold studs from the cylinder head anyway. Repeat this entire procedure on the passenger side. The studs that will remain in the head are the center two studs on the upper part of the cylinder head on each side (there are slots in the flanges of the SLP headers where the studs should remain in the head). Be sure to set aside 2 nuts for each side. Also set aside one additional stud and nut (apart) to use in step 17.
11. Remove the gasket and any remaining manifold studs. You will be reusing the factory MLS gaskets, so be sure to not discard or damage them.
12. Repeat steps 11 and 12 above to remove the passenger side manifold.

Note: Before beginning header installation take note of which thread pitch your header bolts are. Some models use a fine thread and some use a coarse thread. There are 2 sets of bolts (a fine and a coarse thread) included with the header kit. Be sure you are using the bolt with the correct thread pitch before installation!!!!!!!

13. Insert headers from the underside of the vehicle.
14. Place a gasket in place on the driver side cylinder head using the two studs left in the head. A couple pieces of tape to hold the gasket from falling off will help as well. Remove the tape once the header is up in place. See Figure 2.

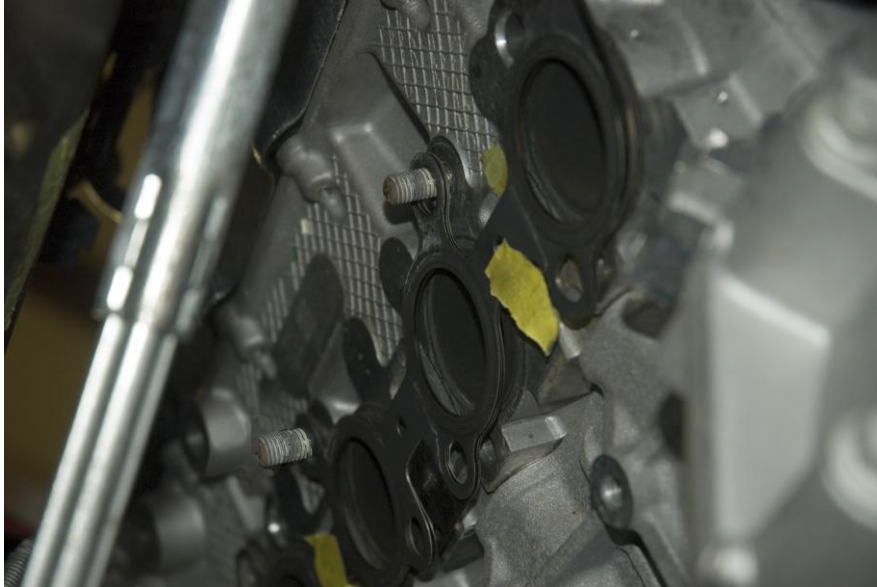


Figure 2: Taping of the header gasket (remove once header is in place)

15. Insert the stud (no nut) through the back of the flange as shown (there is a flat spot on the flange to identify which hole to place the stud in on the DS). Hand tighten the nut onto the stud. It will be fully tightened at a later time. See Figure 3 below.



Figure 3: Stud and nut inserted into DS header before installation

16. Raise the front of the driver side header into place (with the stud and nut hanging in the header). Slide the studs in the head into the slots in the flange and thread one of the supplied bolts into the lowermost hole. Be sure the gasket is lined up properly.
17. Install the remainder of the supplied header bolts hand tight along with the 2 nuts.

18. Torque all the header bolts to 18 ft/lbs starting at the upper rearmost bolt and working forwards while alternating between the upper and lower bolts.
19. Repeat steps 15 through 20, for the passenger side header with the exception of step 17. You do not need to use a third stud on this side.
20. Reinstall the both motor mounts and the starter.
21. Reinstall the steering column intermediate shaft onto the steering rack and torque the coupler pinch bolt to 18 ft/lbs.
22. Continue with installation of exhaust system.