


TV Cable Corrector Kit

Part No.
AS1-01K

- Springs (5)
- Stops (5)

Patent Nos. 5,638,721 & 5,727,425

Ford AOD, AXOD, GM 200-4R, 200C, 4L60

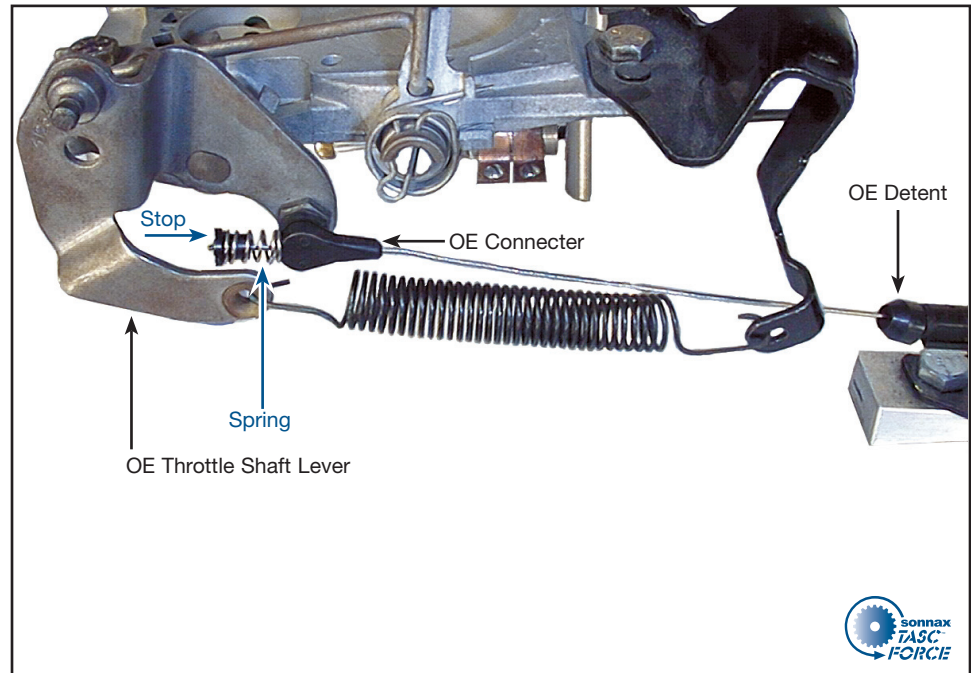

1. Disconnect TV cable attachment element from throttle shaft lever.
2. Slide TV cable attachment element down TV cable slightly.
3. Slide spring over end of TV cable until it butts with the TV cable attachment element.
4. Slide TV cable above spring into slot of retainer, flanged end away from spring.
5. Slide spring over retainer until it snaps into place and butts with the retainer flange.
6. Reconnect the TV attachment element onto the throttle shaft lever.

NOTE: When the throttle shaft lever is stroked by hand, the spring collapses fully. This is not a problem because the amount of pull is less when the engine is running. Thus the spring will not fully compress unless the throttle is stroked to full throttle position.