

TCI[®] 528321

Circle Track Transmission Pan

Kit Contains:

One (1) Kick Out Transmission Pan
One (1) Offset Filter Adapter (2 pcs.)
Two (2) Filter Gaskets
One (1) Pan Gasket
Three (3) 5/16" - 18 x 3-1/4" Bolts
Two (2) 1/4" - 20 x 3/4" Flat Head Cap Screws
Two (2) 1/4" - 20 x 3/4" Button Head Cap Screws

Step 1 Remove existing pan and filter. If your filter is relatively new, then it may be reused. A new screen filter may be purchased from your TCI[®] dealer under TCI[®] part number 628500.

Step 2 Be sure to remove all pan gasket material from the pan rail on the transmission.

Step 3 Orient the filter adapter as shown in **Figure 1**. Make sure that the adapter half piece with the threaded holes is facing towards the valve body. Put a filter gasket between the adapter and the valve body and secure the adapter using the two (2) Flat Head screws supplied with this kit.

Step 4 Install the filter and gasket onto the adapter and secure with the two (2) Button Head screws.

Step 5 Install the pan and pan gasket and torque attaching bolts to 12 foot pounds.

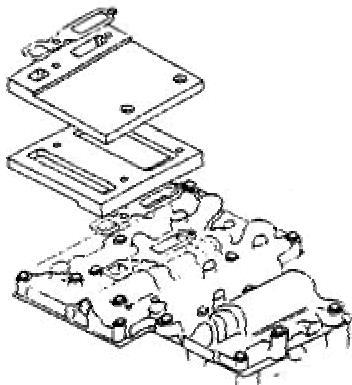


Photo 1