




www.vintageair.com

280ZX Timing Marker Kit (191149)

1. Remove the OEM timing markers and replace the bolts on the driver-side of the timing cover.
2. Remove both timing cover bolts from the location shown in Figure 1, below, and discard the top bolt.
3. Install the timing marker using an M6 x 1.0 x 70mm flange head bolt and 13 x 6.3 x 30mm spacer on the top hole (See Figure 1, below). Re-use the bottom bolt.

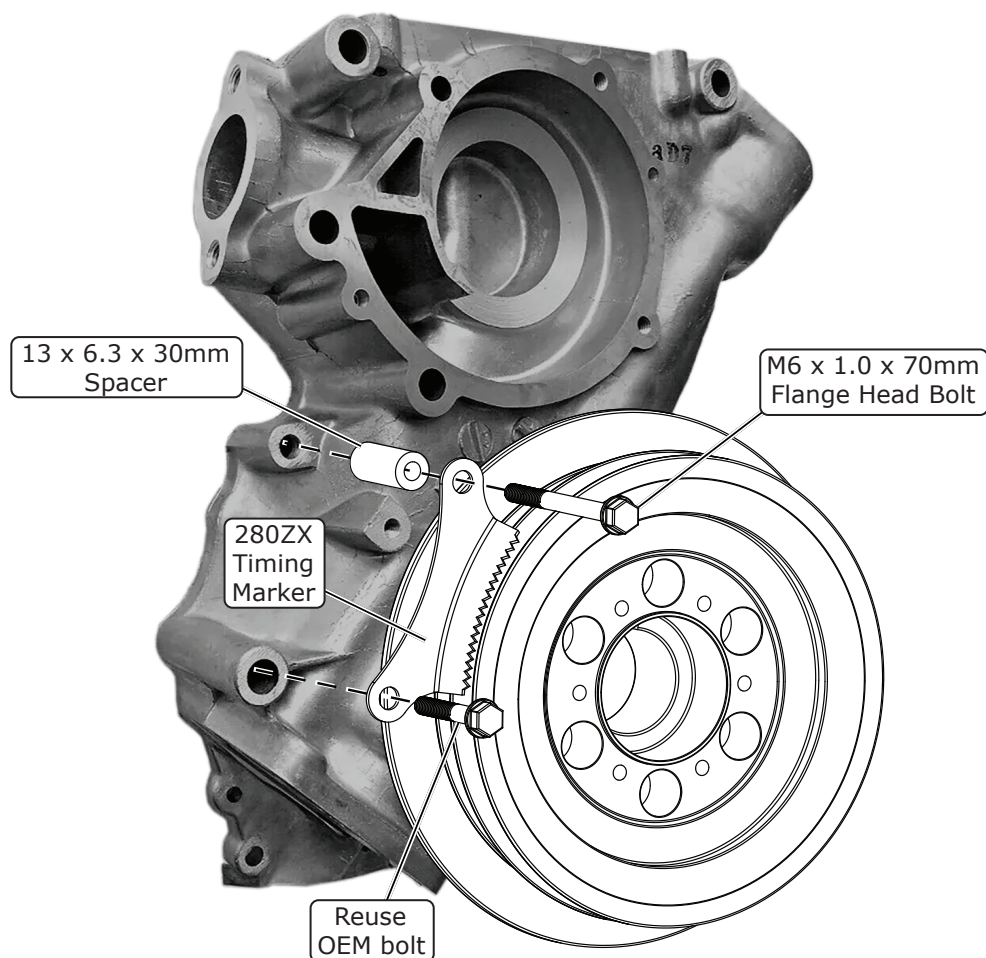

Packing List:

No.	Qty.	Part No.	Description
1.	1	735017	280ZX Timing Marker
2.	1	180062	Spacer, 13 x 6.3 x 30mm
3.	1	185011	Bolt, M6 x 1.0 x 70mm, Flange Head

Checked By: _____
Packed By: _____
Date: _____

18865 Goll St. San Antonio, TX 78266
Phone: 800-862-6658
Sales: sales@vintageair.com
Tech Support: tech@vintageair.com
www.vintageair.com