



www.vintageair.com

Packing List: 1967-68 Ford Mustang Center Louver Kit (492096)

1. Install (2) S-clips onto the center louver hose adapter (See Photo 1, below). **NOTE: The S-clip has a long and short tab (See Photo 2, below). When installing the S-clips onto the hose adapter, make sure the long tab is situated on the outside and the short tab on the inside (See Photo 1, below).**
2. Install the center louver hose adapter onto the outside of the OEM center louver assembly through the radio opening.

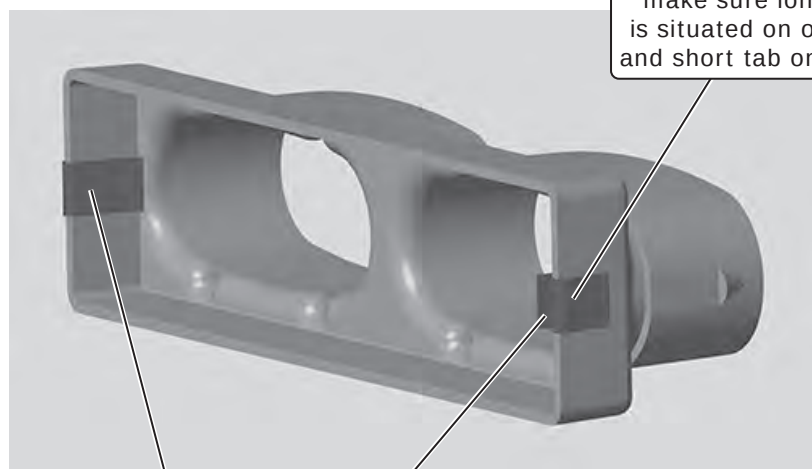


Photo 1



Photo 2

No.	Qty.	Part No.	Description
1.	1	492095	Center Louver
2.	1	626679	Center Louver, 2", Hose Adapter
3.	1	627051	Center Louver, 2 1/2", Hose Adapter
4.	2	65980-VUE	S-Clips

Checked By: _____
Packed By: _____
Date: _____


1



2



3

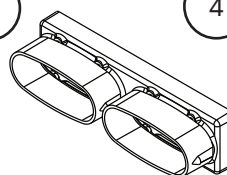

4



**NOTE: Images may not depict actual parts and quantities.
Refer to packing list for actual parts and quantities.**