




MPFI SPACER KIT
FITS 1997-2002 DODGE DAKOTA &
DURANGO 3.9, 5.2 & 5.9L (NON HEMI) V8'S
2516 TORQUE CURVE MPFI SPACER
2616 WIDE OPEN MPFI SPACER
2716 SMOOTH BORE MPFI SPACER

INSTALLATION INSTRUCTIONS

Important! Read all instructions before you begin installation.

<u>PART LIST</u>		<u>TOOL LIST</u>
1 - Trans-Dapt Perf. Spacer	4 - 5/16"-18 X 3" Bolts	1/2" Socket
2 - Gaskets	4 - 5/16" Lock Washers	Standard Screwdriver

1. Disconnect negative (-) Battery Cable.
2. Remove Air Cleaner assembly
3. Remove (4) bolts from throttle body.
4. Remove throttle body intake assembly using a 1/2" socket.
5. Lift Throttle body
6. Remove gasket and clean surfaces.
7. Install the Trans-Dapt Spacer with (2) gaskets (**Ref "A"**).
 - A. Place one gasket between the throttle body and Trans-Dapt Spacer.
 - B. Place second gasket between the Trans-Dapt Spacer and manifold.
8. Replace (4) 5/16-18 X 3 1/4" Bolts and (4) 5/16" Lock washers, using **Step 3** as an example (**Ref "B"**).
9. Inspect & Test throttle linkage for full Open & Closed travel before driving. (Some cruise or kickdown cables may require adjustment. Please refer to your vehicles service manual for proper adjusting.)
10. Reconnect battery cable. Enjoy!

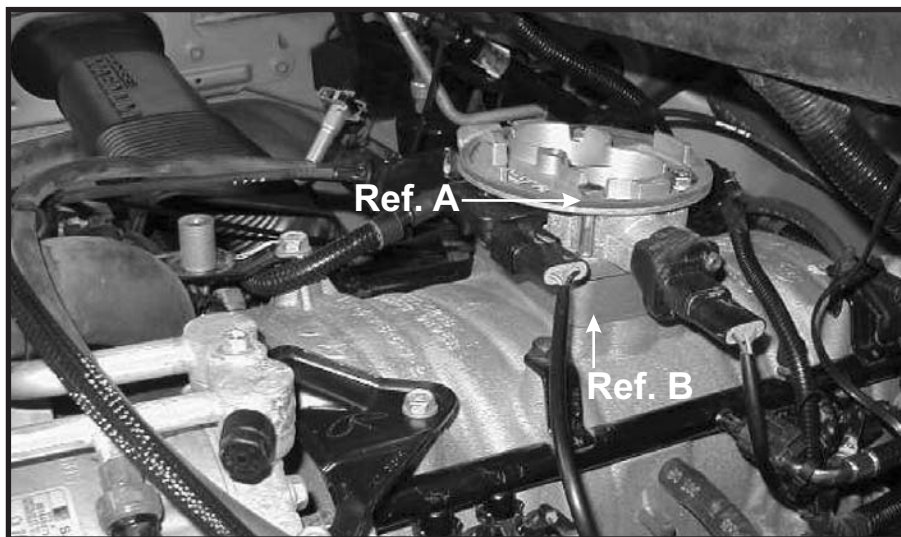

Ref. A- Trans-Dapt Throttle Body Spacer and 2 Gasket

Ref. B- (4) 5/16"-18 X 3 1/4" Bolts (4) 5/16" Lock Washers

12438 Putnam Street • Whittier, CA 90602 tel (562) 921-0404 • fax (562) 921-7515
website: www.tdperformance.com • email: techsupport@tdperformance.com

2516-2616-2716-instructionsheet-032806.cdr