



**PART #2565 TORQUE CURVE
MPFI SPACER KIT**

**PART #2765 SMOOTH BORE
MPFI SPACER KIT**

1996-00 5.0L & 5.7L Vortec

INSTALLATION INSTRUCTIONS


THIS KIT CONTAINS

- | | |
|-----------------------------|-------------------------------|
| 1 - Trans-Dapt Perf. Spacer | 1 - 6mm x 3½" Stud (For Rear) |
| 3 - 6mm x 60mm Bolts | 1 - 6mm Nut |
| 3 - 6mm Flat Washers | 1 - Spacer Tube |

TOOL LIST

- Flat Head Screwdriver
- 10mm Wrench
- 10mm Socket


1. Disconnect negative (-) Battery Cable
2. Remove air cleaner housing from throttle body unit.
3. Using 10mm socket remove two nuts from front side of throttle body. **(Ref. C)**
4. Remove air cleaner housing riser and (1) studnut from back side of throttle body. **(Ref. A)**
5. Lift throttle body and clean gasket surfaces.
6. Reinstall throttle body **(Ref. B)**, spacer, and gasket **(Ref. E)**. Be sure to install the gasket between the throttle body and the spacer only, reuse the rubber seal on the intake manifold.
7. Remove throttle linkage bracket and studnut.
8. Install Throttle body spacer tube under throttle linkage bracket. **(Ref. D)**
9. Inspect and test throttle linkage for full open & closed travel before driving. Some cruise or kickdown cables may require adjustment. Refer to service manual.
10. Reinstall air cleaner housing. **(Refer to Step No. 2)**
11. Re-connect negative (-) Battery Cable.

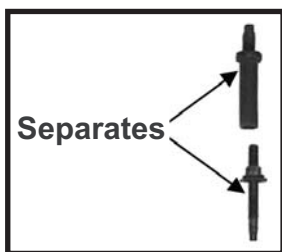

Ref. A- 6mm x 3½ Stud, 6mm Flat Washer, 6mm Nut

Ref. B- Throttle Body

Ref. C- 6mm x 60 (2) Bolt, 6mm Flat Washers

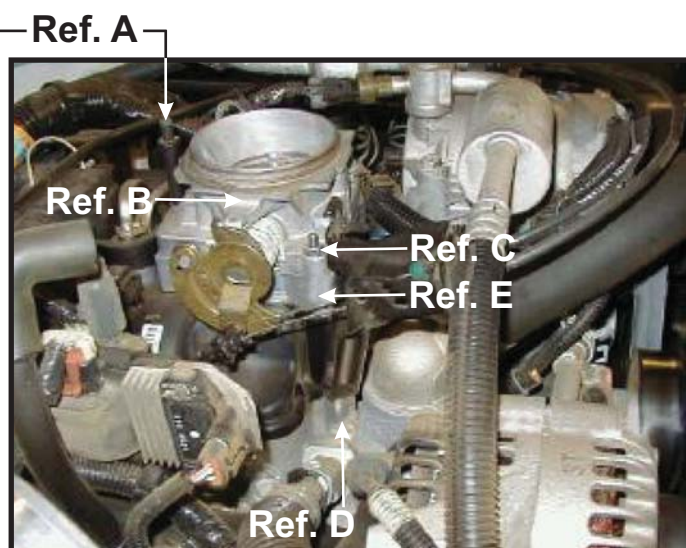

Ref. D- Throttle Spacer 6mm x 60 Bolt & 6mm Flat Washer

Ref. E- Throttle Body Spacer and Gasket