



**PART #2572 TORQUE CURVE
MPFI SPACER KIT**

**PART #2772 SMOOTH BORE
MPFI SPACER KIT**

FITS


1991-06 Jeep YJ/XJ/Cherokee, 4.0L
1991-99 Jeep YJ/XJ/Wrangler, 2.5L 4cyl.

INSTALLATION INSTRUCTIONS

Important! Read all instructions before you begin installation.

PART LIST		TOOL LIST
1 - Trans-Dapt Perf. Spacer	7 - Washers	10mm Socket
2 - Gaskets	3 - 6mm-1.0 x 35mm Bolts	or wrench
4 - 6mm-1.0 x 50mm Bolts	3 - Linkage Spacer (Tubes 1")	Standard Screwdriver

1. Disconnect negative (-) Battery Cable.
2. Remove air duct assembly from the throttle body.
3. Remove (4) bolts from throttle body (**Ref. A**).
4. Remove gasket and clean surfaces.
5. Install the Trans-Dapt Spacer with (2) gaskets (**Ref. B**).
 - A. One gasket located between throttle body and Trans-Dapt Spacer.
 - B. One gasket located between Trans-Dapt Spacer and manifold. Be sure to follow the directions on the spacer for correct spacer installation.
6. Replace (4) bolts (**Ref. A**) using **Step # 3** as an example. (Torque to factory specs.)
7. Locate and install (3) spacer tubes under linkage bracket (**Ref. C**) using (3) 6mm x 40mm bolts.
8. Inspect & Test throttle linkage for smooth full open & closed travel before driving. Some cruise or kick down cables may require adjustment. Refer to service manual.
9. Reinstall throttle body air intake assembly using **Step # 3** as an example.
10. Double-check your work. Reconnect the battery cable.

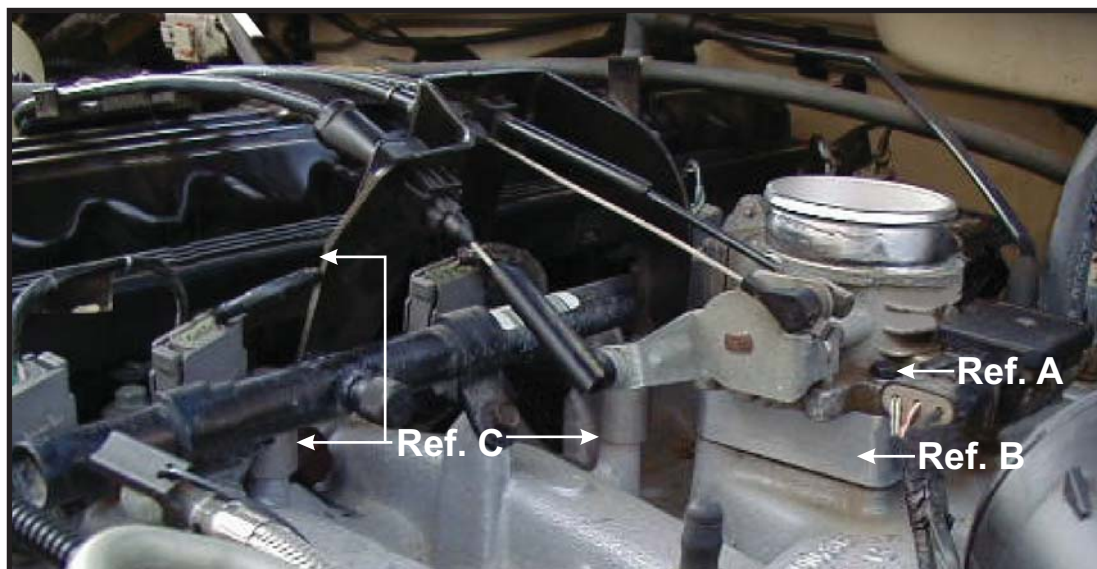

Ref. A- (4) 6mm X 50mm Bolts and (4) 6mm Washers

Ref. B- (1) Trans-Dapt Spacer and (2) Gaskets

Ref. C- (3) Spacers 1" (3) 6mm X 40mm Bolts