



MPFI SPACER KIT

FITS 96-00 CHEVY/GMC 7.4L VORTEC
TRUCKS, SUV's & MOTORHOMES
2567 Torque Curve MPFI SPACER
2767 SMOOTH MPFI SPACER

INSTALLATION INSTRUCTIONS

Important! Read all instructions before you begin installation.


PART LIST

- | | |
|--------------------------|---------------------------------|
| 1 - Trans-Dapt Spacer | 2 - 5/16"-18 spacer plate bolts |
| 2 - Gaskets (Part #2079) | 2 - 1" linkage spacer plates |
| 3 - 6mm x 60mm bolts | 1 - E.O. emissions decal |
| 3 - 6mm flat washers | |

TOOL LIST

- 3/16" Hex Key
10mm Socket
Standard Screwdriver

1. Remove air cleaner housing from throttle body unit.
2. Using 10mm socket remove (3) bolts from front side of throttle body. (**Ref. B**)
3. Remove air cleaner mounting stud and bolt from throttle linkage bracket and save.
4. Install (2) linkage spacer plate using (2) 6mm bolts. (**Ref. D**)
5. Install air cleaner mounting stud (Ref. Step No. 3) using 5/16" - 18 nut and lock washer.
6. Install Trans-Dapt spacer (**Ref. A**) with (2) gaskets.
A. One gasket located between throttle body and spacer plate.
B. One gasket located between spacer plate and intake manifold.
7. Replace mounting bolts (3) with 6mm x 60mm bolts. Torque to 6ft lbs.
8. **Inspect** and **test** throttle linkage for full **open** & **closed** travel **before** driving. Some cruise or kickdown cables may require adjustment. Refer to service manual.
9. Reinstall air cleaner housing.

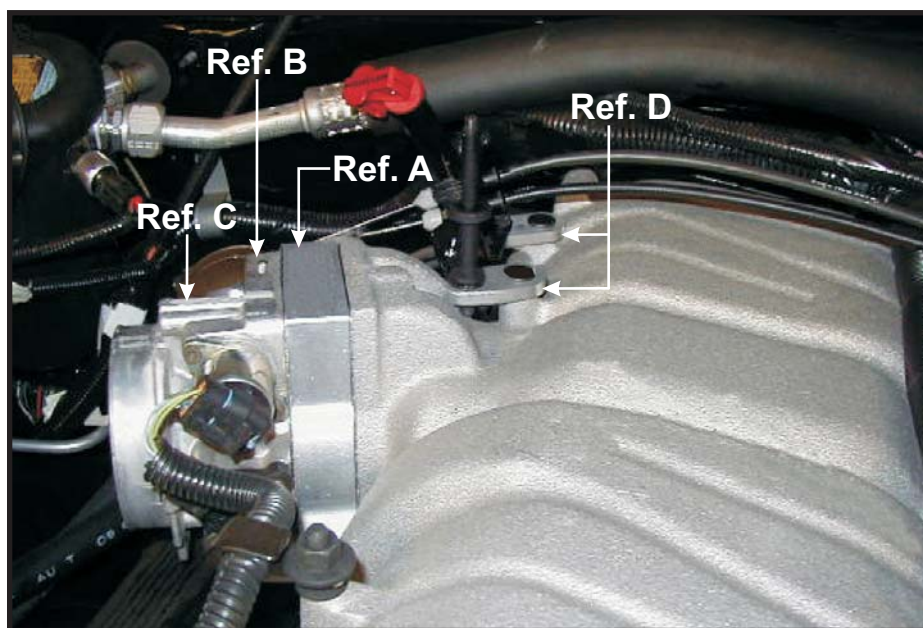

Ref. A- Trans-Dapt Throttle Body Spacer and 2 Gasket

Ref. B- (3) 6mm x 60mm Bolts, (3) 6mm Washers

Ref. C- Throttle Body

Ref. D- (2) 1" Linkage spacer plates, (2) 5/16" - 18 flat head bolts, Factory bolts (reused)

12438 Putnam Street • Whittier, CA 90602 tel (562) 921-0404 • fax (562) 921-7515
website: www.tdperformance.com • email: techsupport@tdperformance.com

2567/2767-instructionsheet-121405.cdr