


## PARTS LIST:

| Qty | Description                                           | Qty | Description                       |
|-----|-------------------------------------------------------|-----|-----------------------------------|
| 1   | Single Tube Rear Bumper Guard                         | 14  | 12mm x 37mm OD x 3mm Flat Washers |
| 1   | Driver/Left Mounting Bracket                          | 10  | 12mm Lock Washers                 |
| 1   | Passenger/Right Mounting Bracket                      | 4   | 12-1.75mm STD Thread Hex Nuts     |
| 1   | Driver/Left Frame Bracket                             | 4   | 8-1.25mm x 25mm Hex Bolts         |
| 1   | Passenger/Right Frame Bracket                         | 4   | 8mm x 24mm OD x 2mm Flat Washers  |
| 6   | 12-1.25mm x 40mm <b>Special Fine Thread Hex Bolts</b> | 4   | 8mm Lock Washers                  |
| 4   | 12-1.75mm x 35mm STD Thread Hex Bolts                 |     |                                   |

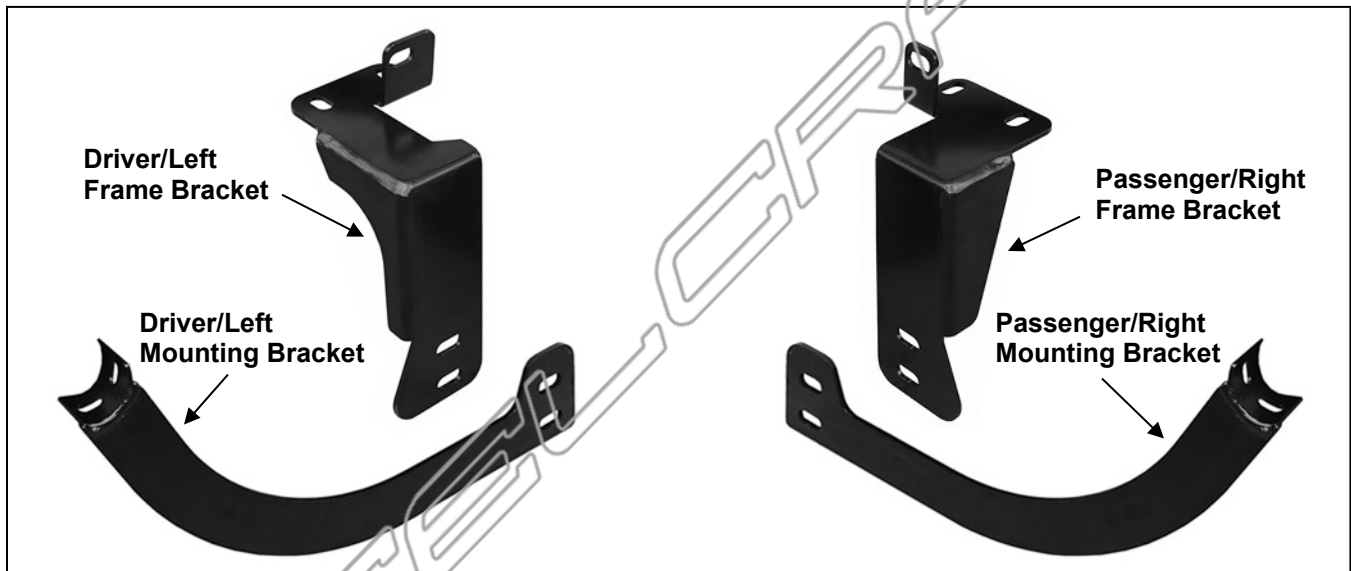

## PROCEDURE:

**REMOVE CONTENTS FROM BOX. VERIFY ALL PARTS ARE PRESENT. READ INSTRUCTIONS CAREFULLY BEFORE STARTING INSTALLATION. INSTALLATION MAY INTERFERE WITH REAR MOUNTED SENSORS.**

**IMPORTANT!** Due to close proximity of the Frame Bracket to the muffler, allow muffler to cool before starting the installation.

1. Start installation at the passenger side of the vehicle. Remove the plastic splash guard if equipped, **(Figure 1)**. Remove the factory tie down bracket attached to the bottom and side of the passenger side frame channel, **(Figures 1 & 2)**.
2. Select the passenger side Frame Bracket, **(Figure 4A)**. Hold the Frame Bracket up to and over the factory threaded holes in the frame channel. Bolt the Bracket to the frame channel with (3) 12-1.25mm x 40mm **Special Fine Thread Hex Bolts**, (3) 12mm Lock Washers and (3) 12mm Flat Washers, **(Figure 4B)**. Do not tighten hardware at this time.
3. Attach the passenger side Bumper Guard Bracket to the inside of the Frame Bracket with the included (2) 12mm x 35mm Hex Bolts, (4) 12mm Flat Washers, (2) 12mm Lock Washers and (2) 12mm Hex Nuts, **(Figure 5)**. Do not tighten at this time
4. Repeat **Steps 1—3** for driver side Frame and Mounting Bracket installation, **(Figure 3)**.



5. Carefully unwrap and position the Bumper Guard onto the Mounting Brackets. Line up the threaded inserts with the Brackets. Attach the tube to the Brackets with (4) 8mm x 25mm Hex Bolts, (4) 8mm Lock Washers and (4) 8mm Flat Washers, **(Figure 5)**.
6. Align and adjust the Rear Bumper Guard properly and tighten all hardware at this time.
7. Do periodic inspections to the installation to make sure that all hardware is secure and tight.

**To protect your investment**, wax this product after installing. Regular waxing is recommended to add a protective layer over the finish. Do not use any type of polish or wax that may contain abrasives that could damage the finish.


**For stainless steel:** Aluminum polish may be used to polish small scratches and scuffs on the finish. Mild soap may be used also to clean the Bumper Guard.

**For gloss black finishes:** Mild soap may be used to clean the Bumper Guard.

### Passenger Side Installation Pictured

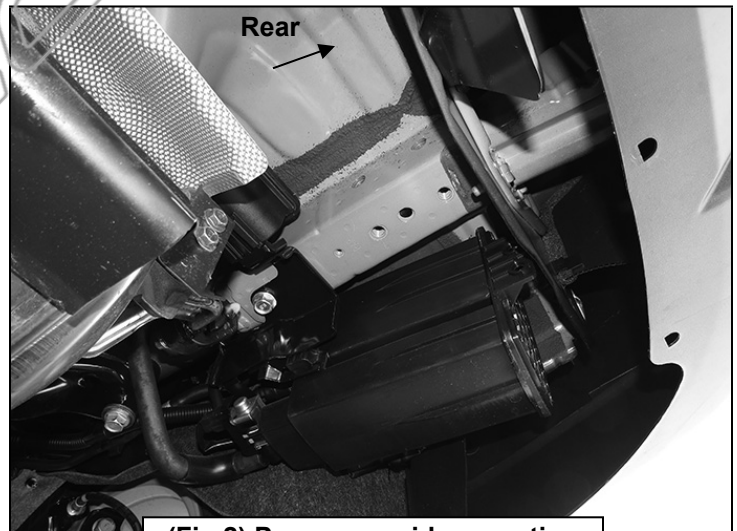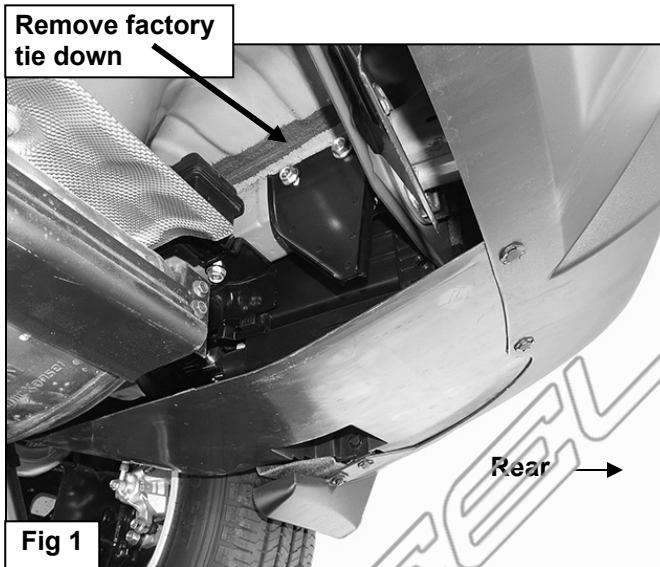


(Fig 2) Passenger side mounting location (cover removed)

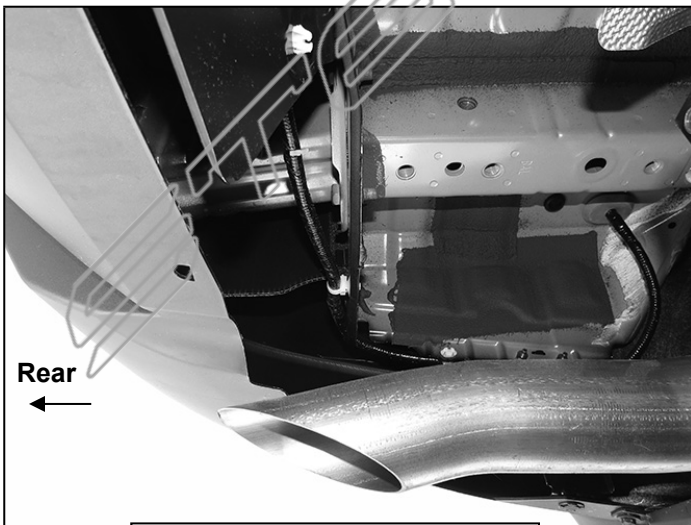


(Fig 3) Driver side mounting location (cover removed)


REAR BUMPER GUARD (Single Tube)  
2014 NISSAN ROGUE (EXCLUDING 2014 NISSAN ROGUE SELECT)  
**Passenger Side Installation Pictured**

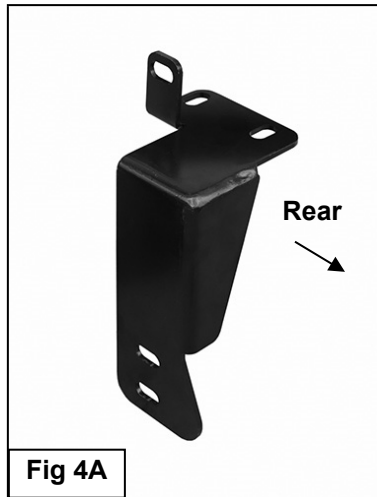

- (3) 12-1.25mm x 40mm Special Fine Thread Hex Bolts
- (3) 12mm Lock Washers
- (3) 12mm Flat Washers

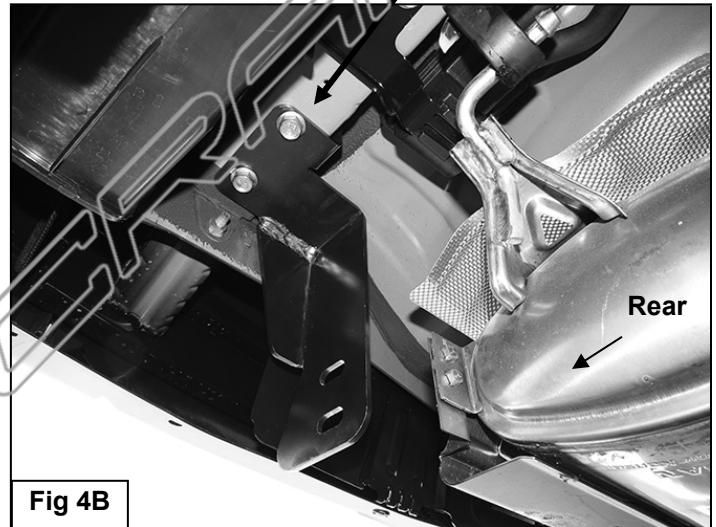

- 8mm x 25mm Hex Bolts
- 8mm Lock Washers
- 8mm Flat Washers

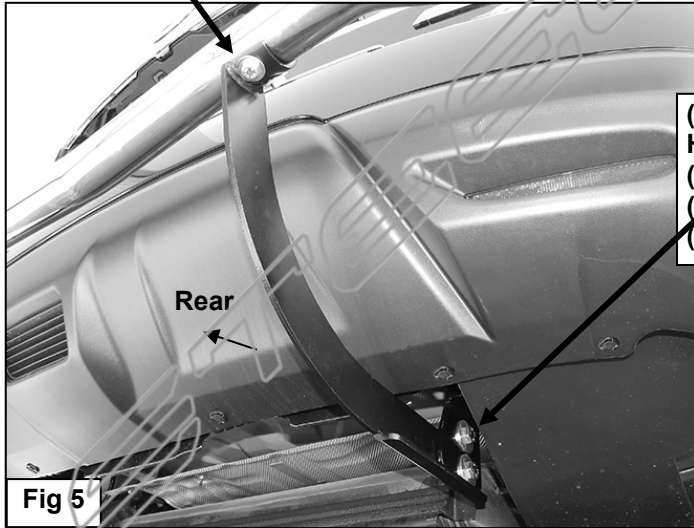

- (2) 12-1.75mm x 35mm Hex Bolts
- (4) 12mm Flat Washers
- (2) 12mm Lock Washers
- (2) 12mm Hex Nuts

