



INSTALLATION INSTRUCTIONS




APPLICATION: BUMPER MOUNT 30" LED BAR / 2007 & UP JEEP WRANGLER JK
APP PART # 09-41065

ITEM	QUANTITY	DESCRIPTION	TOOLS NEEDED
1	1	DRIVER SIDE KNIFE BRACKET	RATCHET
2	1	PASSENGER SIDE KNIFE BRACKET	TORQUE WRENCH
3	1	DRIVER SIDE MOUNTING BRACKET	ALLEN WRENCH
4	1	PASSENGER SIDE MOUNTING BRACKET	16MM SOCKET
5	4	M10 HEX HEAD CAP SCREW (YELLOW ZINC)	10MM SOCKET
6	4	M10 SPLIT LOCK WASHER (YELLOW ZINC)	18MM SOCKET
7	4	M10 FLAT WASHER OD 30MM (YELLOW ZINC)	18MM WRENCH
8	2	M10 HEX HEAD FLANGE BOLT (YELLOW ZINC)	15MM WRENCH
9	2	M10 CARRIAGE SQUARE NECK BOLT (YELLOW ZINC)	
10	4	M10 FLANGE NUT (YELLOW ZINC)	

ANTI-SEIZE LUBRICANT MUST BE USED ON ALL STAINLESS STEEL FASTENERS TO PREVENT THREAD DAMAGE AND GALLING .

1. Remove contents from box, verify if all parts listed are present and undamaged. Carefully read and understand all instructions before attempting installation.
2. Trim designated area on the plastic filler panel between the bumper and grille or remove plastic cover completely, see Figure 1
3. Remove M12 nuts on bumper to loosen it then pull the bumper forward, see Figure 2.
4. Slide passenger side mounting bracket into the designate slot in the frame. Align the holes on the bracket with the holes on the frame, loosely install with supplied M10 hardware. See Figure 3 and Assembly 1.
5. Push the bumper back into the stock location.
6. Loosely install the knife brackets to the previously installed mounting brackets with the supplied M0 hardware. See Figure 4 and Assembly 2.
7. Loosely install 30" LED light bar using light bar hardware.
8. Align and adjust as needed then torque: M10 hardware to 20-25 ft-lbs. and M12 hardware to 50-55 ft-lbs.

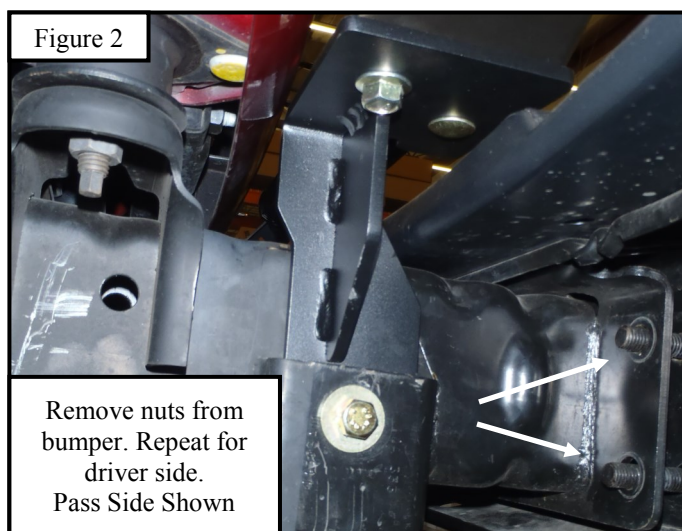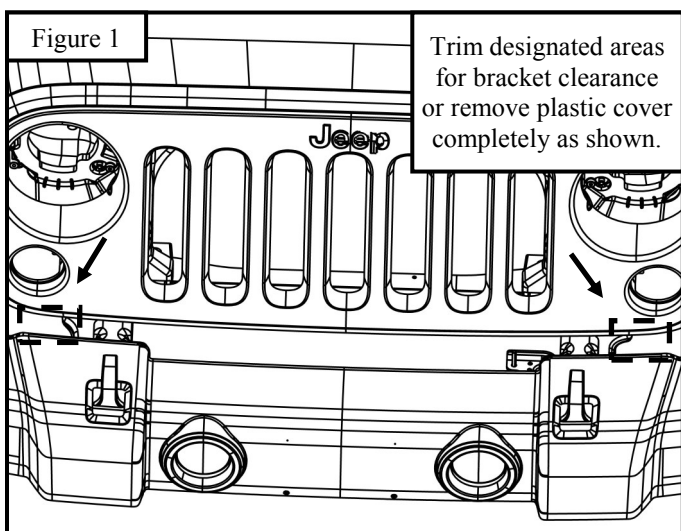

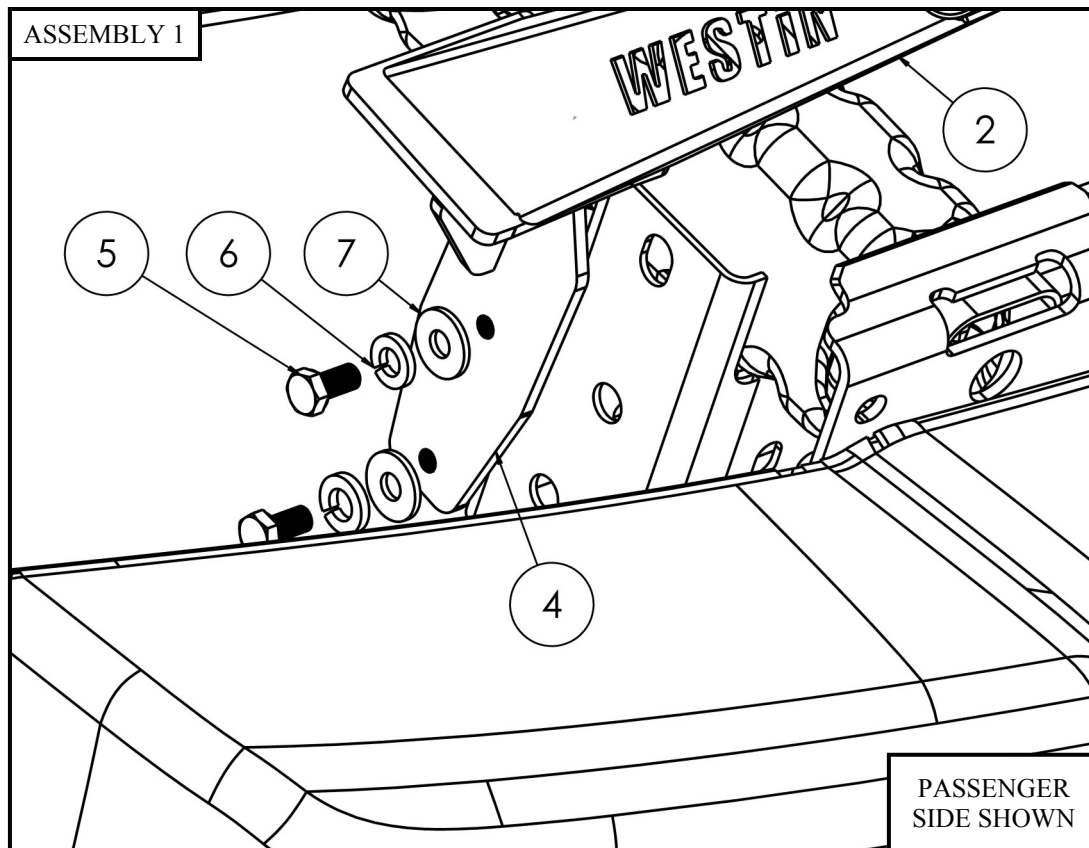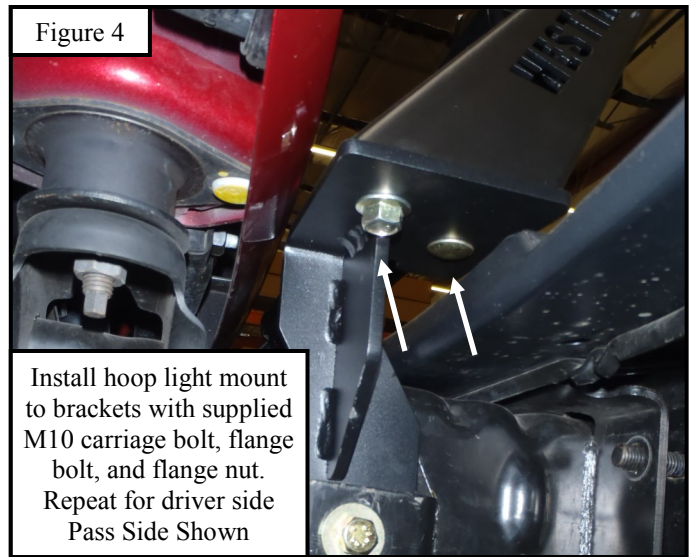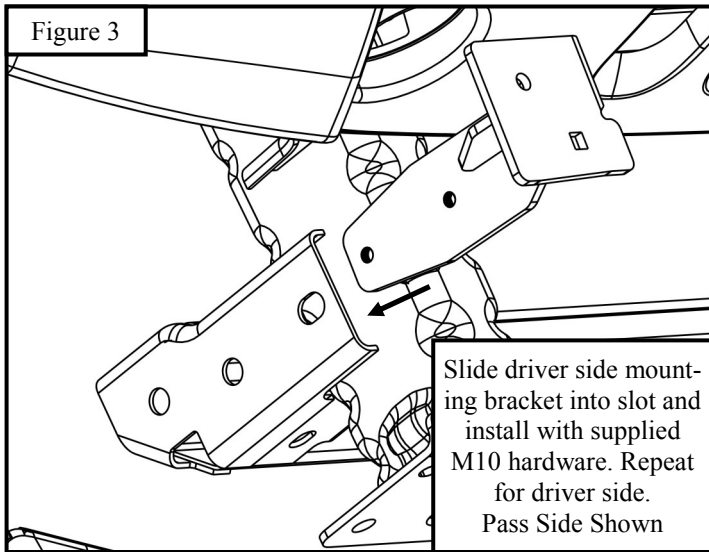

Westin Automotive Products, Inc.
320 Covina Blvd
San Dimas, Ca. 91773



P.N.: 75-3093 REV A

ECO #: W14-0107

2

Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846
www.westinautomotive.com

DATE: 1/15/15

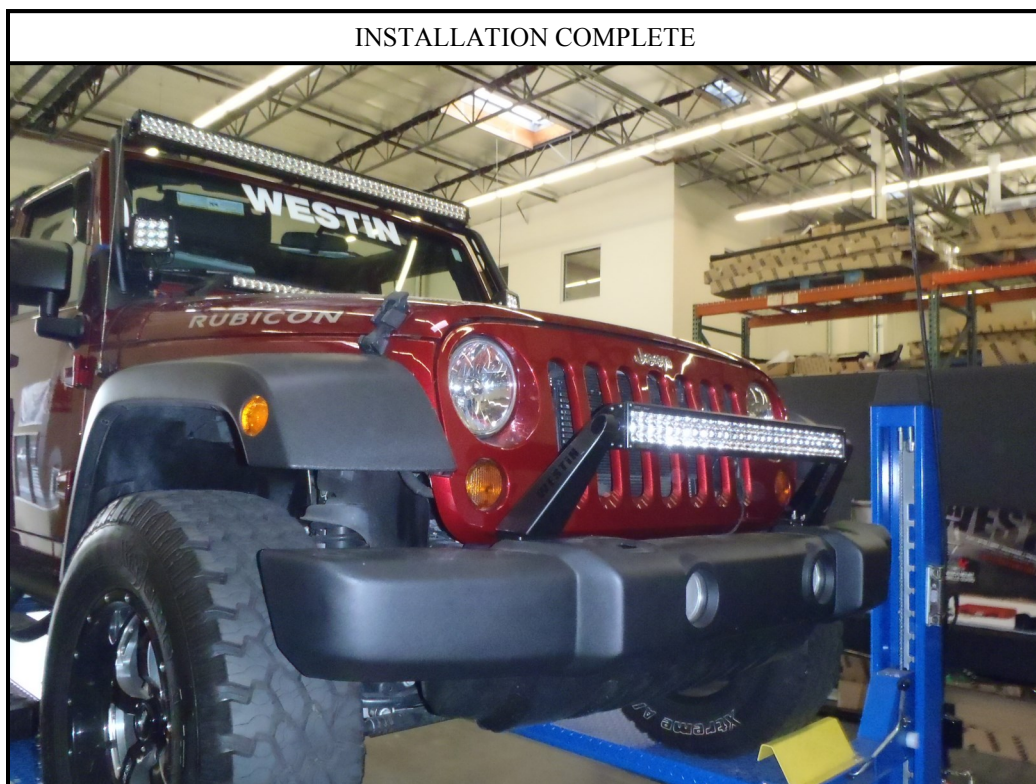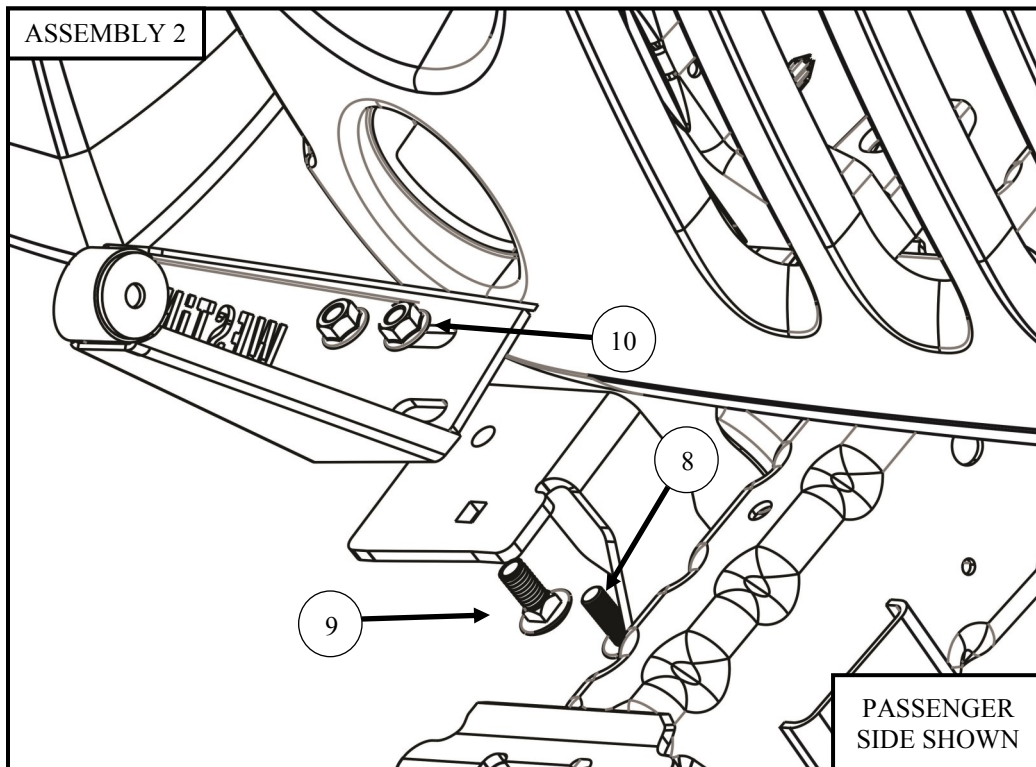

CARE INSTRUCTIONS

- REGULAR WAXING IS RECOMMENDED. DO NOT USE ANY TYPE OF POLISH OR WAX THAT MAY CONTAIN ABRASIVES.
- STAINLESS STEEL PRODUCTS CAN BE CLEANED WITH MILD SOAP AND WATER. STAINLESS STEEL POLISH SHOULD BE USED TO POLISH SMALL SCRATCHES.
- GLOSS BLACK FINISHES SHOULD BE CLEANED WITH MILD SOAP AND WATER.



Westin Automotive Products, Inc.
320 Covina Blvd
San Dimas, Ca. 91773

P.N.: 75-3093 REV A

ECO #: W14-0107

3

Thank You for choosing Westin products
For Additional installation assistance please call
Customer service (800) 793-7846
www.westinautomotive.com

DATE: 1/15/15