



# GORRHINO®

## INSTALLATION INSTRUCTIONS

PARTS INCLUDED IN THIS LIST:

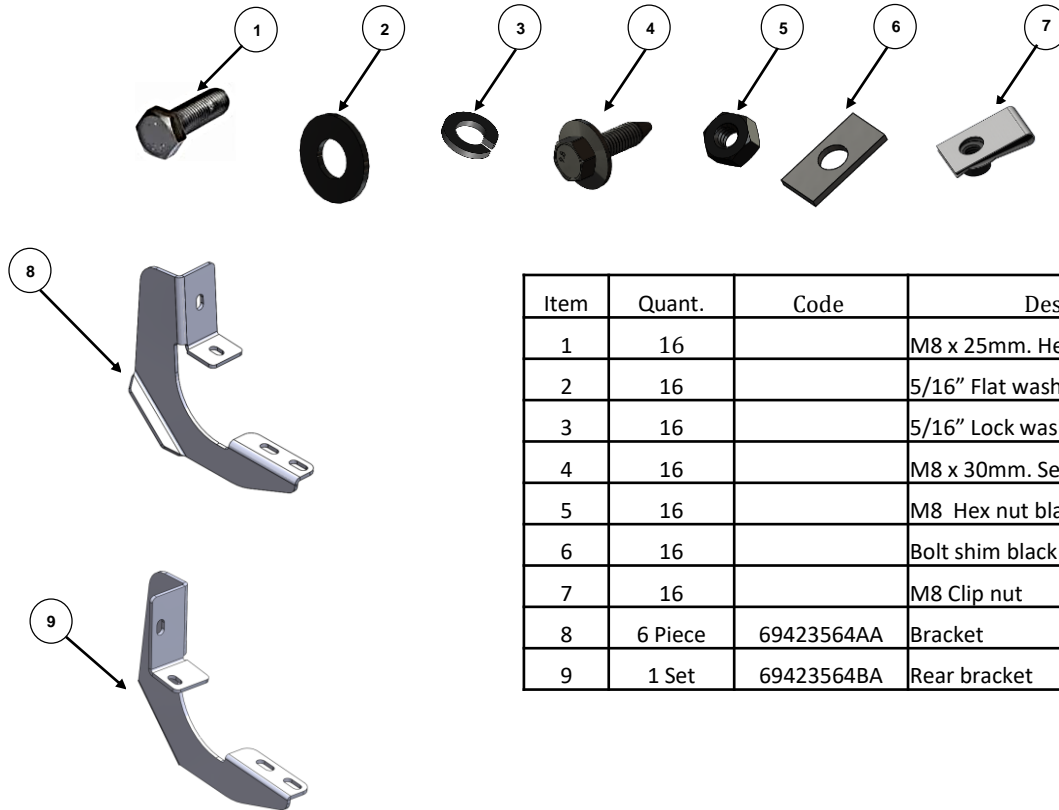

Item	Quant.	Code	Description
1	16		M8 x 25mm. Hex bolt
2	16		5/16" Flat washer black
3	16		5/16" Lock washer black
4	16		M8 x 30mm. Sems Hex bolt black
5	16		M8 Hex nut black
6	16		Bolt shim black
7	16		M8 Clip nut
8	6 Piece	69423564AA	Bracket
9	1 Set	69423564BA	Rear bracket

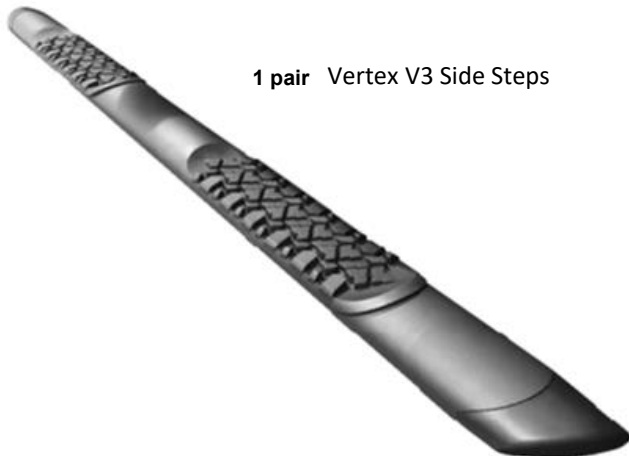

1 pair Vertex V3 Side Steps