


# DZ 16227 Installation Instructions

## Ford Explorer

**B**

Second Left Bracket

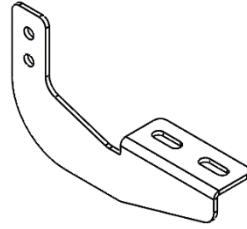


B 2797LP

X3

**C**

Second Right Bracket

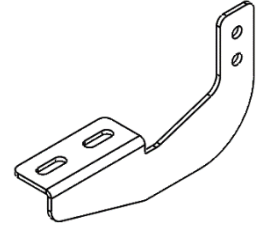


B 2797RP

X3

**D**

Main Passenger Bracket

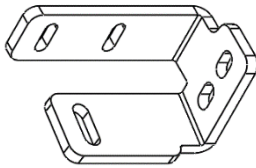


B 2798RP

X2

**E**

Main Driver Bracket

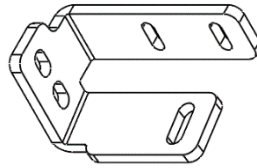


B 2798LP

X2

**F**

Main Front Driver Bracket

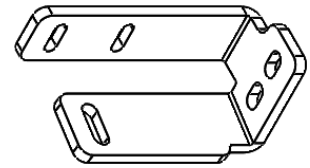


B 2799RP

X1

**G**

Main Front Passenger Bracket

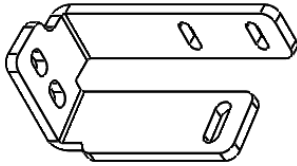


B 2799LP

X1

**H**

M8 Square Head Bolt

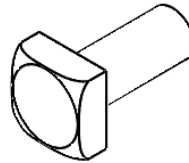


PN 524

X12

**I**

M8-1.25 Hex Nut

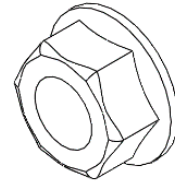


PN 526

X24

**J**

M8 U-Clip

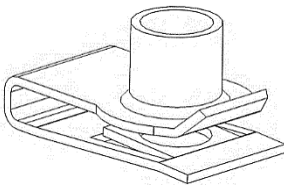


PN 909

X6

**K**

M8 Hex Bolt

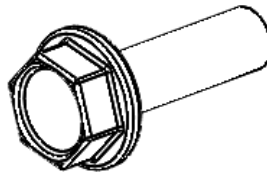

PN 525

X18

**L**

M6 Flange Nut




PN 847-CHY

X12

**M**

M6 Studded Plate

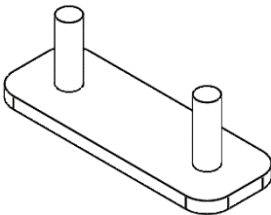

PN 1336

X6