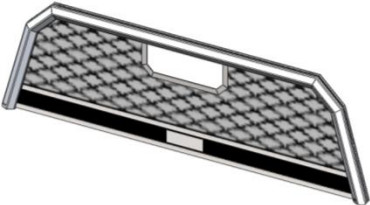
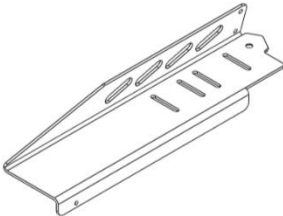
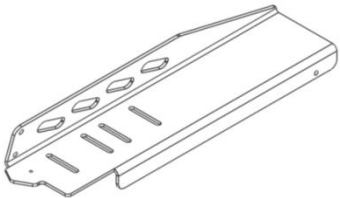
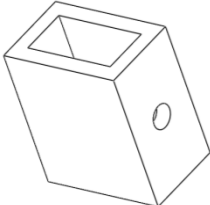
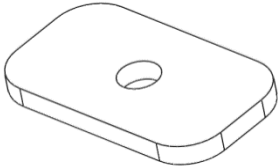
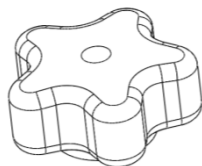
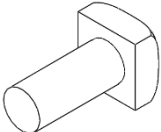
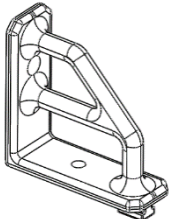

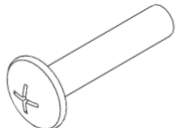




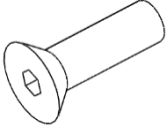
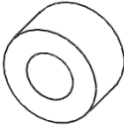

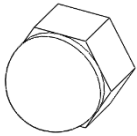


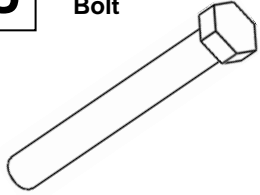
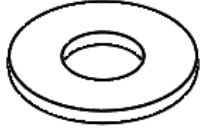
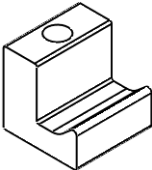


<p><b>A</b> Cab Rack</p>  <p>Varies X1</p>	<p><b>B</b> Left Bolt-On Mount</p>  <p>Varies X1</p>	<p><b>C</b> Right Bolt-On Mount</p>  <p>Varies X1</p>	
<p><b>D</b> Rubber Mounting Block</p>  <p>SR RUBMNT1 X2</p>	<p><b>E</b> 3/8" Threaded Plate</p>  <p>PN 407 X2</p>	<p><b>F</b> Knob</p>  <p>WQ500-KNOB X2</p>	
<p><b>G</b> Square Head Bolt</p>  <p>PN 524 X6</p>	<p><b>H</b> Tie Down</p>  <p>TD95P X2</p>	<p><b>I</b> 3/8" x 3/5" Bolt</p>  <p>PN 620 X2</p>	
<p><b>J</b> 1/4" Phillips Head Screw</p>  <p>PN 485 X2</p>	<p><b>K</b> 1/4" Fender Washer</p>  <p>PN 265 X2</p>	<p><b>L</b> 3/8" Washer</p>  <p>PN 113 X4</p>	<p><b>M</b> 1/4" x 1/2" Nylon Spacer</p>  <p>PN 703 X2</p>
<p><b>N</b> 1/4" Locknut</p>  <p>PN 341 X2</p>	<p><b>O</b> 3/8-1.25" Flat Socket Bolt</p>  <p>PN 353 X2</p>	<p><b>P</b> 7/16" x 1/2" Nylon Spacer</p>  <p>PN 1060 X2</p>	<p><b>Q</b> 5/16" SAE Washer</p>  <p>3/4" OUTSIDE DIAMETER PN 339 X4</p>

<p><b>R</b> M8 Acorn Cap Nut</p>  <p>PN 1038 X4</p>	<p><b>S</b> Adhesive Pad</p>  <p>FGT 12 X2</p>	<p><b>T</b> 5/16" USS Washer</p>  <p>1" OUTSIDE DIAMETER</p> <p>PN 325B X2</p>	<p><b>U</b> 5/16" X 2.5" Hex Bolt</p>  <p>PN 1156 X4</p>
<p><b>V</b> 5/16" Washer</p>  <p>7/8" OUTSIDE DIAMETER</p> <p>PN 163 X4</p>	<p><b>W</b> 5/16 J Extrusion</p>  <p>PN 706 X4</p>		


**Tools Required**

**Allen Wrench**

- 4mm
- 5mm
- 7/32"



**Phillips Head Screwdriver**



**Drill**

- 1/4" Drill Bit
- 3/8" Drill Bit



**Ratchet and Socket or Wrench**

- 13mm
- 1/2"

