
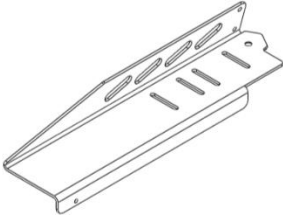
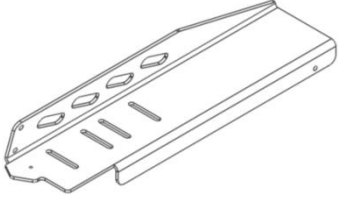
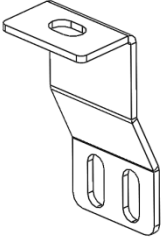
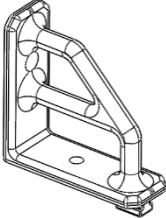
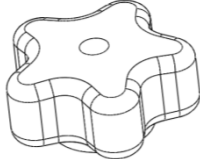
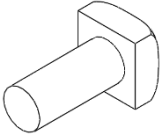
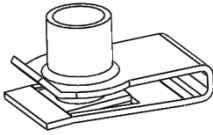
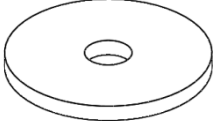
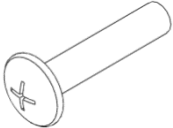


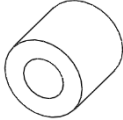

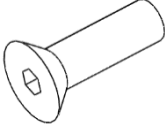


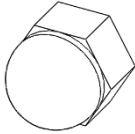


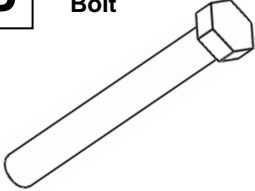
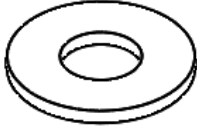
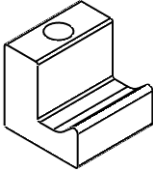


<p>A Cab Rack</p>  <p>Varies X1</p>	<p>B Left Bolt-On Mount</p>  <p>Varies X1</p>	<p>C Right Bolt-On Mount</p>  <p>Varies X1</p>	
<p>D Mounting Brace</p>  <p>B 2450P X2</p>	<p>E Tie Down</p>  <p>TD95P X2</p>	<p>F Knob</p>  <p>WQ500-KNOB X2</p>	
<p>G Square Head Bolt</p>  <p>PN 524 X6</p>	<p>H 8mm Clip</p>  <p>PN 909 X4</p>	<p>I 5/16" Oversized Washer</p>  <p>1 1/2" OUTSIDE DIAMETER</p> <p>PN 620 X2</p>	
<p>J 1/4" Phillips Head Screw</p>  <p>PN 485 X2</p>	<p>K 1/4" Fender Washer</p>  <p>PN 265 X2</p>	<p>L 8mm Bolt</p>  <p>PN 525 X4</p>	<p>M 1/4" x 1/2" Nylon Spacer</p>  <p>PN 703 X2</p>
<p>N 1/4" Locknut</p>  <p>PN 341 X2</p>	<p>O 3/8-1.25" Flat Socket Bolt</p>  <p>PN 353 X2</p>	<p>P 7/16" x 1/2" Nylon Spacer</p>  <p>PN 1060 X2</p>	<p>Q 5/16" SAE Washer</p>  <p>3/4" OUTSIDE DIAMETER</p> <p>PN 339 X4</p>

<p>R M8 Acorn Cap Nut</p>  <p>PN 1038 X4</p>	<p>S Adhesive Pad</p>  <p>FGT 12 X2</p>	<p>T 5/16" USS Washer</p>  <p>1" OUTSIDE DIAMETER</p> <p>PN 325B X2</p>	<p>U 5/16" X 2.5" Hex Bolt</p>  <p>PN 1156 X4</p>
<p>V 5/16" Washer</p>  <p>7/8" OUTSIDE DIAMETER</p> <p>PN 163 X4</p>	<p>W 5/16 J Extrusion</p>  <p>PN 706 X4</p>		