




# AIRCHARGER®

## HIGH-FLOW INTAKE KITS

NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.  
See knfilters.com for CARB status on each part for a specific vehicle

### INSTALLATION INSTRUCTIONS

**63-1584**  
**RAM**  
**2019-21 2500/3500**  
**V8-6.7L Turbo Diesel**

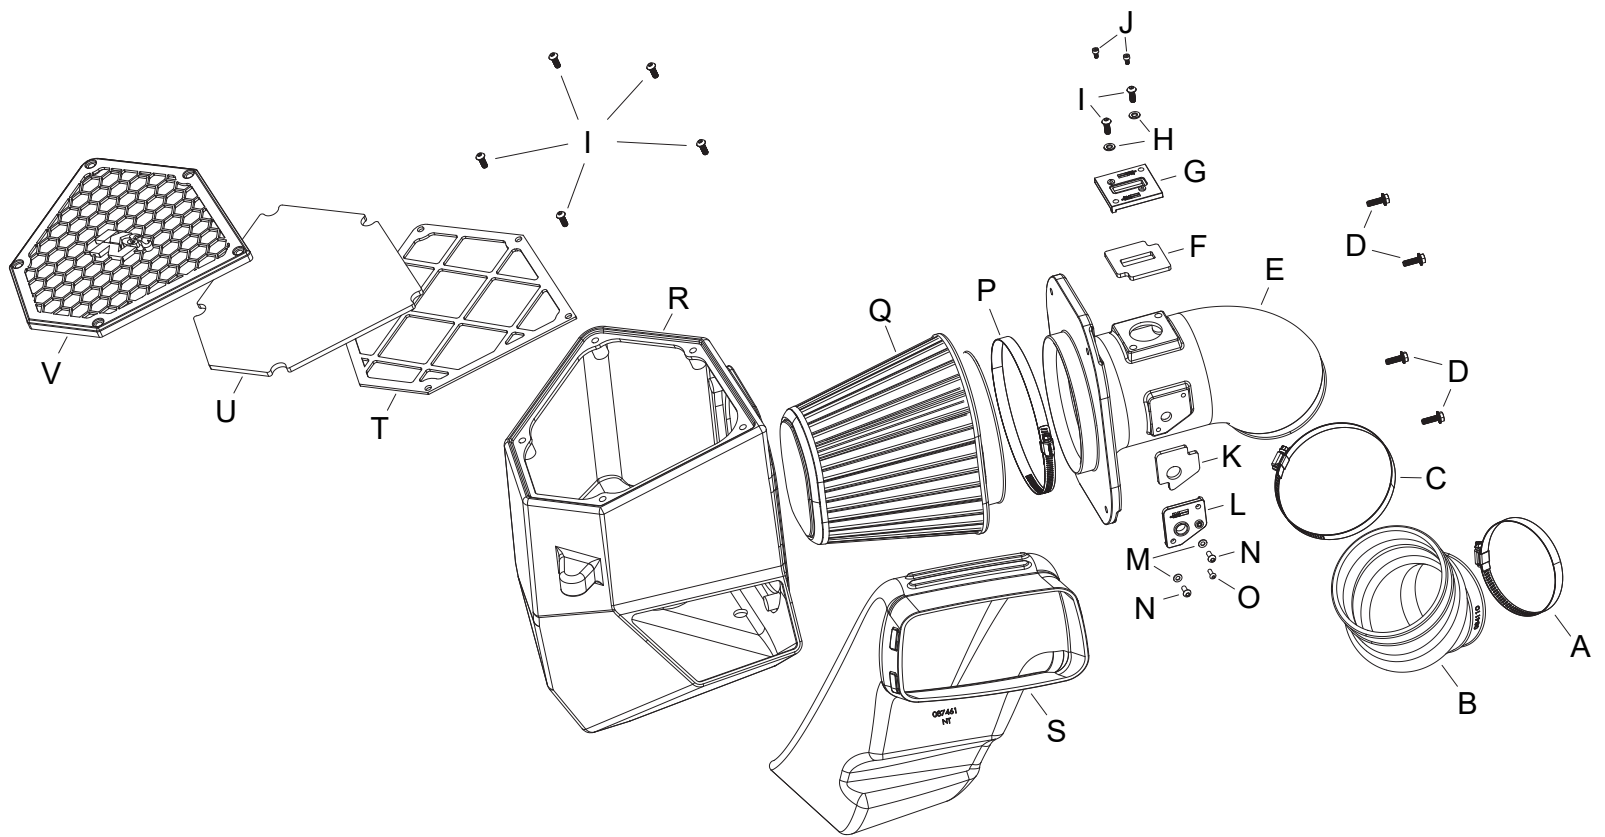

**PARTS LIST:**

Description	Qty.	Part #	Description	Qty.	Part #	Description	Qty.	Part #
A	1	08645	H	2	08269	O	1	07726
B	1	084110	I	7	07730	P	1	08697
C	1	08685	J	2	07733	Q	1	RU-5292
D	4	1-2038	K	1	09771	R	1	087462
E	1	087322	L	1	088021	S	1	087461
F	1	09069	M	2	08212	T	1	088073
G	1	21515-1	N	2	07734	U	1	971970
						V	1	088072