



AIRCHARGER[®]

HIGH-FLOW INTAKE KITS

NOT LEGAL FOR SALE OR USE ON ANY POLLUTION CONTROLLED MOTOR VEHICLE IN CALIFORNIA OR STATES ADOPTING CALIFORNIA EMISSION PROCEDURES.

See knfilters.com for CARB status on each part for a specific vehicle

63-2604


FORD

2018-19 F150

V6-3.3L

NOTE: This kit was not designed to fit vehicles with a body lift.

FACTORY
PART

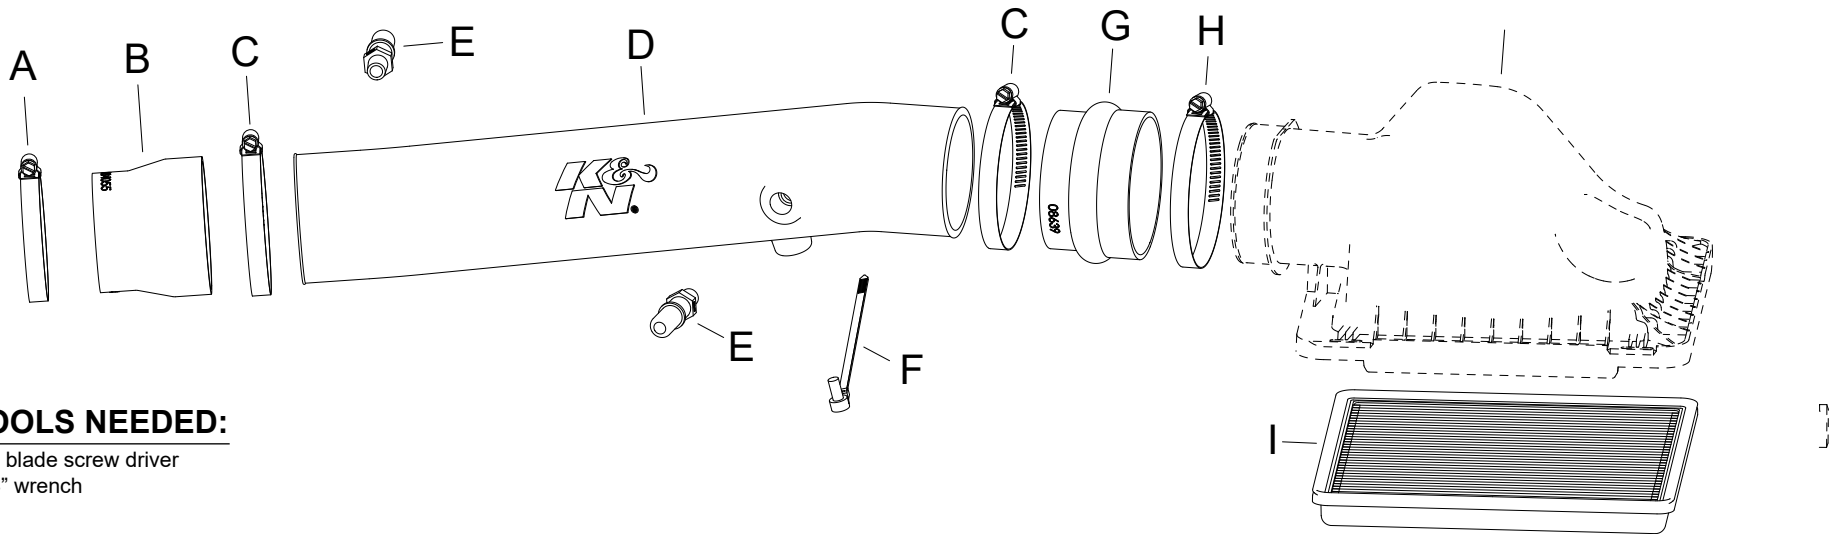

TOOLS NEEDED:

- flat blade screw driver
- 3/4" wrench

PARTS LIST:

	Description	Qty.	Part #
A	HOSE CLAMP #48	1	08601
B	HOSE; 3.5" TO 3"ID X 3"L TPRD	1	084055
C	HOSE CLAMP #56	2	08620
D	INTAKE TUBE (MP)	1	087382
E	VENT; 1/4 NPT QUICK	2	082628
F	CABLE TIE; 6", BLACK	1	1-127
G	HOSE; HUMP 3.5"ID TO 3.75"	1	08639
H	HOSE CLAMP #60 STAINLESS	1	08628
I	FILTER	1	33-2385

FACTORY
PART