




www.vintageair.com

## Packing List: Condenser Kit (011152)

| No. | Qty. | Part No.   | Description                         |
|-----|------|------------|-------------------------------------|
| 1.  | 1    | 03766-VUC  | Condenser, 14" x 22", Parallel Flow |
| 2.  | 1    | 07321-VUC  | Drier                               |
| 3.  | 1    | 11079-VUS  | Binary Switch, Male                 |
| 4.  | 1    | 23135-VUW  | Compressor Lead                     |
| 5.  | 1    | 23172-VUW  | Terminal, 1/4" Female, Insulated    |
| 6.  | 1    | 646966     | Template, #6 Condenser Hardline     |
| 7.  | 1    | 646955     | Bracket, Condenser, Upper Mounting  |
| 8.  | 1    | 646971     | Bracket, Condenser, Lower Mounting  |
| 9.  | 1    | 646959     | Bracket, Drier                      |
| 10. | 1    | 081162     | Hardline, #6 Condenser/Drier        |
| 11. | 1    | 081163     | Hardline, #8 Condenser/Compressor   |
| 12. | 2    | 33857-VUF  | O-ring, #6                          |
| 13. | 1    | 33858-VUF  | O-ring, #8                          |
| 14. | 2    | 180034     | Spacer, .313" Length                |
| 15. | 2    | 18064-SSR  | Spacer, .500" Length                |
| 16. | 4    | 183009-DSR | Bolt, 5/16-18 x 1 1/4", Hex         |
| 17. | 9    | 18125-VUB  | Washer, 5/16", Flat                 |
| 18. | 1    | 186011     | Washer, 9/32", Flat                 |
| 19. | 2    | 18151-VUB  | Locknut, 5/16-18                    |
| 20. | 7    | 18235-VUB  | Screw, #8 x 1/2"                    |
| 21. | 2    | 18977-VUB  | U-nut, 5/16"                        |
| 22. | 1    | 18247-VUB  | Screw, #10 x 1/2", Sheet Metal      |
| 23. | 7    | 18979-VUB  | J-nut, #8                           |
| 24. | 1    | 18249-VUB  | Screw, 10-24 x 3/8"                 |
| 25. | 1    | 18260-VUB  | Nut with Star Washer, 10-24         |
| 26. | 1    | 182871     | Bolt, 1/4-20 x 3/4", Hex            |
| 27. | 1    | 18152-VUB  | Nut with Star Washer, 1/4-20        |
| 28. | 1    | 31600-VUD  | Adel Clamp, #2                      |
| 29. | 1    | 31603-VUD  | Adel Clamp, #4                      |

**\*\* Before beginning installation, open all packages and check contents of shipment. Please report any shortages directly to Vintage Air within 15 days. After 15 days, Vintage Air will not be responsible for missing or damaged items.**

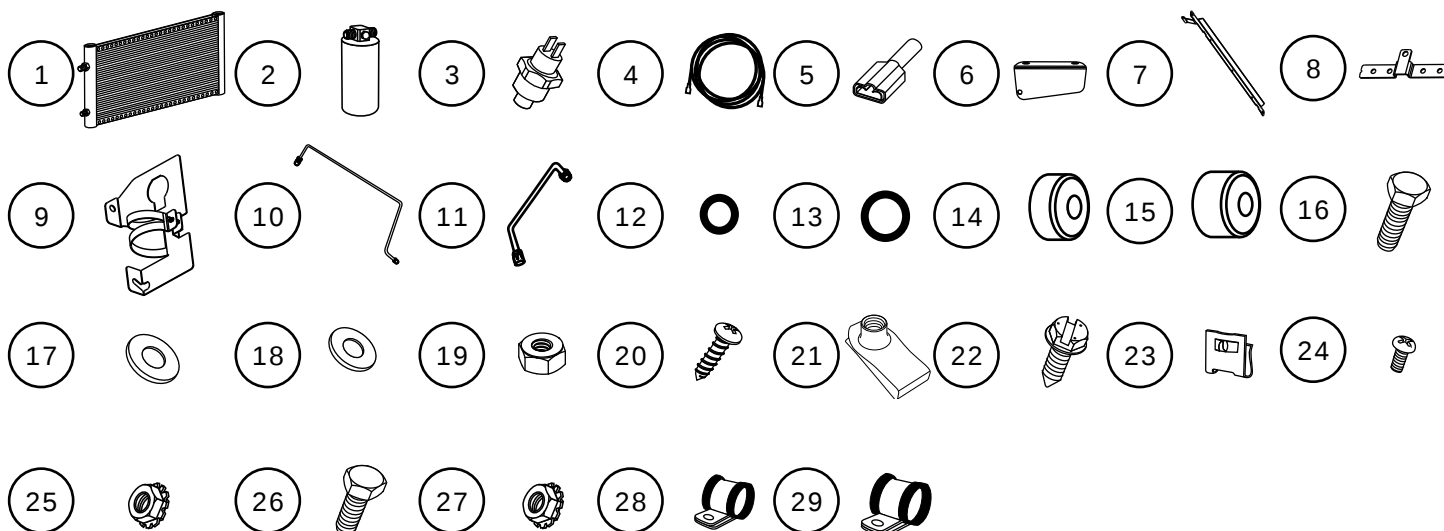

**NOTE: Images may not depict actual parts and quantities. Refer to packing list for actual parts and quantities.**