

Installation Instructions for 15488

Throttle Body Spacer

for 03-07 Dodge Ram 5.7L Hemi
04-07 Dodge Durango 5.7L Hemi
2007 Chrysler Aspen 5.7L Hemi



Installation Instructions:

Thank you for purchasing the JEGS Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation.

Parts List

- (1) Power Plate
- (2) Gaskets
- (4) 6mm x 70mm Bolts
- (4) 6mm Washers

Tools List


- 8mm Socket
- 10mm Socket
- Ratchet & Extension

Installation Instructions:

1. **DISCONNECT NEGATIVE (-) BATTERY CABLE.**
2. Loosen the hose clamp and remove the air tube from the throttle body air box.
3. Disconnect the air temperature sensor connector attached to the air box.
4. Loosen the two bolts that secure the air box using a 10mm socket.
5. Remove the oil filler cap (for clearance if needed) and carefully pull and remove the air box.
- * **Be careful not to drop anything in the oil filler pipe.**
6. Using an 8mm socket, loosen (4) bolts mounting throttle body to intake manifold. Remove throttle body. **Ref. "A"**
7. Clean surface of intake manifold and throttle body being sure not to damage the factory o-ring seal.
8. Install the gasket onto the JEGS spacer.
9. Locate JEGS spacer on intake manifold. Note: Two locating pins on intake manifold must line up properly to the holes in the JEGS spacer. The JEGS spacer gasket must face the throttle body. **Ref. "A"**
10. Using the (4) bolts and washers provided, mount the factory throttle body on JEGS spacer. Note: Tighten all four bolts evenly to insure proper seal. **Ref. "B"**
11. Reinstall the throttle body air box making sure that the orange ring is in place on the throttle body.
- * **The air box is a tight fit so you will need to work it into place and hold it while tightening the two 10mm bolts.**
12. Reconnect the air temperature sensor connector attached to the air box, then inspect all components and hose clamps for proper fit and function.
13. Reconnect negative battery cable. Enjoy!

Included in your JEGS Spacer Instruction sheet (found at the bottom of this page) is our **California Air Resources Board (C.A.R.B.) Executive Order (EO) number**. This number must be kept in the vehicle at all times. Failure to do so may prevent you from passing a smog inspection.

Ref. "A"- (1) Power Plate, (2) Gaskets

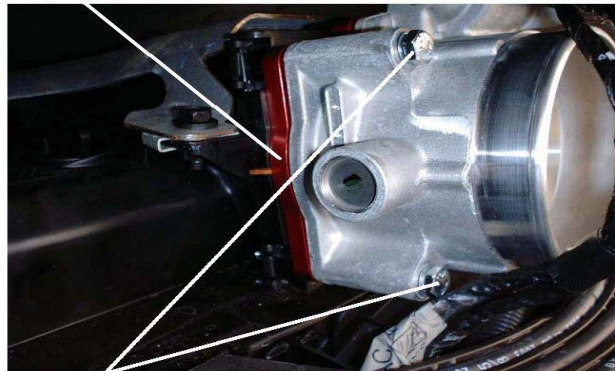

Ref. "B" - (4) 6mm x 70mm Bolts, (4) 6mm washers

STATE OF CALIFORNIA
AIR RESOURCES BOARD
EXECUTIVE ORDER D-623
EXEMPTIONS



1-800-345-4545 jegs.com