

Installation Instructions for 41057, 41058 & 41059 Gauge Hose Kit

Available in: 3 Foot, 4 Foot & 6 Foot Hose Length


BE CAREFUL – DO NOT OVERTIGHTEN THE THREADED FITTINGS! Use a Teflon thread sealing compound to avoid leaks and to guard against galling of threads.

WARNING!

Check for leaks before starting your vehicle. Take precautions when working with gasoline – It is a fire hazard and is potentially explosive.

Installation Instructions:

1. Attach fitting (A) to vehicle outlet using Teflon thread sealer.
2. Attach fitting (B) to fitting (A) using Teflon thread sealer.
3. Attach pressure hose swivel coupling (D) to fitting (B).
4. If routing through the firewall, drill a 9/16" diameter hole and use rubber grommet.
5. Attach fitting (C), or (E) to gauge using Teflon thread sealer.
6. Attach pressure hose to fitting (C) or (E) to the gauge.
7. Start engine and check for leaks. Tighten if necessary.

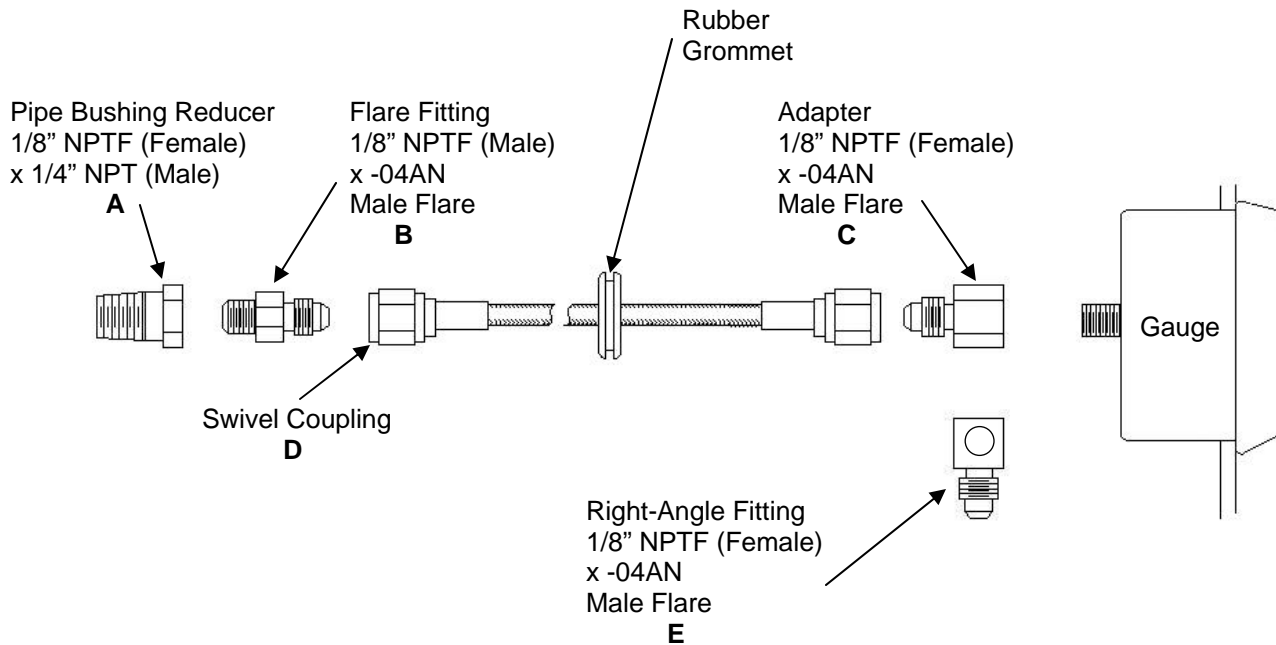

1-800-345-4545 jeps.com