


**Installation Instructions for 50611**  
**BB-Chevy Mid-Mount Alternator Kit**  
 For Alternators: 555-10170, 358-2025 & 358-2026

Description	QTY	Without Motorplate		With Motorplate	
		10170	2025/2026	10170	2025/2026
Bracket - Alt Mount - BBC - LH	1	X	X	X	X
Spacer - .460"	2	A	A		
Spacer - .580"	1	B		B	
Spacer - .700"	1		C		C
Spacer - 2.310"	2			D	D
7/16"-14 x 4"	2			E	E
7-16"-14 x 1-3/4" Bolt	2	F	F		
3/8"-16 x 2-1/2" Bolt	1	X	X	X	X
M8 x 35 Bolt	1	X	X	X	X
3/8" Flat Washers	2	X	X	X	X
3/8" Lock Washers	1	X	X	X	X
5/16" Flat Washers	1	X	X	X	X
5/16" Lock Washer	1	X	X	X	X
3/8" Nut	1	X	X	X	X
7/16" Lock Washers	2	X	X	X	X

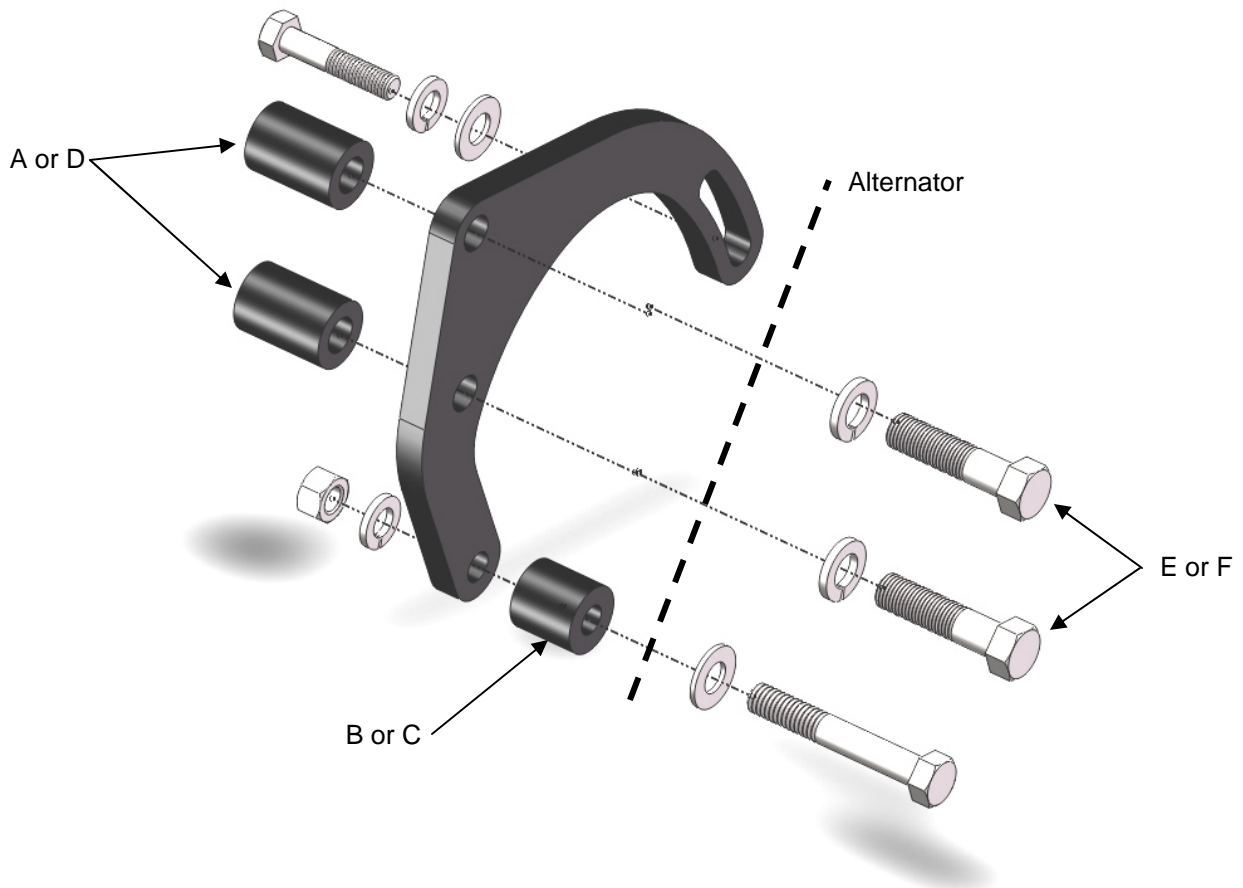

1-800-345-4545 [jegs.com](http://jegs.com)