

Installation instructions

For set # 7.7105

FRT. TENSION ROD BUSHINGS

NISSAN 240ZX (S13) 240SX (S14) 300ZX (Z32)

ENERGY
SUSPENSION


1131 VIA CALLEJON, SAN CLEMENTE, CA 92673

© 2004 Energy Suspension. All rights reserved.
May not be reproduced, in any form, or by any means,
without the written consent of Energy Suspension.


It is recommended that if you are unfamiliar with this type of work that you refer to a qualified service center specializing in this type of work. It is also recommended that if you choose to do this work yourself that a factory service manual be obtained for the proper procedures pertaining to removal, replacement and proper torque specifications for your vehicle. This instruction set is intended as a guideline for the safe installation of Energy Suspension's polyurethane bushings, once you have removed the factory components from your vehicle.

Parts list:

- 2 - 7119 (inner bushing).
- 4 - 7120 (outer bushing).
- 2 - 15.10.325.39
(sleeve 1.00"O.D. x .563" I.D. x 2.745"LG).
- 4 - 9.11108 (grease).
- 1 - 17432 (this instruction sheet).

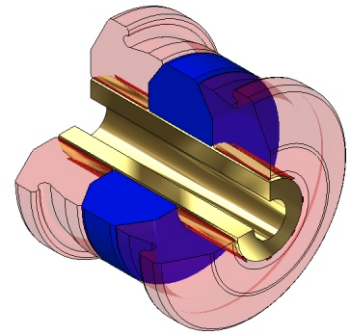

Apply grease to all metal parts that contact the polyurethane bushings.

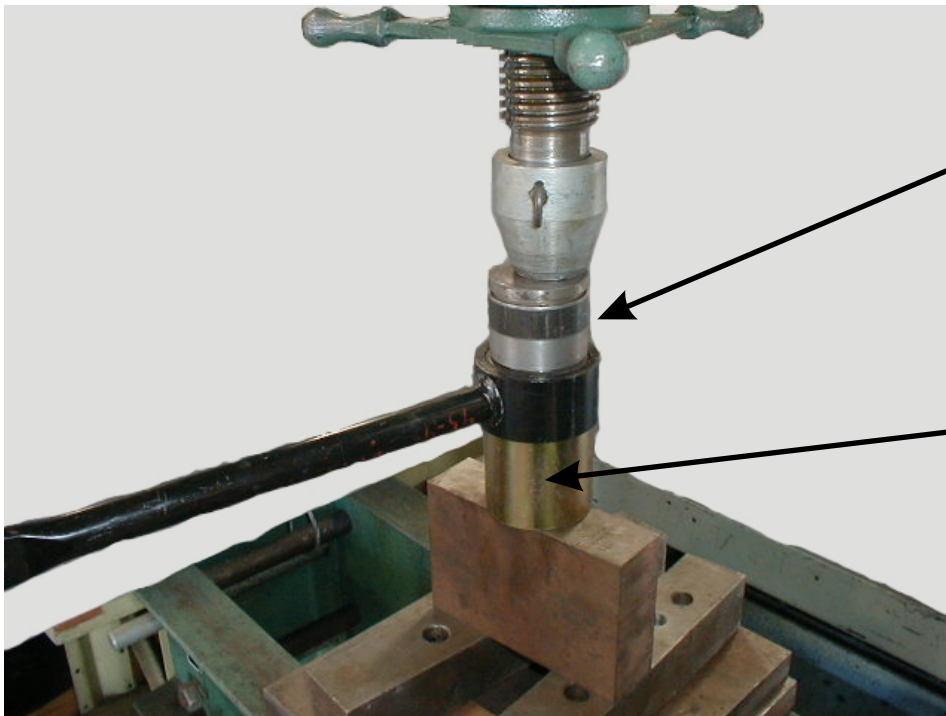

Inside Dia. of tension rod is 2.512" (63.8mm). Push out old bushing with something smaller than 2.512".

Outside Dia. of original bushing is 2.520" (64mm). The inside of receiver needs to be bigger than 2.520".

When pressing out the old original bushing, you need to push it with something smaller than the inside of the tension rod. And the receiver end needs to be bigger than the outside of the old bushing being pushed out.

17432

6/DEC/04 BRH