





4L60-E

Torque Specs

| Location | Qnty | Size | Torque | Location | Qnty | Size | Torque |
|--------------------|--------|-----------|----------|------------------|----------|-----------|----------|
| Location | Cerity | M6 | 11 N-m | Park Brake | | M8 | 31 N-m |
| Acc. Cover to Case | 2 | | l . | | 2 | | |
| | | 1.0x35.0 | 8 lbft. | Bracket to Case | | 1.25x20.0 | 23 lbft. |
| Acc. Cover to Case | 1 | M6 | 11 N-m | Pump Cover to | 5 | M8 | 24 N-m |
| | | 1.0x65.0 | 8 lbft. | Pump Body | | 1.25x40.0 | 18 lbft. |
| Detent Spring to | 4 | M8 | 24 N-m | Pump Ass. To | 7 | M8 | 24 N-m |
| V/B | 1 | 1.25x20.0 | 18 lbft. | Case | L ′ | 1.25x60.0 | 18 lbft. |
| FWD Acc. Cover to | | M6 | 11 N-m 8 | | 4 | M10 | 35 N-m |
| V/B | 3 | 1.0x17.7 | lbft. | Ext. Hsg to Case | | 1.50x30.0 | 26 lbft. |
| Sol Assembly to | | M6 | 11 N m 0 | Manual Shaft to | <u> </u> | M10 | 31 N-m |
| _ | 2 | 1.0x12.0 | Ibft. | | 1 | 1.50 Nut | 23 lbft. |
| Case | | | | Detent lever | | 1.50 Nut | |
| Oil Pan | 16 | M8 | | Line Pressure | 1 | 1/8 - 27 | 11 N-m 8 |
| | | 1.25x19.3 | lbft. | Plug | | | lbft. |
| V/B to Case | 2 | M6 | 11 N-m 8 | Cooler line | 2 | 1/4 - 18 | 38 N-m |
| | | 1.0x35.0 | lbft. | connector | 2 | | 28 lbft. |
| V/B to Case | 9 | M6 | 11 N-m 8 | Press. Switch | | M6 | 11 N-m 8 |
| | | 1.0x47.5 | lbft. | Asm. To V/B | 2 | 1.0x17.7 | lbft. |
| V/B to Case | 3 | M6 | 11 N-m 8 | Speed Sensor | 1 | M6 | 11 N-m 8 |
| | | 1.0x54.4 | lbft. | Retainer | | 1.0x21.7 | lbft. |
| V/B to Case | 3 | M6 | | Spacer Plate | 3 | M6 | 11 N-m 8 |
| | | 1.0x65.0 | lbft. | 1 ' | | 1.0x17.7 | lbft. |
| | | - | | Support to Case | | 1.0417.7 | IDIL. |
| Press. Control Sol | 1 | M6 | 11 N-m 8 | | | | |
| to V/B | | 1.0x17.7 | lbft. | | | | |

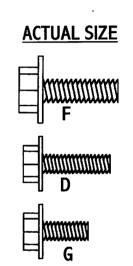


Valve Body Bolt Location

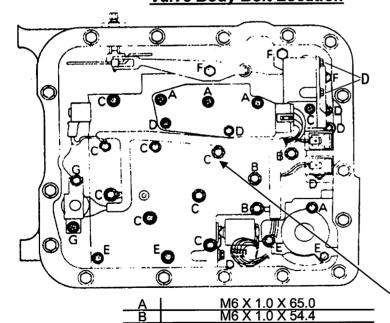

Socket Socket Socket Socket Socket E

WARNING !!! Using an incorrect bolt in this location may lock the gear train and can also damage the case.

Temperature Sensor

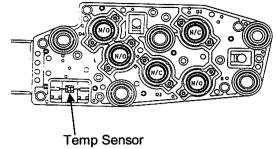


Temp. to Resistance to Voltage

| °C | °F | RESISTANCE | VOLTS 5 |
|-----|-----|------------|------------|
| -40 | -40 | 100544 | _ |
| -28 | -21 | 52426 | 4.78 |
| -16 | 10 | 18580 | 4.18 |
| -4 | 23 | 12300 | 3.84 |
| 0 | 32 | 9379 | 3.45 |
| 7 | 40 | 7270 | 3.20 |
| 19 | 68 | 3520 | 2.56 |
| 31 | 86 | 2232 | 1.80 |
| 43 | 110 | 1200 | 1.10 |
| 55 | 131 | 858 | 3.25 |
| 67 | 145 | 675 | 2.88 |
| 79 | 176 | 333 | 2.24 |
| 91 | 194 | 241 | 1.70 |
| 103 | 213 | 154 | 1.28 |
| 115 | 239 | 115 | .96 |
| 127 | 260 | 79 | .64 |
| 139 | 284 | 60 | .32 |
| 151 | 302 | 47 | .00 |

Fluid Fill Capacity

w/o Converter = 5.0 QT or 4.73 L* w/ Converter =10 QT or 9.46 L* * Slightly more for deep pan units

Case Connector

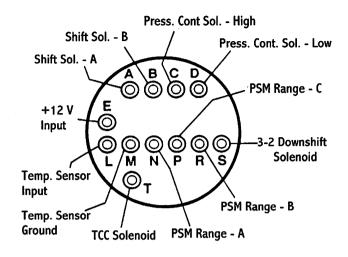

| Component | Term | erm Wire Pass Pin | | Resistance | |
|---------------------|------|-------------------|----|-------------|--|
| 1-2 Shift Sol. | Α | Red | E* | 20-40 Ohms | |
| 1-2 Shiit Soi. | В | Green LT | Α | | |
| 0.000 | Α | Red | E* | 20-40 Ohms | |
| 2-3 Shift Sol. | В | Yellow | В | | |
| | Α | Red | E* | 9-14 Ohms | |
| 3-2 Control Sol | В | White | S | | |
| Press Control Sol | Α | Purple | С | 3.5-8 Ohms | |
| | В | Lt Blue | D | | |
| | Α | Brown | L | 2.9-4 kOhms | |
| Trans. Temp. Sensor | В | Gray | М | | |
| & | С | Pink | N | | |
| Pressure Switch | D | Orange | Р | See Chart | |
| Assembly | E | Dk Blue | R | | |
| TCC Sol | Α | Red | E* | 20-40 ohms | |
| 100 301 | В | Black | T | 20-40 Onms | |

^{*} Spliced internally to pin E

Important Note:


Due to the common problems of:

- >Overheating or discoloring of Torque Converter
- >P.W.M. boost & actuator feed oil loss.
- >T.C.C. slip code on '93-97 units.
- >Code P1870 on '98 units.

There is a kit and a reamer available from Sonnax® that includes an isolator valve, sleeve and a regulator valve to correct these problems. For more information on this kit and reamer contact your local Sonnax® dealer. We recommend <u>this</u> solution as opposed to only changing the TCC regulator valve spring.

Page 2


Application Chart

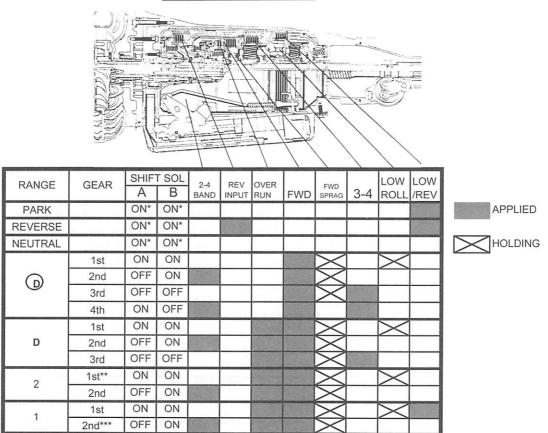

^{*} SHIFT SOL. MAY CHANGE IF VEH. SPEED INCREASES, BUT DOES NOT AFFECT TRANSMISSION.

- ** 1st GEAR NORMALLY PREVENTED ELECTRONICALLY
- *** 2nd IS ONLY AVALIBLE OVER 30 TO 35 M.P.H.

Check Ball Location

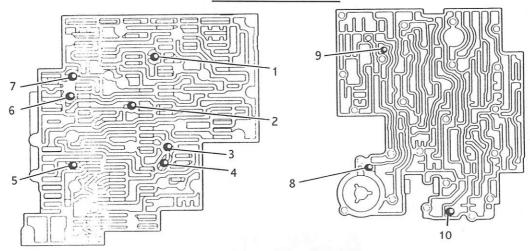

- 1 = 1-2 UPSHIFT
- 2 = 3-4 CLUTCH EXHAUST
- 3 = OVERRUN CLUTCH CONTROL
- 4 = OVERRUN CLUTCH FEED
- 5 = FORWARD CLUTCH ACCUM.

- 6 = 3rd ACCUMULATOR
- 7 = REVERSE INPUT
- 8 = 3-4 ACCUMULATOR
- 9 = 3rd ACCUM. BALL AND RETAINER ASSEMBLY
- 10 = REVERSE BALL CAPSULE



Vehicle Speed Sensor

Sensor resistance should be 1260 - 1540 ohms (Ω) when measured at 20°C (68°F). Output voltage will vary with speed from a minimum of 0.5 Volts AC at 100 RPM to more than 100 Volts AC at 8000 RPM.



3 - 2 Control Solenoid


The early 3-2 Control solenoid resistance should be 10-15 Ω at 20°C. (68°F). This solenoid with the gray connector and gray stem was used from 1993-1995. (O.E. # 24212690). The late solenoid has a resistance of $20-31~\Omega$ at 20° C (68° F). This solenoid was used from 1996-2000. This solenoid has a white plastic stem and connector to differentiate itself from the late TCC solenoid. (O.E. # 24212327)



Torque Converter Clutch / Pulse Width Modulation Solenoid

The early design solenoid has a resistance rating of 20-40 Ω at 20°C (68°F). This solenoid was used for years 1993-1994.


The late design has a gray plastic stem and connector as not to confuse it with the late 3-2 Control solenoid. This solenoid should have a resistance of 10-15 Ω at 20°C (68°F). This is used for 1995-2000. (O.E. # 24212690)

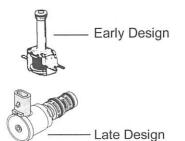

Screen

Transmission Pressure Control Solenoid

Transmission control solenoid resistance should measure 3.5 - 4.6 Ω when measured at 20°C (68°F). There is a new design of this solenoid that has a larger micron screen for improved cold weather operation. This new design will retro fit back to 1993. (O.E # 24209276)

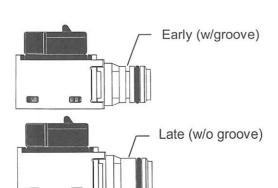

1-2 and 2-3 Shift Solenoid

Shift solenoid resistance should measure 20 - 40 Ω minimum when measured at 20°C (68°F). Shift solenoid current flow should not exceed 0.75 amps. The shift solenoid should energize at a voltage of 7.5 volts or more (measured across the terminals). The shift solenoid should de-energize when voltage is one volt or less. If both solenoids lose power, only third gear will result There is a redesigned solenoid that will retro-fit early models. This change only consists of the removal of the groove on the stem. This was to prevent mis-assembly, as retaining clip can be mistakenly installed into this groove. (O.E. # 10478131)

We are proud to be able to furnish you with this information. Look for more of these technical sheets in transmission kits by:



All of this information is based on the latest technical data available at time of printing. Although every care has been taken to detail & accuracy, Precision International accepts no liability for inaccuracies, updates, changes &/or misprints in this publication.


REVISED: 5/15

© COPYRIGHT 2000, PRECISION INTERNATIONAL


TECHNICAL DEPARTMENT IS-33000E

4L60E VALVE BODY GASKET CHANGES

PREVIOUS DESIGN GASKETS
FIT 1993-00 AND ARE
INDENTIFIED AS FOLLOWS:
UPPER = "C"
LOWER = "V"

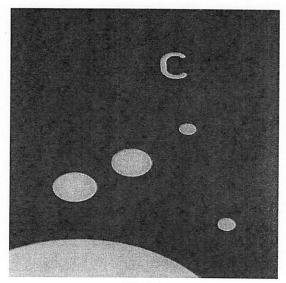


33605

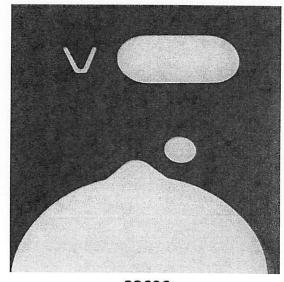


33606

NEW DESIGN GASKETS
FIT 2001-UP AND ARE
IDENTIFIED AS FOLLOWS
UPPER = "CA"
LOWER = "VB"

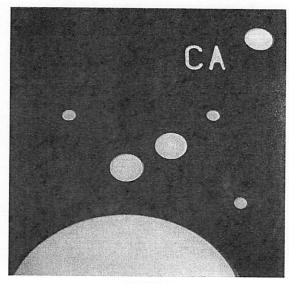

33921

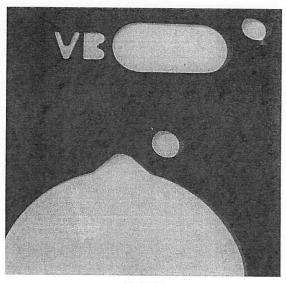

33920