



BULLY DOG

#1 IN PERFORMANCE

INSTALLATION MANUAL



Power Pup

Gas Downloader

Vehicle Application	Power Pup Part#
'04-'06 Ford F-150	41590
'03-'06 Dodge Ram 5.7L Hemi	42590
'98-'06 GM full sized pickup/SUV	43590





TROUBLESHOOTING:

If you have questions during the installation of this product, please visit www.bullydog.com/Product_Updates.php.

The latest version of these instructions can be found at the same location. Please review the Troubleshooting section on page before calling technical support to cover most common issues. Technical support is available by calling 866-bully-dog (866-285-5936).

TABLE OF CONTENTS

INTRODUCTION	PG. 2
BILL OF MATERIALS	PG. 2
OPERATING INSTRUCTIONS	PG. 3
INSTALLATION	PGS. 4-11
Main Menu Options.....	pg. 4
Install Download.....	4
Read DTC's (Diagnostic Trouble Codes).....	4
Ford F-150 installation.....	pg. 5-6
GM pickup and suv installation.....	pg. 7-9
Dodge Ram 5.7L Hemi installation	pg. 10-11
FACTORY SETTINGS	PG. 12
INTERNET UPGRADES	PG. 12
FAQ/TROUBLESHOOTING	PG. 13
WARRANTY & DISCLAIMER	PG. 13

INTRODUCTION

This instruction set covers installation and operations for multiple Power Pup part numbers, notice there is information in this instruction set that does not pertain to your particular vehicle application. Refer to the table of contents to quickly find the information pertaining to your vehicle. This instruction set outlines installation on the following makes of gasoline pickups and SUVs: '04-'06 Ford F-150, GM 4.8L, 5.3L, 5.7L, 6.0L and 8.1L full sized Pickups and SUVs '98-'06, and '03-'06 Dodge Ram 1500, 2500 and 3500 5.7L Hemi pickups. Horsepower results and certain features that this downloader offers will vary from vehicle to vehicle. These installation/operating instructions will specify which of the listed features work for one truck or the other.

This is a very simple product to operate; all operations take place inside the cab of the vehicle with the downloader hooked up to the OBD II port. Operating this downloader does not require any mechanical background. Refer to this instruction booklet if at any time the screen prompts do not make sense.

IMPORTANT: *It is not recommended that this product be used in conjunction with any other electronic module or downloader that is intended to increase horsepower.*

A power program must always be removed before taking the vehicle in for any kind of service, as it may interfere with diagnostic tools used by your dealer.


BILL OF MATERIALS:

1. Downloader
2. OBDII Cable



OPERATING INSTRUCTIONS:

1. Make sure that your key is in the ignition in the off position before you plug the downloader into the vehicle. The downloader will later prompt you to turn the key to the run position.
2. Connect the OBDII cable that comes with the downloader into the top of the downloader and then into the OBDII port. The OBDII port is the diagnostic port located underneath the steering wheel on the driver side of the vehicle.
- 3: The downloader will light up to display the opening screen. From there simply follow the instructions given to you on the screen. The rest of these instructions cover the main points of operating the downloader, but do not cover screen to screen guidance.

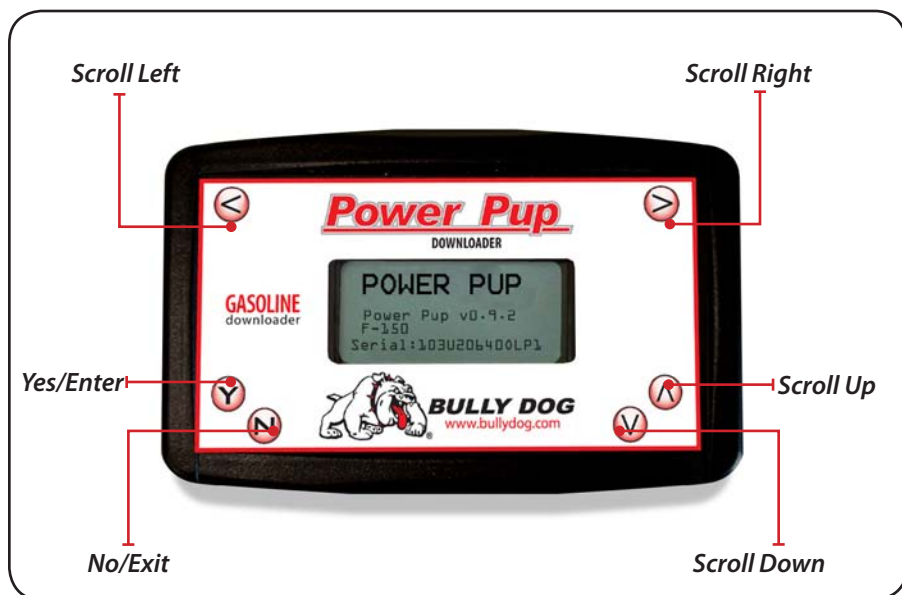

MAIN MENU OPTIONS

The main menu options gives the user two options to choose from:



INSTALL DOWNLOAD: Select this option to begin the download process. Once the download process has begun it will take 15-20 minutes to complete, the process will include selecting desired power level and selecting different parameters in the vehicle specific features.

READ DTC'S: Select this option to view and erase diagnostic trouble codes. A cool feature of this downloader is that you can view and erase diagnostic trouble codes on any '04-'06 Ford F-150 And Gm 4.8L, 5.3L, 5.7L, 6.0L And 8.1L Full Sized Pickups And Suv's '98-'06, and '03-'06 Dodge Ram 1500, 2500, and 3500 5.7L Hemi pickups even if the downloader is already locked to a vehicle.

Once selected from the main menu, the DTC function will display all diagnostic trouble codes on your vehicle. This function allows you to read and erase trouble codes off of the vehicles ECU. To erase DTCs, simply press "Y" and all DTCs will be erased. If no DTCs are displayed then just unplug the downloader and recycle the key.

FORD F-150 INSTALLATION

To begin the downloading process select the "install download" option from the main menu and follow the screen prompts.

ENGINE TUNING (FUEL OCTANE SETTINGS):

This feature determines how much power will be added to the vehicle based on the level of octane in the gasoline that the vehicle will be running. It is important that the correct octane level is selected to achieve optimal efficiency and performance.

Use the **Up and Down arrows** to highlight an option, press **"Y"** to select.

Premium – Select this option for maximum performance gains (must run at least 91 rated octane gasoline to use this setting.)

Regular – Select this option for medium performance gains, run any grade of fuel with this setting.

Stock – Select stock to utilize other Power Pup features without affecting horsepower.



TRANSMISSION TUNING:

Two different options exist for transmission tuning, choose to accept a Bully Dog Custom transmission tune or to leave transmission tuning stock.

Firm Tune - This tune will affect shift firmness and Shift points, it is an optimized tune designed for performance.

Stock Tune - Choose this option to utilize the factory shift patterns.

TRANSMISSION SHIFT POINTS:

This feature allows you to raise or lower the point that the vehicle shifts from first to second gear, second to third gear, and third to fourth gear based on engine rpms. Adjust shift points from 4400 up to 5800 before each gear change in increments of 100 RPMs.



SPEED LIMITER:

The OEM speed limiter will limit the vehicle to a top speed that is determined by the OEM. This feature enables changing the OEM speedlimiter to a higher point or lower point. By selecting yes to remove the speed limiter you agree that your vehicle has tires, suspension, and any other necessary modifications rated for speeds in excess of 140 mph.

The speed limiter can be adjusted from 40 miles per hour up to 126 mph in increments of 2 mph.



GM TRUCK & SUV INSTALLATION

To begin the downloading process select the "install download" option from the main menu and follow the screen prompts.

IMPORTANT: Voltage irregularities will cause interference which may disrupt a download. Make sure to check off the following before attempting to download with the Power Pup.

- Remove Cell phones from the vehicle
- Pull any aftermarket alarm system fuse
- Make sure vehicle batteries are completely charged
- Close the vehicle door and wait for the dome light to turn off
- Remove any battery powered electronic device from the vehicle.
- Remove the following fuses during the download process.

'98-'00 w/5.0/5.7/7.4L Vortec Engines

Remove these Fuses from the Fuse Box Located Inside the Vehicle (*located near the driver's side dash*)
#4, #17 & #19

'99-'02 GM C/K w/4.8/5.3/6.0/8.1L Engines

Remove these Fuses from the Fuse Box Located Inside the Vehicle (*located near the driver's side dash*)

- #1 - SEO ING (Special Eq. Options/Ignition)
- #16 - SEO ACCY (Special Eq. Options/Accessories)
- #29 - RDO1 (Radio)
- #30 - RAP2 (Relay Power)

Remove these Fuses from the Fuse Box Located Under the Hood

- #60 - TBC (Body Computer)

'03-'06 GM C/K w/4.8/5.3/6.0/8.1L Engines

Remove these Fuses from the Fuse Box Located Inside the Vehicle (*located near the driver's side dash*)

- #16 - SEO ACCY (Special Eq. Options/Accessories)
- #17 - TBC 2B (Body Computer)
- #18 - TBC 2C (Body Computer)
- #20 - TBC ACCY (Body Computer)
- #23 - TBC 2A (Body Computer)

Remove these Fuses from the Fuse Box Located Under the Hood

- #16 - TBC BATT (Body Computer)
- #38 - TBC IGN1 (Body Computer)
- #50 - Radio
- #58 - INFO

ENGINE TUNING (OCTANE SETTING):

This feature determines how much power will be added to the vehicle based on the level of octane in the gasoline that the vehicle will be running. It is important that the correct octane level is selected to achieve optimal efficiency and performance.

Use the Up and Down arrows to highlight an option, press "Y" to select.



Premium – Select this option for maximum performance gains (must run at least 91 rated octane gasoline to use this setting.)

Regular – Select this option for medium performance gains, run any grade of fuel with this setting.

Stock – Select stock to utilize other Power Pup features without affecting horsepower.

TRANSMISSION TUNING

This Feature will turn up the pressure in the transmission so that shifts feel solid. It also helps reduce transmission slippage under heavy stress.

Performance: Pressure is greater than tow and stock. This setting is recommended to be used in combination with, but is certainly not limited to the High Performance Horsepower program.

Tow: Shifts are firmer than stock and less firm than High Performance.

Stock: Does not change or modify transmission settings



IMPORTANT: When using the high performance or tow mode in conjunction with the tow/haul feature, transmission shifting will be significantly firmer.

GM TRUCK & SUV INSTALLATION

TRANSMISSION SHIFT POINTS:

This feature will adjust the point in the RPM range in which the transmission upshifts or downshifts.

Performance: Shifts at a higher RPM than Stock and Tow. This setting is recommended to be used in combination with, but is certainly not limited to the High Performance Horsepower Program.

Tow: Shifts at a higher RPM than Stock and shifts at a lower RPM than High Performance.

Stock: Does not modify shift points



SPEED LIMITER:

The OEM speed limiter will limit the vehicle to a top speed that is determined by the OEM. This feature enables changing the OEM speedlimiter to a higher point or lower point. By selecting yes to remove the speed limiter you agree that your vehicle has tires, suspension, and any other necessary modifications rated for speeds in excess of 140 mph.

The speed limiter can be adjusted from 50 miles per hour up to 135 mph in increments of 5 mph.



DODGE RAM 5.7L HEMI INSTALLATION

To begin the downloading process select the "install download" option from the main menu and follow the screen prompts.

ENGINE TUNING (FUEL OCTANE SETTINGS):

This feature determines how much power will be added to the vehicle based on the level of octane in the gasoline that the vehicle will be running. It is important that the correct octane level is selected to achieve optimal efficiency and performance.

Use the Up and Down arrows to highlight an option, press "Y" to select.

Premium – Select this option for maximum performance gains (must run at least 91 rated octane gasoline to use this setting.)

Regular – Select this option for medium performance gains, run any grade of fuel with this setting.

Stock – Select stock to utilize other Power Pup features without affecting horsepower.



DODGE RAM 5.7L HEMI INSTALLATION

TRANSMISSION SHIFT POINTS:

This feature allows you to raise or lower the point that the vehicle shifts from first to second gear, and second to third gear based on engine rpms. Adjust shift points from 5600 up to 6300 before each gear change in increments of 20 RPMs.



SPEED LIMITER:

The OEM speed limiter will limit the vehicle to a top speed that is determined by the OEM. This feature enables changing the OEM speedlimiter to a higher point or lower point. By selecting yes to remove the speed limiter you agree that your vehicle has tires, suspension, and any other necessary modifications rated for speeds in excess of 140 mph.

The speed limiter can be adjusted from 40 miles per hour up to 140 mph in increments of 5 mph.



RETURN VEHICLE TO STOCK FACTORY SETTINGS

Simply plug the downloader into the OBDII port and wait for it to come to the main menu. In the main menu select **INSTALL DOWNLOADER** and then follow the screen prompts. When the downloader recognizes that there is a tune in the vehicle it will ask if you want to change settings or return to stock, at this point press "N" to return the vehicle to its stock factory settings.



STOP!

INTERNET UPGRADES

Make sure to keep a look out for the latest and greatest program features from Bully Dog. Go to www.bullydog.com and look for the Power Pup Updates link on the home page of our web site. Internet upgrading will require a USB cable, an Internet connection, and Windows XP. Instructions on how to update the Power Pup can be downloaded off of the Power Pup update website.

BEFORE YOU INSTALL:

1. Go to bullydog.com & click the Download Center Link
2. Follow a few quick steps to update this product with the latest software features for your specific truck model and year.

POWER PUP TROUBLESHOOTING

CONDITION	POSSIBLE SOURCES	ACTION
Downloader says Unknown part #	Installation	If the downloader says Unknown Part Number when you try to install go to the downloader center on www.bully-dog.com and get the latest version. If problem continues call tech support.
Downloader doesn't light up when plugged into OBDII	Installation	If the downloader doesn't light up when plugged into the OBDII check the cigarette lighter fuse. More than likely this fuse has blown.
Checksum error during initial install	Installation	Try unplugging the downloader and trying again. If problem continues, go to Bully Dog website and get latest upgrades and try again.
Where is Serial # Located	Location	There is a sticker on the back of the downloader. It is also displayed on the screen when the unit is first plugged in.

For more information on up-to-date troubleshooting guide for the Outlook, go to www.bullydog.com/Product_Updates.php

WARRANTY & DISCLAIMER

REMEMBER, THIS IS A PERFORMANCE PRODUCT, USE AT YOUR OWN RISK.

This product is not intended to be used to break the law.

Do not use this product until you have carefully read the following agreement. This agreement sets forth the terms and conditions for the use of this product. The installation of this product indicates that the buyer has read and understands this agreement and accepts the terms and conditions. Never exceed recommended vehicle or tire top speed ratings.

DISCLAIMER OF LIABILITY

Bully Dog Technologies, LLC. Its distributors, jobbers, and dealers (hereafter Seller) shall be in no way responsible for the product's proper use and service. THE BUYER HERBY WAIVES ALL LIABILITY CLAIMS.

The Buyer acknowledges that he is not relying on the Sellers skill or judgment to select or furnish goods suitable for any particular purpose and that there are no liabilities which extend beyond the description on the face hereof, and the Buyers hereby waives all remedies or liabilities expressed or implied, arising by law or otherwise, (including without any obligation of the Seller with respect fitness, merchantability and consequential damages) or whether or not occasioned by the Seller's negligence.

The Seller disclaims any warranty and expressly disclaims any liability for personal injury or damages. The Buyer acknowledges and agrees that the disclaimer of any liability for personal injury is a material term for this agreement and the Buyer agrees to indemnify the Seller and to hold the Seller harmless from any claim related to the item of the equipment purchased. Under no circumstances will the Seller be liable for any damages or expenses by reason of use or sale of any such equipment.

The Seller assumes no liability regarding the improper installation or misapplication of its products. It is the installer's responsibility to check for proper installation and if in doubt contact the manufacturer.

The Buyer is solely responsible for all warranty issues from the manufacturer.

LIMITATION OF WARRANTY

BULLY DOG TECHNOLOGIES, LLC. (Hereafter "Seller") gives Limited Warranty as to description, quality, merchantability, and fitness for any particular purpose, productiveness, or any other matter of Seller's product sold herewith. The Seller shall be in no way responsible for the products proper use and service and the Buyer hereby waives all rights other than those expressly written herein. This warranty shall not be extended, altered or varied except be a written instrument signed by Seller and Buyer.

The Warranty is Limited to one (1) year from the date of sale and limited solely to the parts contained within the products kit. All products that are in question of Warranty must be returned prepaid to the Seller and must be accompanied by a dated proof of purchase receipt. All Warranty claims are subject to approval by BULLY DOG TECHNOLOGIES, LLC.

Under no circumstances will the Seller be liable for any labor charged or travel time incurred in diagnosis for defects, removal, or reinstallation of this product or any other contingent expenses.

Under no circumstances will the Seller be liable for any damage or expenses incurred by reason of the use or sale of any such equipment.

IN THE EVENT THAT THE BUYER DOES NOT AGREE WITH THIS AGREEMENT: THE BUYER MAY PROMPTLY RETURN THIS PRODUCT, IN A NEW AND UNUSED CONDITION, WITH A DATED PROOF OF PURCHASE TO THE PLACE OF PURCHASE WITHIN TEN (10) DAYS FROM DATE OF PURCHASE FOR A FULL REFUND.

THE INSTALLATION OF THIS PRODUCT INDICATES THAT THE BUYER HAS READ AND UNDERSTANDS THIS AGREEMENT AND ACCEPTS ITS TERMS AND CONDITIONS.

UNLEASH THE POWER

WITH BULLY DOG PERFORMANCE PRODUCTS

Intake Systems



Exhaust Systems



See More at: bullydog.com

Doc.# BD40010 v1.0.0

For a full listing of Diagnostic Trouble Codes go to: www.bullydog.com/DTC.php



BULLY DOG

For Free Technical Support

Call: 866-bullydog (866-285-5936)