



Throttle Pedal Pad

With Pivot Pin

Installation Instructions

Building American Quality... With A Lifetime Warranty!®

TOLL FREE 1-877-469-7440 • tech@lokar.com • www.lokar.com

General Installation Notes:

Please read these instructions completely before beginning the installation. If you have any questions please call. Before beginning the installation, disconnect the negative battery cable and use wheel chocks to block the vehicle's wheels. Make sure the engine, transmission, body and frame are properly grounded.

Refer to Fig. 1 for the component names.

Step 1: Remove the factory throttle pedal pad from the throttle pedal arm. In some cases this can be done with the throttle pedal arm still mounted in the vehicle. Take the factory pivot pin out of the original pedal pad. Remove the pad, pin and spring.

Step 2: In most cases the pin needs to be installed from the right side of the throttle pedal arm, looking at the Pedal Pad from the driver's seat. The spring should have the hook at the bottom. Install the pedal pin through the right side of the pedal back, the spring, the throttle pedal arm, and the left side of the pedal back. Install the E-clip into the groove on the left end of the pin. **Fig. 2**

Step 3: Rotate the hook end of the spring up to the top of the Pedal Pad and snap it over the throttle pedal arm. **Fig. 2** Pivot the Pedal Pad to make sure that it springs back without any binding.

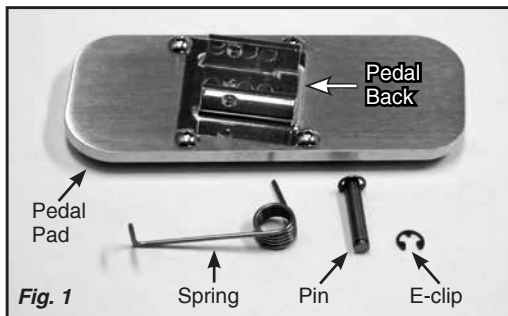


Fig. 1

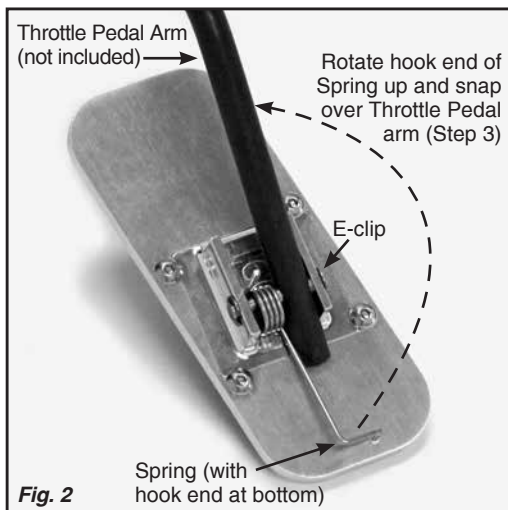


Fig. 2