

Bully Dog Technologies, LLC is a team built on integrity that is dedicated to leading the vehicle performance industry with an uncompromising code of ethics demonstrated in the soundness of its employees, excellent customer service and superior products.

UNLEASH THE POWER **WITH BULLY DOG PERFORMANCE PRODUCTS**

Downloaders



Intake Systems



OutLook Monitor



Custom OutLook Pod

See More at: bulldog.com

Doc.# BD83001

For a full listing of Diagnostic Trouble Codes go to: www.bulldog.com/DTC.php



BULLY DOG

For Free Technical Support

Call: 866-bulldog (866-285-5936)



BULLY DOG

#1 IN PERFORMANCE

INSTALLATION MANUAL



Vehicle Application	Part#
Rapid Flow 4" Aluminized Exhaust 6.6L Duramax LB7 '01-04	183010
Rapid Flow 5" Aluminized Exhaust 6.6L Duramax LB7 '01-04	183020





TROUBLESHOOTING:

If you have questions during the installation of this product, please visit www.bullydog.com/Product_Updates.php.

The latest version of these instructions can be found at the same location. Please review the Troubleshooting section on page 9 before calling technical support to cover most common issues. Technical support is available by calling 866-bullydog (866-285-5936).

TABLE OF CONTENTS


INTRODUCTIONS	PG 2
BILL OF MATERIALS	PG 2
EXHAUST REMOVAL	PG 3
EXHAUST INSTALLATION.....	PAGES 4-8
QUICK LOCATION OVERVIEW.....	PG 4
INSTALLATION STEPS.....	PGS 5-8
TROUBLESHOOTING.....	PG 9
WARRANTY & DISCLAIMER	PG 10

INTRODUCTION

The Bully Dog Rapid Flow Exhaust Systems have been specially designed to allow the lowest mandrel bends in the industry. The lower mandrel bends allow increased air flow which reduces exhaust temperatures, burns more fuel in the combustion chamber adding additional horsepower and fuel economy. This instruction set covers both the 4" Rapid Flow Aluminized Exhaust and the Rapid Flow 5" Aluminized Exhaust. Both systems install exactly the same way. The 5" system is recommended in higher horsepower settings.

Note: This instruction set and the Rapid Flow Exhaust systems included are made exclusively for the 6.6L GM Duramax LB7 vehicles '01-'04.

BULLY DOG'S RULE OF THUMB FOR EXHAUST SIZES

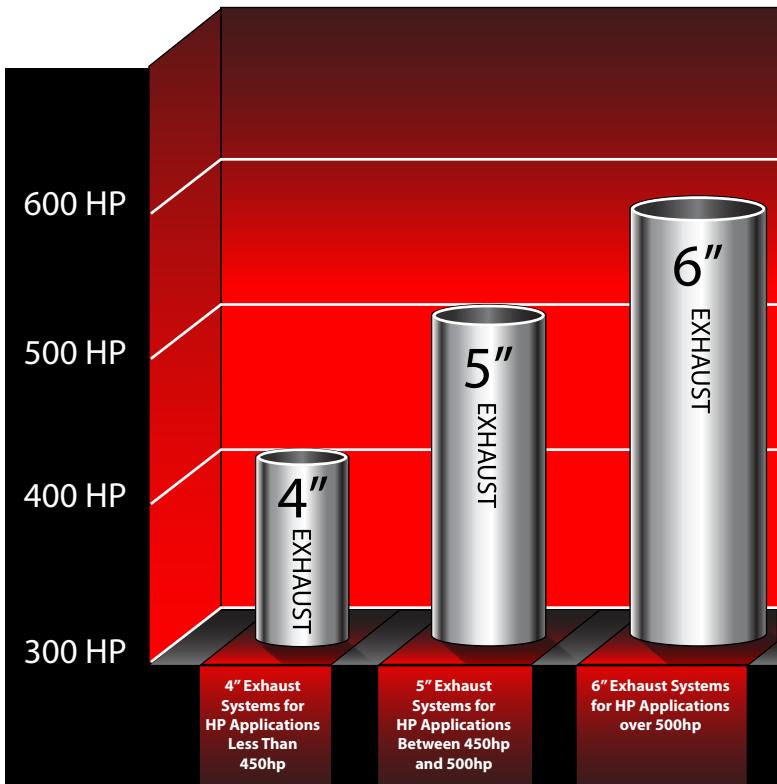


BILL OF MATERIALS

1. Down Pipe
2. Straight Pipe (2 Pieces)
3. Clamps (4 Pieces)
 - A. On Down Pipe
 - B. Cross Member #1
 - C. Cross Member #2
 - D. Behind Muffler
 - E. Tail Pipe
4. Hangers (4 Pieces)
5. Tail Pipe
6. Muffler
7. Cross Member Pipe
8. Tail Pipe Tip

TOOLS NEEDED

- 9/16" Wrench
- Sawzall (Recommended)
- Silicone Spray Lubricant
- 7/16 Deep Socket
- Socket Wrench

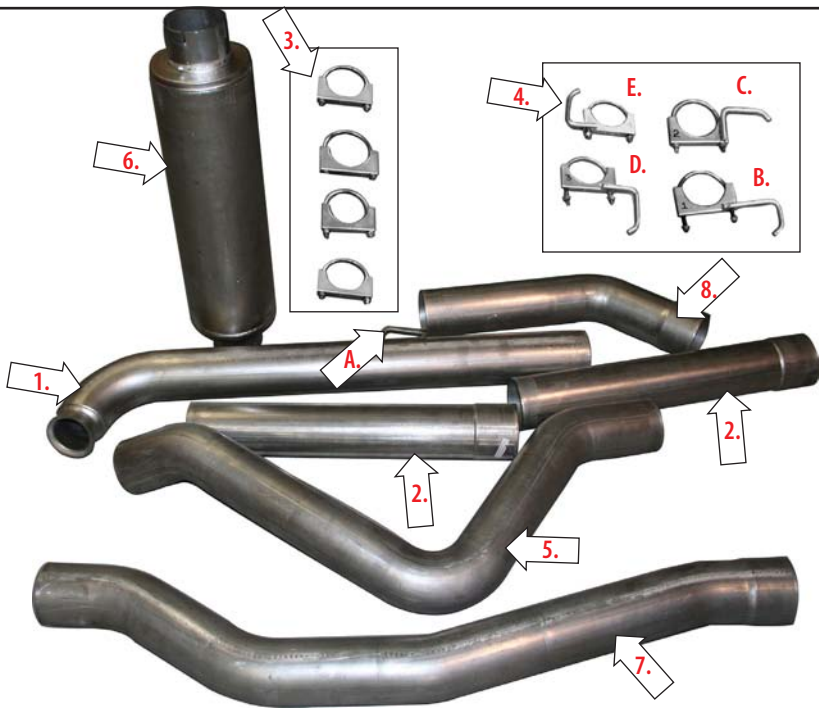

REMOVAL OF STOCK EXHAUST SYSTEM

In these steps you will remove the stock exhaust system.

IMPORTANT: It is illegal in all 50 states to remove the catalytic converter. LB7 vehicles are not generally equipped with a catalytic converter.

WARNING: THE 6.6L DURAMAX IS EQUIPPED WITH A TWO PIECE DOWN PIPE. DO NOT CUT OR REMOVE THE UPPER SECTION.


1. Unbolt the exhaust system starting at the second piece of the down-pipe. You will need a 7/16 deep socket in order to remove it.

2. Use a sawzall to cut the exhaust immediately behind the muffler.

3. To make removing the Hangers an easier process it is recommended that you use a silicone spray lubricant to spray each of the rubber hangers holding the stock exhaust.

4. Remove each piece of the stock exhaust system, including the stock exhaust hangers.


Cut Exhaust after muffler

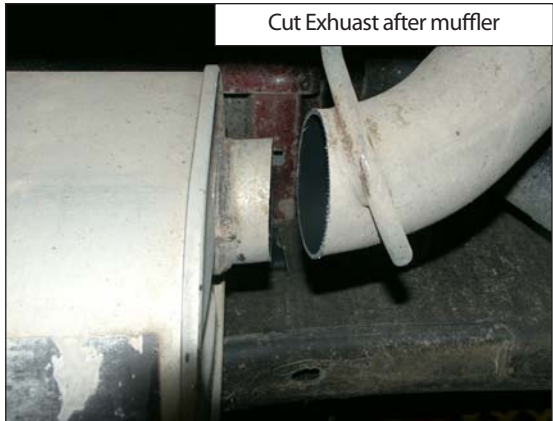


Remove all the necessary exhaust hangers



QUICK OVERVIEW FULL EXHAUST

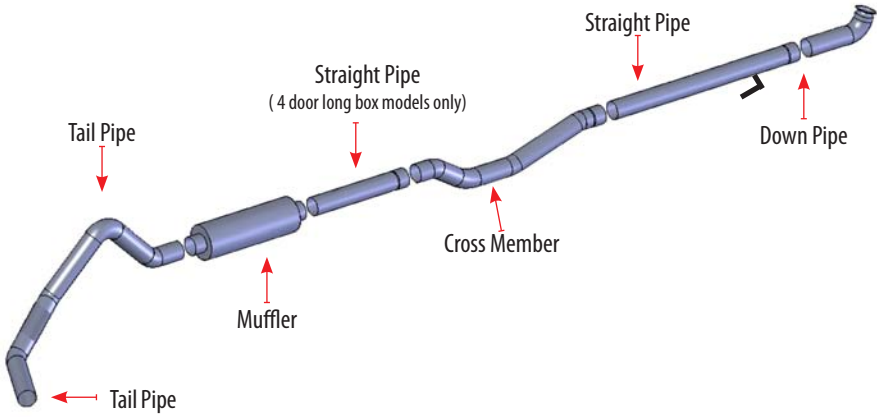


CLAMP AND HANGAR PLACEMENT

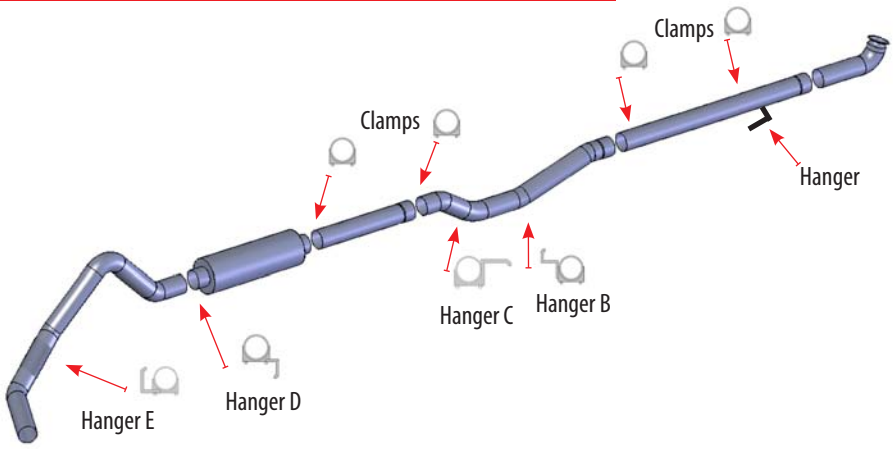

INSTALLATION OF THE BULLY DOG RAPID FLOW EXHAUST SYSTEM

In these steps you will install the Rapid Flow Exhaust System. Bully Dog's Exhaust Systems are one-cut system, meaning that you should only have to cut one pipe or less if installed correctly.



IMPORTANT: Do Not over-tighten clamps. Too much torque will result in deformation of the exhaust. For best results when doing the installation, tighten the clamps enough to hold the exhaust pieces in place, but don't tighten down until the entire exhaust system is installed.

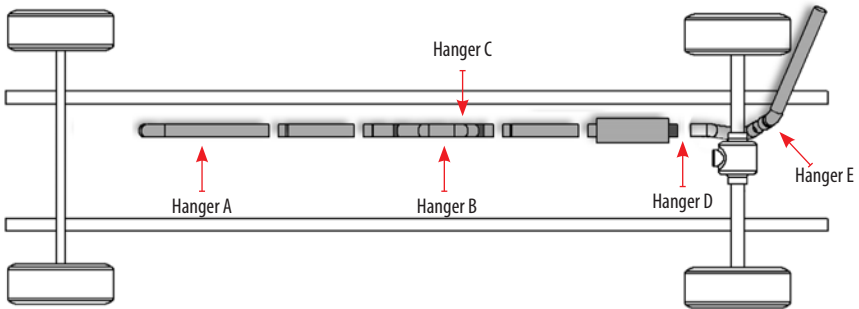

1. It is suggested that before installing the system on the truck the Rapid Flow Exhaust System be laid out on a large flat surface to acknowledge the location of each piece
2. Install the downpipe using the factory turbo clamp. Snug the clamp down so that it will hold the pipe. There is a hanger already welded to the downpipe. You will need to ensure that the hanger is connected correctly before tightening anything down.
3. Place all of the supplied Hangers into their appropriate locations as shown in the above diagram. Hanger B and C will hold the Cross Member Pipe. Hanger D will also serve as a clamp between the Muffler and the Tail Pipe. Hanger E will serve as clamp between the Tail Pipe and the Tail Pipe Tip.
4. Slide a clamp onto the end of the down pipe
5. Fit the Straight Pipe onto the Down Pipe and tighten the Clamp by hand.
6. Slide two of the supplied Clamps onto each end of the Cross Member Pipe
7. Install the Cross Member Pipe to the straight pipe, ensuring that the pipe follows the bend of the trucks' cross member. Tighten the Clamp that is nearest to the Straight Pipe.

NOTE: At this point it is recommended to now start from the rear of the truck and work forward. A second Straight Pipe has been included and if necessary this piece will be the piece that will be cut in this one cut system

8. Install the Passenger Side Tail Pipe over the rear axle. Confirm that the bend of the Tail Pipe is directly over the rear axle. Again hanger D and hanger E will serve as clamps as well as the hangers.
9. Next install a Tail Pipe Tip into the Tail Pipe. Ensure that the desired location will not come in contact with the body of the truck or blacken the paint.
10. Tighten the Clamp by hand between the Tail Pipe Tip and the Tail Pipe. If the Tail Pipe Tip is extending out beyond the bed, do not cut it until the entire exhaust system is in place and tightened down.
11. At this point if you need the extra Straight Pipe cut the Straight Pipe to the desired length. Keep in mind that you need 3 inches of overlap when you cut the pipe. If you don't need the straight pipe simply, install the muffler directly into the Cross Member section. If the straight pipe is not needed, you will have an extra straight pipe and an extra clamp left over when you are finished.
12. Once the entire exhaust system is installed, inspect the system to ensure that no part of the exhaust is in direct contact with the chassis or body; adjustments may be necessary.
13. Return to each of the Clamps and tighten with a 9/16" wrench. Again do not over tighten Clamps. Having any part of the exhaust system in direct contact with any part of the body or chassis will cause the exhaust to rattle.
14. If necessary, you can trim the Tail Pipe Tip with a sawzall to achieve desired fit and look.

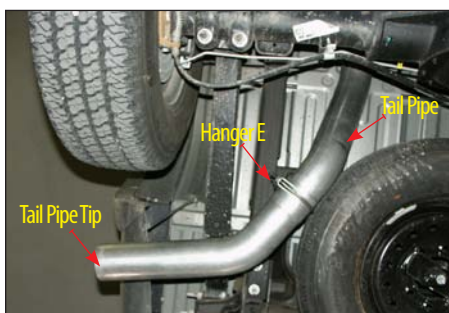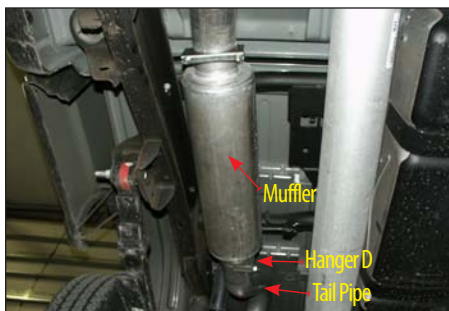



Complete System Installed

15. Polished Bully Dog Tail Tips are available in many sizes and styles that can be bolted or welded to the Tail Pipe Tip to give a finished look.



Complete System Installed with stainless tip



5" Systems

Part Number: 180566

Part Number: 180450

4" Systems

Part Number: 180295

Part Number: 180291



TROUBLESHOOTING/FAQ

CONDITION	POSSIBLE SOURCES	ACTION
Which is better a 4" exhaust or a 5" exhaust system?	General	It really depends on the application. A bigger exhaust system will allow more airflow and lower exhaust temperatures. However too large of an exhaust system without other increases in horsepower will lower back pressure and give the vehicle a sluggish start. Bully Dog recommends a 4" Rapid Flow Exhaust system for horsepower applications under 450 hp. 5" Rapid Flow Exhaust Systems are recommended for applications running between 450 to 550 horsepower.
Can I make my exhaust louder?	Exhaust Sounds	If you are running your vehicle off road, Bully Dog can sell you another straight pipe to put in place of the muffler. The part # is 185017 for 4" systems and 185027 for 5" systems
Exhaust Rattle	Exhaust Sounds	Either one of the clamps is not tight or the exhaust is coming in contact with the chasis or body. Adjust the exhaust to ensure that no contact is made.

WARRANTY & DISCLAIMER

REMEMBER, THIS IS A PERFORMANCE PRODUCT, USE AT YOUR OWN RISK.

This product is not intended to be used to break the law.

Do not use this product until you have carefully read the following agreement. This agreement sets forth the terms and conditions for the use of this product. The installation of this product indicates that the buyer has read and understands this agreement and accepts the terms and conditions. Never exceed recommended vehicle or tire top speed ratings.

DISCLAIMER OF LIABILITY

Bully Dog Technologies, LLC. Its distributors, jobbers, and dealers (hereafter Seller) shall be in no way responsible for the product's proper use and service. THE BUYER HERBY WAIVES ALL LIABILITY CLAIMS.

The Buyer acknowledges that he is not relying on the Sellers skill or judgment to select or furnish goods suitable for any particular purpose and that there are no liabilities which extend beyond the description on the face hereof, and the Buyers hereby waives all remedies or liabilities expressed or implied, arising by law or otherwise, (including without any obligation of the Seller with respect fitness, merchantability and consequential damages) or whether or not occasioned by the Seller's negligence.

The Seller disclaims any warranty and expressly disclaims any liability for personal injury or damages. The Buyer acknowledges and agrees that the disclaimer of any liability for personal injury is a material term for this agreement and the Buyer agrees to indemnify the Seller and to hold the Seller harmless from any claim related to the item of the equipment purchased. Under no circumstances will the Seller be liable for any damages or expenses by reason of use or sale of any such equipment.

The Seller assumes no liability regarding the improper installation or misapplication of its products. It is the installer's responsibility to check for proper installation and if in doubt contact the manufacturer.

The Buyer is solely responsible for all warranty issues from the manufacturer.

LIMITATION OF WARRANTY

BULLY DOG TECHNOLOGIES, LLC. (Hereafter "Seller") gives Limited Warranty as to description, quality, merchantability, and fitness for any particular purpose, productiveness, or any other matter of Seller's product sold herewith. The Seller shall be in no way responsible for the products proper use and service and the Buyer hereby waives all rights other than those expressly written herein. This warranty shall not be extended, altered or varied except be a written instrument signed by Seller and Buyer.

The Warranty is Limited to one (1) year from the date of sale and limited solely to the parts contained within the products kit. All products that are in question of Warranty must be returned prepaid to the Seller and must be accompanied by a dated proof of purchase receipt. All Warranty claims are subject to approval by BULLY DOG TECHNOLOGIES, LLC.

Under no circumstances will the Seller be liable for any labor charged or travel time incurred in diagnosis for defects, removal, or reinstallation of this product or any other contingent expenses.

Under no circumstances will the Seller be liable for any damage or expenses incurred by reason of the use or sale of any such equipment.

IN THE EVENT THAT THE BUYER DOES NOT AGREE WITH THIS AGREEMENT: THE BUYER MAY PROMPTLY RETURN THIS PRODUCT, IN A NEW AND UNUSED CONDITION, WITH A DATED PROOF OF PURCHASE TO THE PLACE OF PURCHASE WITHIN TEN (10) DAYS FROM DATE OF PURCHASE FOR A FULL REFUND.

THE INSTALLATION OF THIS PRODUCT INDICATES THAT THE BUYER HAS READ AND UNDERSTANDS THIS AGREEMENT AND ACCEPTS ITS TERMS AND CONDITIONS.