


OWNER'S MANUAL & SAFETY INSTRUCTIONS

SAVE THIS MANUAL. Read carefully and understand all assembly (if applicable) and operation instructions before using product. Protect yourself and others by reading all safety information, warnings and precautions. Failure to comply with instructions could result in personal injury and/or damage to vehicles or property. Please retain instructions and receipt for future reference.



3,500 LB. CAPACITY WHEEL CRADLES

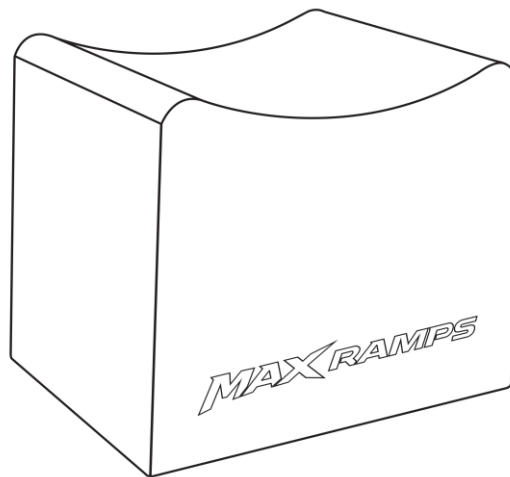

Items #: MRCR-8, MRCR-8W, MRCR-10, MRCR-10W, MRCR-12, MRCR-12W, MRCR-12-SHW, MRCR-14, MRCR-14W

When unpacking, make sure that product is undamaged. If any pieces are missing or damaged, do not use product and call (844) 629-7267 or email support@maxramps.com.

Copyright 2026 by MaxRamps. | MaxRamps.com | Rev. 06012026



OWNER'S MANUAL & SAFETY INSTRUCTIONS



Items #: MRCR-8, MRCR-8W, MRCR-10
MRCR-10W, MRCR-12, MRCR-12W
MRCR-12-SHW, MRCR-14, MRCR-14W



IMPORTANT! General Guidelines

- Read and understand all instructions in this owner's manual. Failure to follow all instructions in this owner's manual may result in serious injury or property damage.
- Always keep these instructions with the product and review before each use. Do not allow persons to use this ramp until they have read this manual and have developed a thorough understanding of how the cradles work.
- Inspect product before each use to ensure all parts and pieces are in safe and working order and free of defects. Do not use if parts are damaged.
- Never modify the product in any way. Modifying product immediately voids warranty.
- Make sure your vehicle is compatible with the wheel cradles by checking axle weight, tire diameter, and tire width. See your product's technical specifications on page 4.
- Product must make FULL CONTACT with the ground. Do not use any of our products as a bridge under any circumstances.
- Use product on dry, level, and hard surfaces only.
- Store product indoors in a climate-controlled environment. Excessive heat or cold may cause damage to stored wheel cradles.
- Do not exceed the maximum load capacity of the product.
- All circumstances cannot be covered in this manual. Use common sense and practice general safety precautions when using this product.
- Parts and/or instructions are subject to change without notice. Please check our website for the most current instructions.



OWNER'S MANUAL & SAFETY INSTRUCTIONS



Items #: MR CR-8, MR CR-8W, MR CR-10
MR CR-10W, MR CR-12, MR CR-12W
MR CR-12-SHW, MR CR-14, MR CR-14W



IMPORTANT! Safety Instructions

- Before wheel cradle usage, inspect and ensure that wheel cradles are free from damage.
- CAUTION! Before wheel cradle usage, ensure other persons and pets are clear of the vehicle and wheel cradles.
- WARNING! Do not exceed the rated weight capacity of 3,500 lb. maximum axle capacity.
- WARNING! Do not exceed the recommended maximum tire diameter and width (see page 4 under Technical Specifications & Packing List).
- Use each pair of wheel cradles at the front or rear; do not use two wheel cradles for one side.
- CAUTION! Use wheel cradles on dry, level, hard surfaces. Do not use if tires are wet.
- Each wheel cradle must make FULL CONTACT with the ground. Do not use the wheel cradle as a bridge under any circumstances.
- CAUTION! Wheel cradles require the use of a hydraulic jack or other vehicle lift equipment (sold separately) for elevating and lowering the vehicle. DO NOT DRIVE onto the wheel cradles.
- Another person who is standing clear of the vehicle should act as a spotter. The spotter is to observe and provide visual assistance when elevating or lowering the vehicle.
- CAUTION! ALWAYS chock the vehicle's tires that are in contact with the ground when using wheel cradles. Exception: When all four vehicle wheels are on wheel cradles.
- WARNING! ALWAYS place the vehicle transmission in Park, or the lowest gear for manual transmissions, and engage the parking brake when using wheel cradles.



OWNER'S MANUAL & SAFETY INSTRUCTIONS



Items #: MRCR-8, MRCR-8W, MRCR-10
MRCR-10W, MRCR-12, MRCR-12W
MRCR-12-SHW, MRCR-14, MRCR-14W

Technical Specifications & Packing List

SKU	MRCR-8	MRCR-8W	MRCR-10
Product Dimensions	15" x 12" x 8" (L x W x H)	15" x 14" x 8" (L x W x H)	15" x 12" x 10" (L x W x H)
Package Includes	2 wheel cradles 2 total pieces	2 wheel cradles 2 total pieces	2 wheel cradles 2 total pieces
Max Tire Width	12"	14"	12"
Tire Diameter	24"-30"		
Load Capacity	1,750 lbs. per wheel cradle, 3,500 lbs. combined per pair		
Material	EPS solid core high-density foam with polyurea coating		

SKU	MRCR-10W	MRCR-12	MRCR-12W
Product Dimensions	15" x 14" x 10" (L x W x H)	15" x 12" x 12" (L x W x H)	15" x 14" x 12" (L x W x H)
Package Includes	2 wheel cradles 2 total pieces	2 wheel cradles 2 total pieces	2 wheel cradles 2 total pieces
Max Tire Width	14"	12"	14"
Tire Diameter	24"-30"		
Load Capacity	1,750 lbs. per wheel cradle, 3,500 lbs. combined per pair		
Material	EPS solid core high-density foam with polyurea coating		

SKU	MRCR-12-SHW	MRCR-14	MRCR-14W
Product Dimensions	15" x 12" x 12" (L x W x H)	15" x 12" x 14" (L x W x H)	15" x 14" x 14" (L x W x H)
Package Includes	2 wheel cradles 2 total pieces	2 wheel cradles 2 total pieces	2 wheel cradles 2 total pieces
Max Tire Width	12"	12"	14"
Tire Diameter	24"-30"		
Load Capacity	1,750 lbs. per wheel cradle, 3,500 lbs. combined per pair		
Material	EPS solid core high-density foam with polyurea coating		

OWNER'S MANUAL & SAFETY INSTRUCTIONS



Items #: MRCR-8, MRCR-8W, MRCR-10
MRCR-10W, MRCR-12, MRCR-12W
MRCR-12-SHW, MRCR-14, MRCR-14W



IMPORTANT! Use & Care

- The wheel cradles are designed for use with passenger vehicles and light trucks.
- The wheel cradles are NOT intended for commercial heavy-duty trucks.
- The wheel cradles are NOT intended for toolboxes, carts or any non-passenger vehicle wheels/tires.
- Use the correct wheel cradles for the task. Ensure that the vehicle's tire diameter and width are within the technical specifications on page 4.
- DO NOT modify the wheel cradles in any way. Modifying product immediately voids warranty.
- Store product indoors in a climate-controlled environment. Excessive heat or cold may cause damage to stored wheel cradles.
- DO NOT throw or drop wheel cradles onto the ground.
- Wheel cradles may be washed with mild soap and water. Be sure to fully rinse soap off the wheel cradles and dry fully before next use.



OWNER'S MANUAL & SAFETY INSTRUCTIONS



Items #: MRCR-8, MRCR-8W, MRCR-10
MRCR-10W, MRCR-12, MRCR-12W
MRCR-12-SHW, MRCR-14, MRCR-14W



IMPORTANT! Set Up & Operation Instructions

1. Inspect the wheel cradles to ensure there is no damage BEFORE EVERY USE. Ensure all persons not involved in the process are clear of the wheel cradles.
2. Park the vehicle on level ground and place the vehicle transmission in Park, or the lowest gear for manual transmissions. Engage the parking brake.
3. When elevating the front of your vehicle, place wheel chocks behind the rear tires. When elevating the rear of your vehicle, place wheel chocks in front of the front tires.
4. Use a hydraulic jack or other vehicle lift equipment (sold separately) to carefully elevate the vehicle high enough to place the wheel cradles under the tire. Another person, standing clear of the vehicle, should provide visual assistance during this process.
NOTE: Always refer to the owner's manual accompanying the hydraulic jack or other vehicle lift equipment for proper usage.
5. Place the wheel cradles in a position where the vehicle's tires rest evenly in the cradle.
6. When the wheel cradle is placed in its proper position underneath the vehicle tire, carefully lower the vehicle until the tire rests in the wheel cradle. Repeat steps 4-5 as needed.
7. Inspect the perimeter of the vehicle to ensure that the vehicle is level, secure, and stable prior to engaging in any further activity.
8. In preparation for removing the vehicle off the wheel cradles, verify the parking brake is engaged.
9. When removing the vehicle off the wheel cradles, use a hydraulic jack or other vehicle lift equipment to elevate the vehicle high enough in order to remove the wheel cradle.
WARNING! NEVER DRIVE OFF THE WHEEL CRADLES.
10. Chock your vehicle's tires after they make contact with the ground again.



OWNER'S MANUAL & SAFETY INSTRUCTIONS



Items #: MRCR-8, MRCR-8W, MRCR-10
MRCR-10W, MRCR-12, MRCR-12W
MRCR-12-SHW, MRCR-14, MRCR-14W

Limited Warranty and Disclaimer of Liability

Subject to the terms below, MaxRamps ("Manufacturer") warrants that the Product conforms to Manufacturer's published specifications and is free from defects in materials and workmanship under normal use. NO OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE MADE.

MaxRamps products purchased from an authorized dealer or directly from MaxRamps are backed by a one-year warranty. This warranty is limited to solely the repair or replacement of manufacturer defects and does not cover damage to a car, personal injury, labor, or any other damage or injury. MaxRamps is not responsible for damage or injuries caused by improper or unintended use. MaxRamps shall not be responsible for consequential damage or costs. Proof of purchase is required for all warranty claims. This warranty is non-transferable and applies only to the original purchaser (other than for resale).

EXCLUSIONS FROM WARRANTY: 1) Misuse, abuse, neglect, accident, or use beyond rated capacity; 2) Improper or unintended use; 3) Cuts, gouges, abrasions or surface wear caused by tires, tools, heat, or improper contact; 4) Extreme chemicals; 5) Improper storage; 6) Cosmetic blemishes or minor surface irregularities that do not affect functionality; 7) Normal wear and tear; 8) Unauthorized modifications or repairs; 9) Damage caused by natural disasters; 10) Incidental, indirect, or consequential damages, including vehicle damage, personal injury, loss of time, or other expenses.

PURCHASER'S RESPONSIBILITY: 1) Keep and provide proof of purchase for all warranty claims; 2) Inspect product upon receipt and inform of shortages within 10 days of delivery or defects within 10 days of discovery; 3) Use and maintain the product per the owner's manual; 4) Submit claims in writing within the above timeframes. Submissions not within the above timeframes are deemed waived.

MaxRamps continues to conduct research and development on products whereby specifications are subject to change without notice.

QUESTIONS? Please contact MaxRamps at (844) 629-7267 or email support@maxramps.com.



WARNING: This product contains chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information: www.P65Warnings.ca.gov

