



2501 Ludelle Street
Fort Worth, Texas 76105
817-244-6212 Phone • 817-244-4024 Fax
888-350-6588 Sales • 800-423-9696 Tech
E-mail: painless@painlessperformance.com
Web: www.painlessperformance.com


30812

Duraspark II Ignition Harness

This Duraspark II Ignition Harness is designed to connect the components in Ford electronic ignition systems using the "Blue Strain Relief" ignition module. It can be used with both the large cap and small cap early electronic distributors.

1. Disconnect the negative battery cable.
2. Mount the ignition module either on the firewall or inner fender. Connect the three pin and four pin ignition module connectors to the module. Note: This harness has ONLY been tested for the "Blue" and "Yellow" ignition modules.
3. Route the coil connector and distributor connector to their appropriate components, using caution not to run it over an exhaust header or manifold. Be sure to leave enough slack in the harness for engine torque. Slide the coil connector firmly onto the coil and plug-in the distributor connector.
4. Use the diagram on the next page as a guide to make the following connections. Connect the Red wire to the ignition hot side of the ballast resistor. Connect the Red/Green wire to the output side of the ballast resistor.
5. Next connect the white wire to the "I" terminal on the starter solenoid. Note: If the solenoid being used does not have an "I" terminal, the white wire must be connected to the "S" terminal of the solenoid.
6. The yellow wire is the signal for a tachometer. If one is not being used, tape-up and stow this wire.
7. Reconnect the negative battery cable and test start the vehicle.

Duraspark II Ignition Diagram

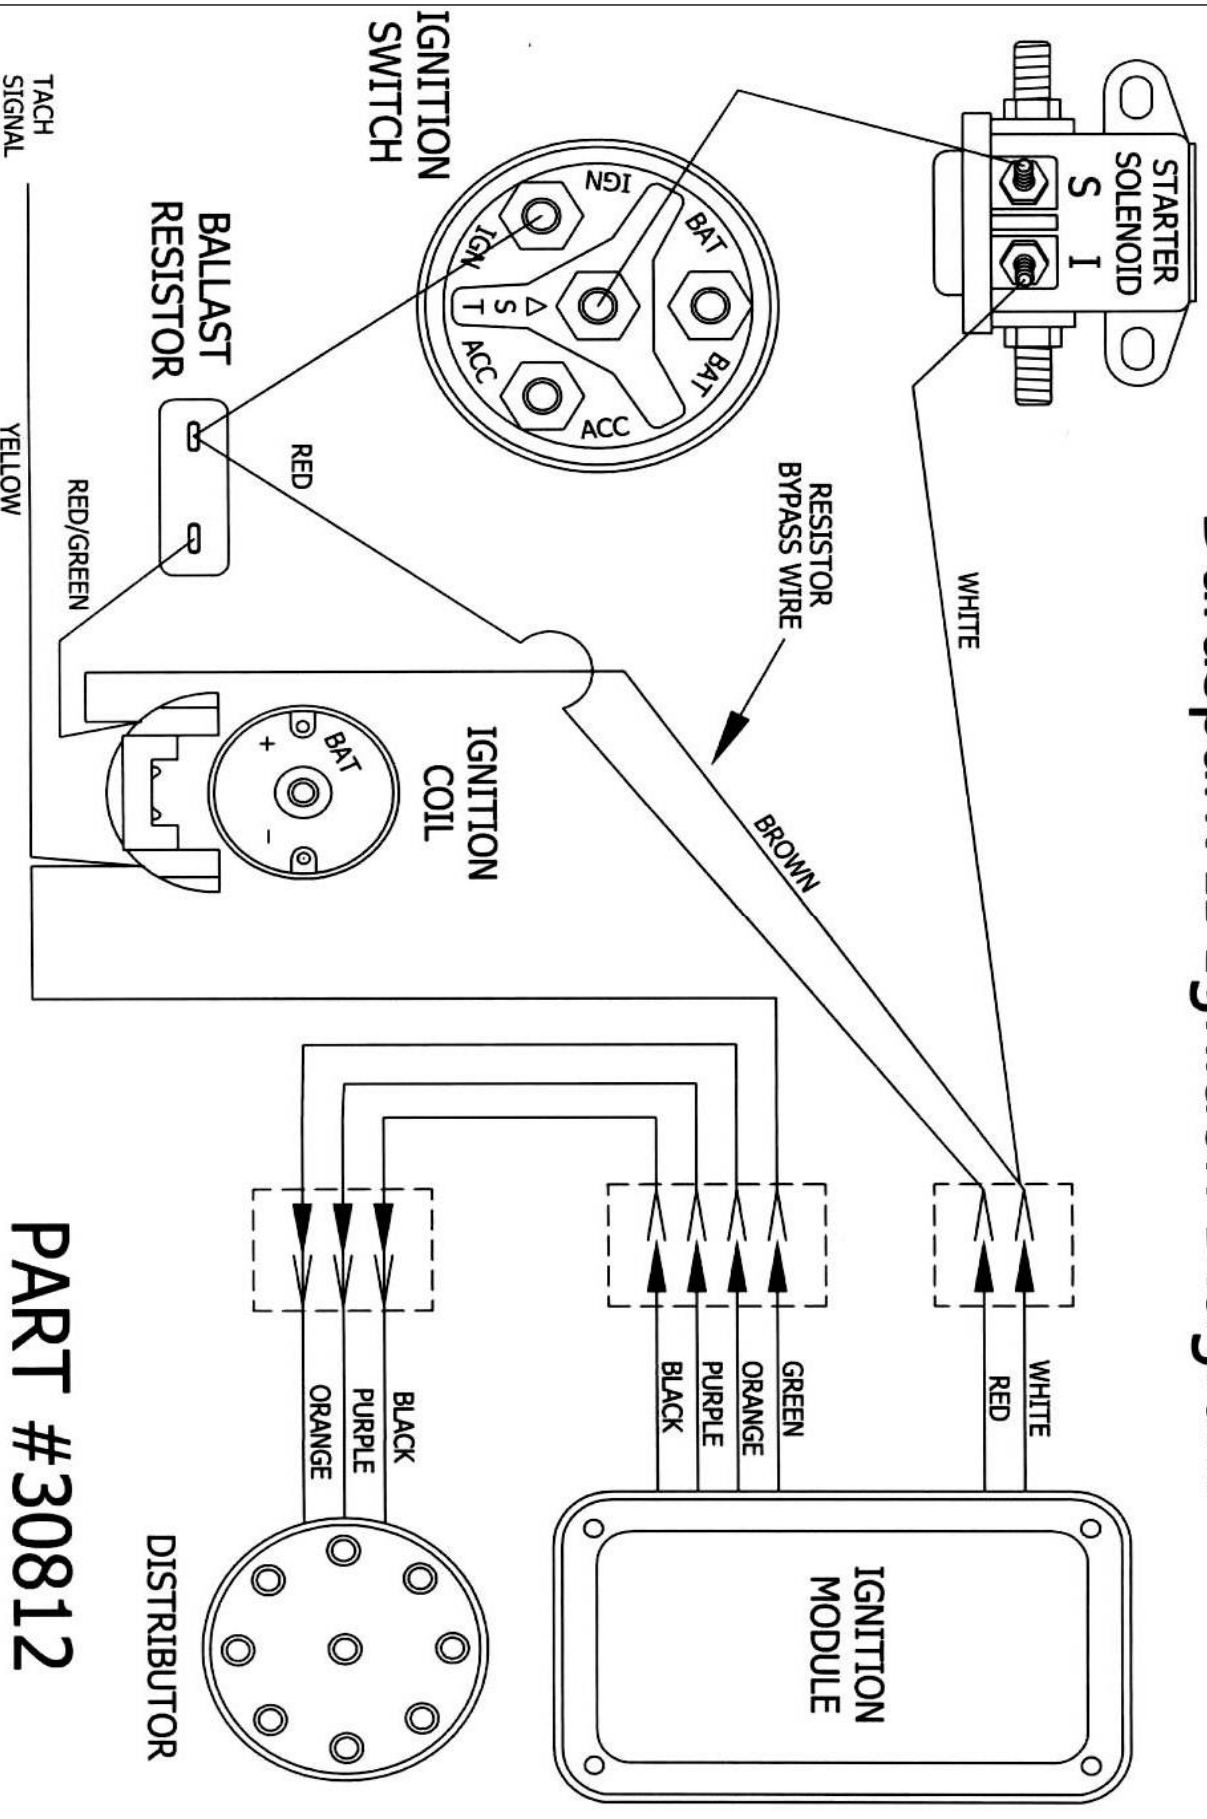

PART #30812

Painless Performance Limited Warranty and Return Policy

Chassis harnesses and fuel injection harnesses are covered under a lifetime warranty. All other products manufactured and/or sold by Painless Performance are warranted to the original purchaser to be free from defects in material and workmanship under normal use. Painless Performance will repair or replace defective products without charge during the first 12 months from the purchase date. No products will be considered for warranty without a copy of the purchase receipt showing the sellers name, address and date of purchase. You must return the product to the dealer you purchased it from to initiate warranty procedures.