



2501 Ludelle Street
Fort Worth, Texas 76105
817-244-6212 Phone • 817-244-4024 Fax
888-350-6588 Sales • 800-423-9696 Tech
E-mail: painless@painlessperformance.com
Web: www.painlessperformance.com

30823

High Beam Headlight Relay Installation Instructions

1. **Removing the Drivers Side Headlight:**
Remove the two headlight retainer clips located behind the radiator support. Pull the retainer clips up to remove. Slightly lift and pull headlight assembly to remove.
Illustration #1
2. **Mounting the Relay and Fuse holder:**
Use the two self-tapping screws to mount the relay and fuse holder to the radiator support behind the head light assembly. While mounting the relay, place the black ground wire ring terminal under the screw used for mounting the relay. This will provide a solid ground. **Illustration #2**
3. **Routing the Headlight Wires:**
Take two Red T-Taps and attach them to the yellow and purple wires at the back side of the headlight. To attach the T-Taps, use pliers to squeeze them together over the wire until they snap closed. Plug the male Tap on the purple and yellow wires from the relay into the female
T-Tap on the purple and yellow wires from the headlight. **Illustration #3**
4. **Connecting the Power Source:**
Locate the brown wire at the park light in the headlight assembly. Use one Red T-Tap and attach it to the brown wire from the park light as described in step 3. Plug the male Tap on the brown wire from the relay into the T-Tap on the brown wire from the park light.
Illustration #4

Test for proper operation.

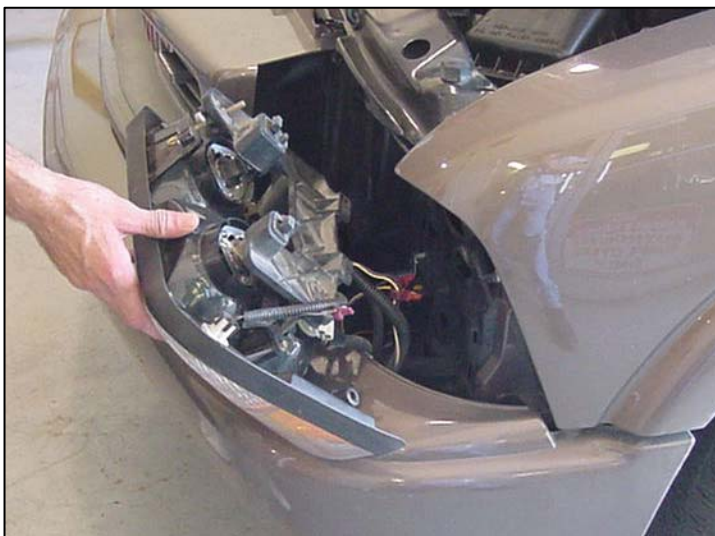


Illustration #1 Head Light Retainer Clip & Head Light Removal



Illustration #2 Mounting the Relay & Fuse

Illustration #3 Installing the T-Taps

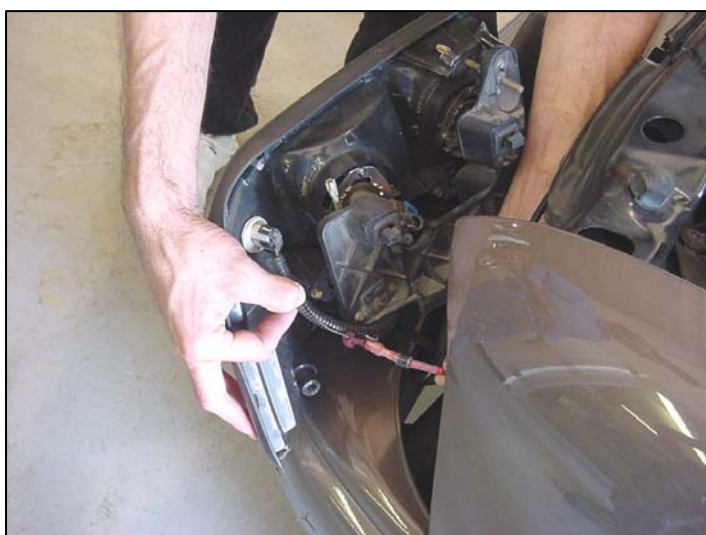


Illustration #4 Connecting the Power Source

Painless Performance Limited Warranty and Return Policy

Chassis harnesses and fuel injection harnesses are covered under a lifetime warranty. All other products manufactured and/or sold by Painless Performance are warranted to the original purchaser to be free from defects in material and workmanship under normal use. Painless Performance will repair or replace defective products without charge during the first 12 months from the purchase date. No products will be considered for warranty without a copy of the purchase receipt showing the sellers name, address and date of purchase. You must return the product to the dealer you purchased it from to initiate warranty procedures.

Copyright © 2007 by Perfect Performance Products, LLC